

[Manuals.plus](#) /

› [Sylvania](#) /

› Sylvania ECO LED PAR38 Non-Dimmable Light Bulb User Manual (Model 40881)

Sylvania 40881

Sylvania ECO LED PAR38 Non-Dimmable Light Bulb User Manual

Model: 40881 | Brand: LEDVANCE (Sylvania)

1. SAFETY INFORMATION

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- **Electrical Safety:** Always turn off power to the fixture at the circuit breaker before installing or removing the bulb.
- **Non-Dimmable:** This bulb is explicitly designed as non-dimmable. Do not use with dimmer switches, as this may damage the bulb or the dimmer.
- **Indoor Use:** This product is intended for indoor use only.
- **Operating Temperature:** Ensure the operating environment is within the recommended temperature range for LED bulbs.
- **Disposal:** Dispose of used bulbs according to local regulations.

2. PRODUCT OVERVIEW

The Sylvania ECO LED PAR38 Light Bulb (Model 40881) is an energy-efficient lighting solution designed to replace traditional 90-watt incandescent PAR38 bulbs. It provides 1000 lumens of 3000K warm white light, offering significant energy savings and a long operational lifespan.

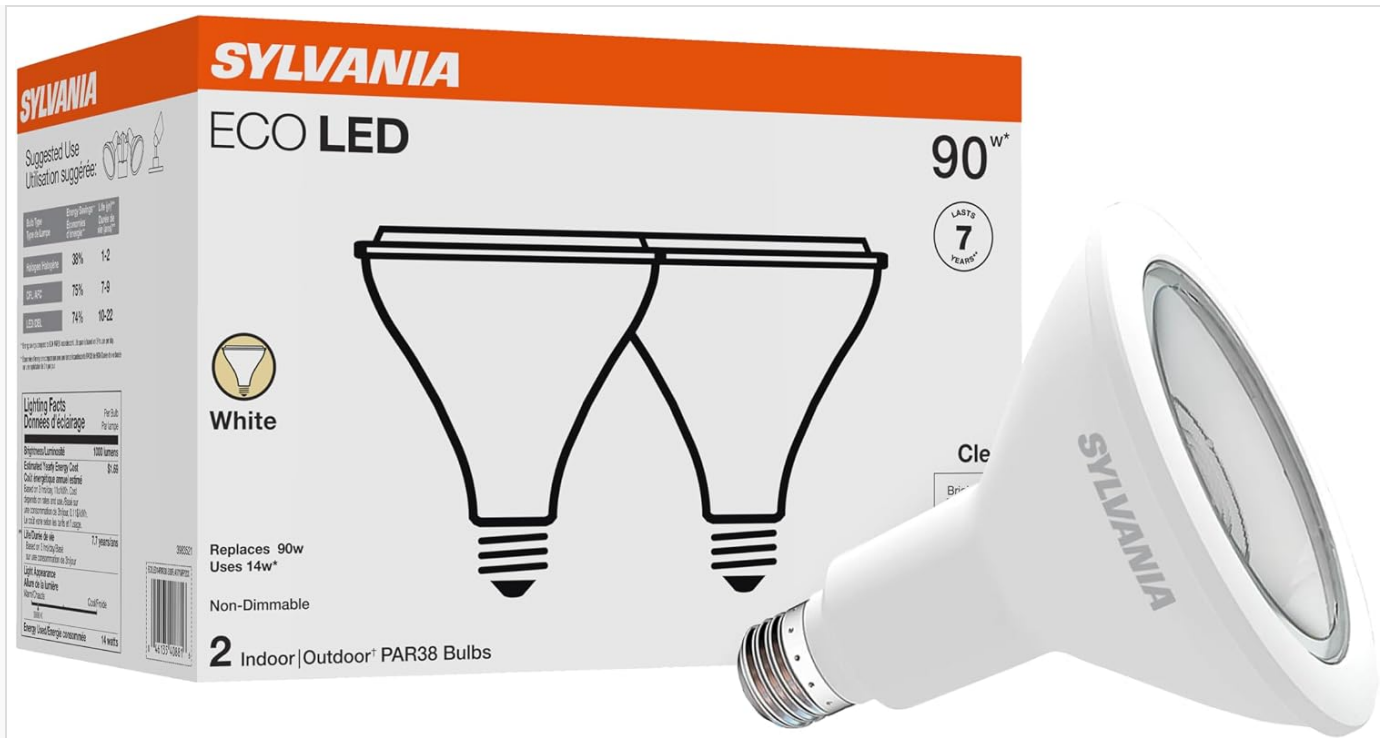


Image 2.1: Sylvania ECO LED PAR38 Light Bulb (Model 40881) with its packaging.



Image 2.2: Front view of the Sylvania ECO LED PAR38 Light Bulb, showing the E26 medium base.

3. SETUP AND INSTALLATION

Installation of the Sylvania ECO LED PAR38 bulb is straightforward and similar to traditional incandescent bulbs.

1. **Power Off:** Ensure the power to the light fixture is completely turned off at the circuit breaker before beginning installation.
2. **Remove Old Bulb:** Carefully unscrew and remove the existing light bulb from the fixture. Allow it to cool if it has been recently in use.
3. **Install New Bulb:** Screw the Sylvania ECO LED PAR38 bulb into the E26 medium base socket. Turn clockwise until it is finger-tight. Do not overtighten.
4. **Restore Power:** Turn the power back on at the circuit breaker.
5. **Test:** Turn on the light switch to confirm the bulb is functioning correctly.

4. OPERATING INSTRUCTIONS

The Sylvania ECO LED PAR38 bulb operates like a standard light bulb.

- **Turning On/Off:** Use the standard wall switch connected to the fixture to turn the light bulb on or off.
- **Non-Dimmable:** This bulb is non-dimmable. It will operate at full brightness when power is supplied. Attempting to use it with a dimmer switch may cause flickering, damage to the bulb, or damage to the dimmer.

Your browser does not support the video tag.

Video 4.1: This video from LEDVANCE LLC provides a visual guide to different color temperatures (CCT), demonstrating how 3000K warm white light appears in a home setting.



Image 4.1: Visual representation of various color temperatures, from warm white (2700K) to daylight (6500K). This Sylvania bulb provides 3000K warm white light.

5. MAINTENANCE

LED bulbs require minimal maintenance. Follow these guidelines to ensure optimal performance and longevity:

- **Cleaning:** Before cleaning, ensure the power is off and the bulb is cool. Wipe the bulb with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- **Replacement:** When the bulb reaches the end of its lifespan, turn off the power, allow it to cool, and replace it with a new Sylvania ECO LED PAR38 bulb (Model 40881) or an equivalent non-dimmable LED bulb.

6. TROUBLESHOOTING

If you encounter issues with your Sylvania ECO LED PAR38 bulb, refer to the following common troubleshooting steps:

- **Bulb Not Lighting Up:**
 - Check if the power switch is in the "ON" position.
 - Verify that the circuit breaker for the fixture is not tripped.
 - Ensure the bulb is screwed in securely into the socket.
 - Test the bulb in another working fixture to confirm if the bulb or the fixture is faulty.
- **Flickering:**
 - Confirm that the bulb is not connected to a dimmer switch. This bulb is non-dimmable and flickering is a common symptom when used with a dimmer.
 - Ensure the bulb is securely tightened in the socket.
- **Reduced Brightness:**
 - Check for any obstructions or dirt on the bulb's surface.
 - Ensure the bulb is receiving adequate voltage (120V).

If issues persist after following these steps, please contact Sylvania customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Sylvania ECO LED PAR38 Light Bulb (Model 40881):

Feature	Specification
Brand	LEDVANCE (Sylvania)
Model Number	40881
Light Type	LED
Bulb Shape Size	PAR38
Bulb Base	E26 Medium
Wattage	14 Watts
Incandescent Equivalent	90 Watts
Brightness	1000 Lumens
Color Temperature	3000 Kelvin (Warm White)
Dimmable	No (Non-Dimmable)
Voltage	120 Volts
Average Life	7700 Hours (approx. 7 years based on 3 hours/day)

Indoor/Outdoor Usage	Indoor
Product Dimensions	4.76"W x 5.06"H
Material	Plastic
Special Features	Energy Efficient, Flicker-Free, Frosted, High Efficiency, Instant On



Image 7.1: Detailed dimensions of the Sylvania ECO LED PAR38 Light Bulb.

8. WARRANTY AND SUPPORT

This Sylvania ECO LED PAR38 Light Bulb (Model 40881) comes with a manufacturer's warranty.

- **Warranty:** The product is covered by a 1-year warranty. Please refer to the product packaging or the official LEDVANCE (Sylvania) website for full warranty terms and conditions.
- **Customer Support:** For technical assistance, warranty claims, or further inquiries, please visit the official LEDVANCE website or contact their customer service department.

Your browser does not support the video tag.

Video 8.1: An official video from LEDVANCE LLC highlighting the long-lasting nature of Sylvania LED lighting products, emphasizing their 10-year lifetime portfolio.

Your browser does not support the video tag.

Video 8.2: An official video from LEDVANCE LLC showcasing their commitment to advancing lighting technology and innovation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08HSD2QVF>

More documents and user manuals: <https://manuals.plus/>