

Ninja BN800EU

Ninja 3-in-1 Food Processor and Blender

MODEL: BN800EU

Instruction Manual

[Included](#) [Setup](#) [Operation](#) [Safety Information](#) [What's](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty &](#)
[Support](#)

1. Important Safety Information

Please read all instructions carefully before using your Ninja 3-in-1 Food Processor and Blender. Failure to follow these safety instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the power outlet before assembling, disassembling, or cleaning.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Keep hands and utensils out of the container while blending or processing to reduce the risk of severe injury to persons or damage to the blender/food processor. A scraper may be used but only when the appliance is not running.
- Blades are sharp. Handle with extreme care when assembling, disassembling, or cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for assistance.
- Ensure the lid is securely locked in place before operating the appliance.
- Do not process hot liquids in the single-serve cup or food processor bowl as pressure buildup may result in injury. Allow hot ingredients to cool before processing.
- This appliance is intended for household use only. Do not use outdoors.

2. What's Included

Your Ninja 3-in-1 Food Processor and Blender comes with the following components:

- 1200W Motor Base
- 2.1 Litre Blender Pitcher with Lid
- 1.8 Litre Food Processor Bowl with Lid and Feed Chute
- 700ml Single-Serve Cup with Spout Lid
- Stacked Blade Assembly (for Blender Pitcher)
- Chopping Blade (for Food Processor Bowl)
- Dough Tool (for Food Processor Bowl)
- Reversible Slicing/Shredding Disc
- Pro Extractor Blades (for Single-Serve Cup)
- Recipe Guide



Image: All components of the Ninja 3-in-1 Food Processor and Blender, including the motor base, blender pitcher, food processor bowl, single-serve cup, and various blades and discs.

Video: An overview of the Ninja 3-in-1 Food Processor and Blender components, demonstrating the various parts included in the package.

3. Setup

Before first use, wash all containers, lids, and blade assemblies in warm, soapy water. Rinse thoroughly and dry. The motor base should be wiped clean with a damp cloth.

3.1 Assembling the Blender Pitcher

1. Place the motor base on a clean, dry, level surface.
2. Carefully place the Stacked Blade Assembly onto the drive gear inside the 2.1L blender pitcher.
3. Add your ingredients to the pitcher. Do not exceed the MAX FILL line.
4. Place the lid onto the pitcher and press down firmly until it clicks into place. Ensure the pour spout is closed.
5. Align the arrow on the pitcher with the arrow on the motor base, then lower the pitcher onto the base and twist clockwise until it locks.

3.2 Assembling the Food Processor Bowl

1. Place the motor base on a clean, dry, level surface.
2. Align the arrow on the 1.8L food processor bowl with the arrow on the motor base, then lower the bowl onto the base and twist clockwise until it locks.
3. For chopping or mixing, carefully place the Chopping Blade or Dough Tool onto the drive gear inside the bowl.
4. For slicing or shredding, place the Slicing/Shredding Disc onto the disc spindle, then place the disc spindle onto the drive gear. Ensure the desired side (slice or shred) is facing up.
5. Add your ingredients to the bowl. Do not exceed the MAX FILL line.
6. Place the lid onto the bowl and press down firmly until it clicks into place. Ensure the feed chute is properly aligned.

3.3 Assembling the Single-Serve Cup

1. Place the motor base on a clean, dry, level surface.
2. Add your ingredients to the 700ml single-serve cup. Do not exceed the MAX FILL line.
3. Carefully screw the Pro Extractor Blades onto the top of the cup until a tight seal is formed.
4. Invert the cup and align the tabs on the cup with the slots on the motor base. Lower the cup onto the base and twist clockwise until it locks.

4. Operating Instructions

Once assembled and locked onto the motor base, plug the appliance into a power outlet. The power button will illuminate, indicating the unit is ready for use.



Image: The control panel features Auto-iQ programs and manual speed options.

4.1 Auto-iQ Programs

The Auto-iQ programs are intelligent, pre-set programs that combine unique pulsing, pausing, and blending patterns to deliver optimal results for specific tasks. Simply select the desired program, and the appliance will do the work for you.

- **BLEND:** Ideal for smoothies, sauces, and light blending.
- **MAX BLEND:** Designed for tougher ingredients, frozen fruits, and ice crushing.
- **CHOP:** For precise chopping of vegetables, nuts, and herbs.
- **PUREE:** Creates smooth purees, dips, and baby food.
- **MIX:** For doughs, batters, and combining ingredients.



Image: Adding ingredients to the blender pitcher for processing.

4.2 Manual Speed Settings

For more control, you can use the manual speed settings:

- **LOW:** For gentle mixing and combining.
- **MED:** For general blending and processing.
- **HIGH:** For maximum power and speed.
- **PULSE:** For short bursts of power, ideal for controlled chopping or breaking down ingredients.



Image: Using the food processor bowl to chop nuts.



Image: Slicing carrots using the reversible disc in the food processor.



Image: Preparing a single-serve drink in the personal blending cup.



Image: Activating the blending process for a single-serve beverage.

5. Maintenance and Cleaning

Proper maintenance ensures the longevity and optimal performance of your Ninja appliance.

5.1 Cleaning

- **Motor Base:** Unplug the motor base before cleaning. Wipe it clean with a damp cloth. Do not immerse in water.
- **Containers, Lids, and Blade Assemblies:** All removable parts are dishwasher safe. You can also wash them by hand in warm, soapy water. Use caution when handling blades as they are very sharp.
- For thorough cleaning, you can run a self-cleaning cycle: Fill the blender pitcher with warm water and a drop of dish soap. Secure the lid and run the BLEND program for 30-60 seconds. Rinse thoroughly.

5.2 Storage

Store the appliance upright with the lid securely attached to the container. Do not stack other items on top of the containers. Store blade assemblies safely to prevent accidental contact.

6. Troubleshooting

If you encounter issues with your Ninja 3-in-1 Food Processor and Blender, refer to the following common solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; container/lid not properly assembled.	Ensure the power cord is securely plugged into an outlet. Verify that the container is locked onto the motor base and the lid is securely closed.
Ingredients are not blending/chopping.	Too many ingredients; not enough liquid; ingredients are too large.	Reduce the amount of ingredients. Add more liquid if blending. Cut ingredients into smaller pieces. Use the PULSE function to break down larger items.
Motor stops during operation.	Overheating due to overload.	Unplug the appliance and allow it to cool for at least 15 minutes. Remove some ingredients to reduce the load.
Loud noise during operation.	Normal for powerful motors; loose components.	Some noise is normal. Ensure all components are securely assembled. If the noise is unusual or excessive, discontinue use and contact support.

If the problem persists after trying these solutions, please contact Ninja customer support.

7. Specifications

Feature	Detail
Brand	Ninja
Model Number	BN800EU
Color	Black/Silver
Power	1200 Watts
Voltage	240V
Blender Pitcher Capacity	2.1 Liters
Food Processor Bowl Capacity	1.8 Liters
Single-Serve Cup Capacity	700 ml
Product Dimensions (L x W x H)	19 x 25.5 x 48.01 cm
Item Weight	4.34 Kilograms
Material	Aluminum (base), Plastic (containers)
Number of Speeds	3 (Low, Med, High) + Pulse

Feature	Detail
Special Features	Auto-iQ Technology, Dishwasher-safe parts, Interchangeable stainless steel blades
Recommended Uses	Chopping, Liquefying, Grinding, Mixing

8. Warranty and Support

Your Ninja 3-in-1 Food Processor and Blender is covered by a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, replacement parts, or warranty claims, please visit the official Ninja website or contact their customer service department. Contact information can typically be found in the product packaging or on the manufacturer's website.
