

[Manuals.plus](#) /

> [daylight24](#) /

> daylight24 Natural Daylight LED Floor Lamp (Model 402082-15) Instruction Manual

daylight24 402082-15

daylight24 Natural Daylight LED Floor Lamp (Model 402082-15) Instruction Manual

Model: 402082-15 | Brand: daylight24

INTRODUCTION

This manual provides essential information for the safe and efficient use of your daylight24 Natural Daylight LED Floor Lamp, Model 402082-15. Please read these instructions thoroughly before assembly and operation, and retain them for future reference.

The daylight24 Natural Daylight LED Floor Lamp is designed to provide 4000 lumens of bright, natural daylight, enhancing contrast and clarity for various tasks. It features a 4-way switch for brightness control and an adjustable neck for directional lighting, all supported by a stable, weighted base.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this lamp.
- To reduce the risk of electric shock, always unplug the lamp from the electrical outlet before cleaning or performing any maintenance.
- Do not use with an extension cord unless the plug can be fully inserted. Do not alter the plug.
- Do not operate the lamp if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep the cord away from heated surfaces.
- Do not use outdoors. This lamp is designed for indoor use only.
- Do not immerse the lamp in water or any other liquid.
- Use only the specified wattage and type of bulb (integrated LED).

- Always place the lamp on a firm, level surface to prevent tipping.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Lamp Head with Adjustable Gooseneck
- Upper Pole Section
- Lower Pole Section
- Weighted Base
- Power Cord (attached to lamp)

SETUP AND ASSEMBLY

1. **Step 1: Attach the Weighted Base.** Carefully screw the lower pole section into the weighted base until secure. Ensure the power cord passes freely through the center of the base.



Figure 1: Weighted Base Connection. This image shows the sturdy, brushed nickel weighted base of the floor lamp, highlighting the secure connection point for the lamp pole.

- Step 2: Connect Pole Sections.** Screw the upper pole section into the lower pole section. Gently pull any excess power cord from the base to ensure a snug fit between the pole sections.
- Step 3: Attach Lamp Head.** Screw the lamp head with the adjustable gooseneck onto the top of the upper pole section. Ensure all connections are tight but do not overtighten.



Figure 2: Lamp Head Assembly. This image displays the lamp head, featuring the flexible gooseneck and the integrated LED panel, ready for use.

- Step 4: Position the Lamp.** Place the assembled lamp on a stable, flat surface.
- Step 5: Plug In.** Insert the power cord plug into a standard electrical outlet.

OPERATING INSTRUCTIONS

Your daylight24 LED Floor Lamp is designed for ease of use.

- Power On/Off and Brightness Control:** The lamp features a 4-way rotary switch located on the lamp shade. Rotate the switch to cycle through the brightness settings:

- First turn: High brightness
 - Second turn: Medium brightness
 - Third turn: Low brightness
 - Fourth turn: Off
- **Adjusting the Light Direction:** The lamp is equipped with an adjustable gooseneck. Gently bend the gooseneck to direct the light precisely where needed for your task.

CARE AND MAINTENANCE

- **Cleaning:** Always unplug the lamp before cleaning. Use a soft, dry cloth to wipe down the lamp. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- **LED Light Source:** The LED light source is integrated and not user-replaceable. It is designed for long-lasting performance.
- **Storage:** If storing the lamp, ensure it is unplugged and placed in a dry, safe location away from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in. Power outlet is not active. Switch is in the "Off" position.	Ensure the power cord is securely plugged into a working electrical outlet. Test the outlet with another appliance. Rotate the 4-way switch to cycle through brightness settings.
Light flickers or is dim.	Loose connection. Incorrect brightness setting.	Check all pole connections and ensure they are tight. Rotate the 4-way switch to a higher brightness setting.
Lamp is unstable.	Base not securely attached. Lamp placed on an uneven surface.	Ensure the lower pole section is tightly screwed into the weighted base. Move the lamp to a flat, stable surface.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Model Number	402082-15
---------------------	-----------

Brand	daylight24
Light Source Type	LED
Brightness	4000 Lumens
Wattage	40 Watts
Voltage	24 Volts
Product Dimensions	12"D x 18"W x 60"H
Item Weight	18 Pounds
Material Type	Metal, Wood
Finish Type	Brushed Nickel
Switch Type	Rotary (4-way)
Connectivity Technology	Normal bulb (integrated LED)
Indoor/Outdoor Usage	Indoor
UPC	858824005950



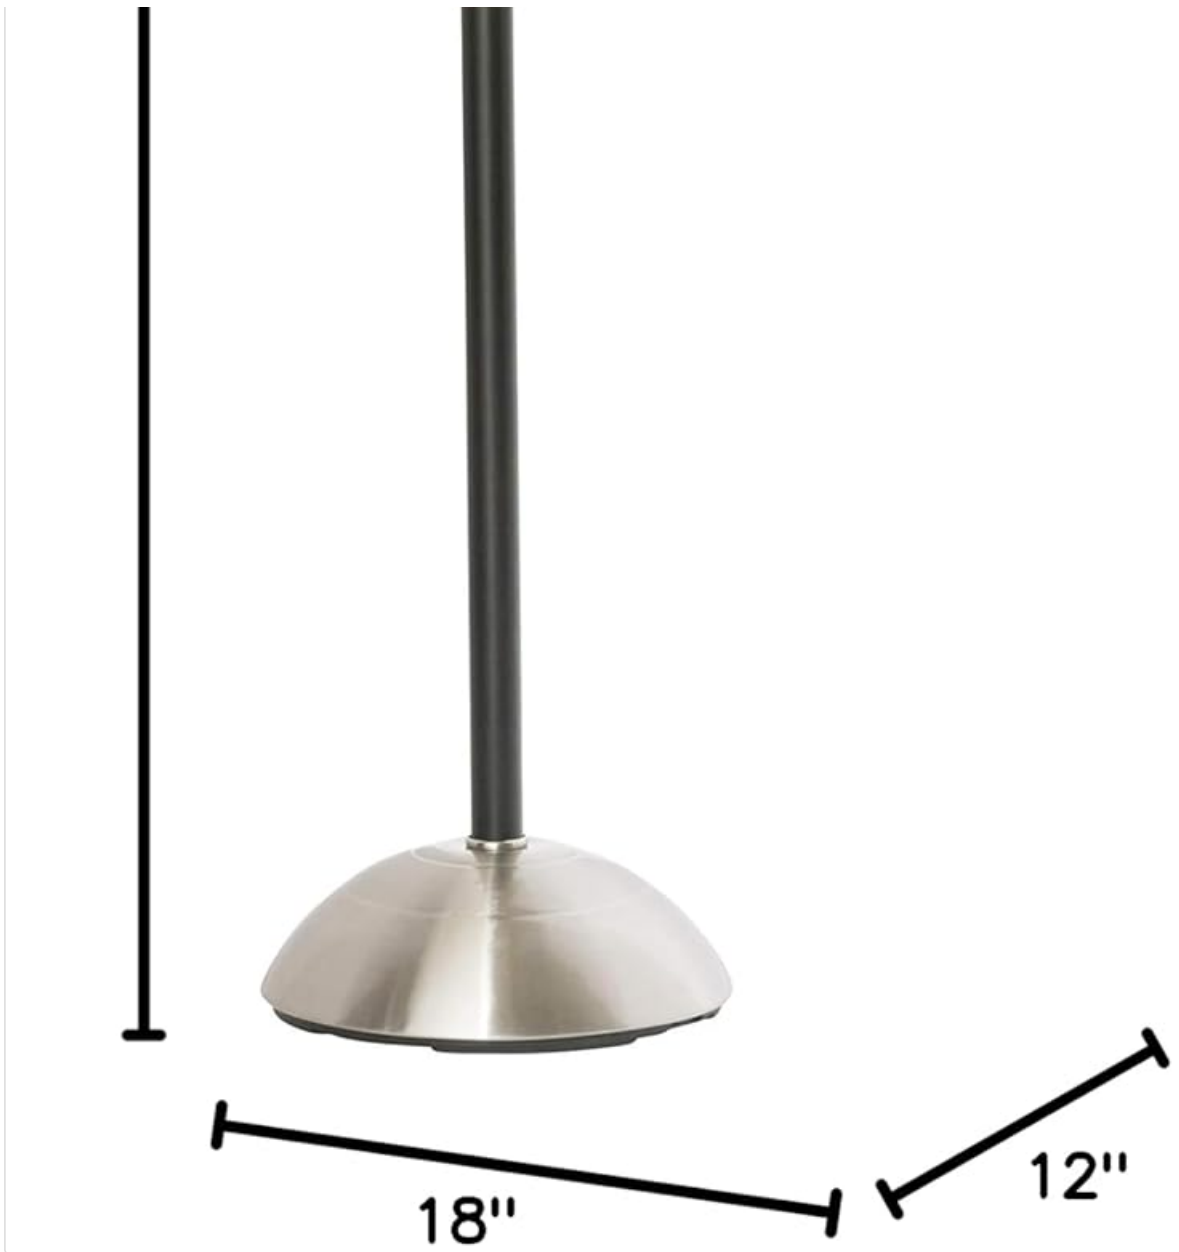


Figure 3: Product Dimensions. This diagram illustrates the overall dimensions of the floor lamp, including its 60-inch height, 18-inch width, and 12-inch depth.

WARRANTY INFORMATION

The daylight24 Natural Daylight LED Floor Lamp (Model 402082-15) is covered by a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, warranty inquiries, or replacement parts, please contact daylight24 customer support:

- **Website:** [Visit the daylight24 Store on Amazon](#) (for general product information)
- Please refer to the original packaging or the manufacturer's website for direct contact information.