

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [TOA Electronics](#) /
- › [TOA Electronics PC-1860 5-Inch Ceiling Mount Speaker User Manual](#)

## TOA Electronics PC-1860

# TOA Electronics PC-1860 5-Inch Ceiling Mount Speaker User Manual

Model: PC-1860

[Introduction](#)   [Safety Precautions](#)   [Package Contents](#)   [Setup & Installation](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty](#)   [Support](#)

## 1. INTRODUCTION

This user manual provides essential information for the safe and efficient installation, operation, and maintenance of your TOA Electronics PC-1860 5-Inch Ceiling Mount Speaker. Please read this manual thoroughly before using the product and retain it for future reference.

The PC-1860 is designed for clear audio reproduction in various indoor environments, featuring a compact design suitable for ceiling installation.

## 2. SAFETY PRECAUTIONS

### WARNING:

- Ensure all electrical connections are made by qualified personnel and comply with local electrical codes.
- Do not install the speaker in locations exposed to direct water spray or excessive humidity, as the product is not waterproof.
- Always disconnect power before performing any installation, maintenance, or troubleshooting.
- Use appropriate mounting hardware and ensure the ceiling structure can support the speaker's weight (approximately 10 pounds).
- Avoid placing heavy objects on the speaker or subjecting it to strong impacts.

### CAUTION:

- Do not attempt to modify or repair the speaker yourself. Refer all servicing to qualified service personnel.
- Keep the speaker away from heat sources and direct sunlight to prevent damage.
- Ensure proper ventilation around the speaker to prevent overheating.

### 3. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- 1 x TOA Electronics PC-1860 5-Inch Ceiling Mount Speaker
- 1 x Mesh Filter
- This User Manual

### 4. SETUP AND INSTALLATION

---

Proper installation is crucial for optimal performance and safety. It is recommended that installation be performed by a qualified technician.

#### 4.1 Unpacking

Carefully remove the speaker and all accessories from the packaging. Inspect for any signs of damage during transit. If damage is found, contact your supplier immediately.

#### 4.2 Mounting Location Selection

Choose a suitable location in the ceiling that can structurally support the speaker's weight. Ensure there are no obstructions such as electrical conduits, water pipes, or structural beams in the chosen area. Maintain adequate clearance for wiring and ventilation.

#### 4.3 Installation Steps

1. **Prepare the Ceiling Opening:** Cut a circular hole in the ceiling at the selected location, ensuring the diameter matches the speaker's mounting requirements. Refer to the speaker's physical dimensions for precise measurements.
2. **Connect Wiring:** Route the speaker wire from your amplifier or audio source to the ceiling opening. Connect the wires to the speaker terminals, observing correct polarity (+ to + and - to -). Ensure connections are secure.
3. **Insert Speaker into Opening:** Carefully insert the speaker into the prepared ceiling opening. The mounting clips (visible in the image) are designed to secure the speaker in place.
4. **Secure the Speaker:** Engage the mounting clips by tightening the screws (if applicable) or by pushing them outwards until they firmly grip the ceiling material. Ensure the speaker is flush with the ceiling surface and securely held.
5. **Attach Mesh Filter:** If not pre-installed, attach the included mesh filter to the speaker grille. This helps protect the speaker from dust and debris.



Figure 1: TOA Electronics PC-1860 5-Inch Ceiling Mount Speaker, showing the white grille, black rear enclosure, and metal mounting clips. This image illustrates the speaker's design for flush ceiling installation.

## 5. OPERATING INSTRUCTIONS

---

The TOA Electronics PC-1860 is a passive speaker designed to reproduce audio from an external amplifier or audio source. It does not require direct power or complex controls.

### 5.1 Basic Audio Playback

1. **Power On Amplifier:** Ensure your audio amplifier or receiver is powered on and connected to your audio source (e.g., MP3 player, desktop, projector, television).
2. **Adjust Volume:** Use the volume controls on your amplifier or audio source to set the desired listening level.
3. **Voice Control (if applicable):** If your connected audio system supports voice control, you may be able to manage playback and volume through voice commands directed at your audio source device. The speaker itself does not have integrated voice control functionality but can reproduce audio from devices that do.
4. **Radio Functionality (if applicable):** If your connected audio source is a radio receiver, the speaker will reproduce the radio broadcast. The speaker itself does not contain a radio tuner.

The PC-1860 is designed for straightforward audio output. All primary controls for audio source selection, volume, and equalization will be managed through your connected amplifier or audio system.

## 6. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your speaker.

- **Cleaning:** Gently wipe the speaker grille and frame with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners.
- **Dust Removal:** Periodically use a soft brush or a vacuum cleaner with a brush attachment to remove dust from the grille, especially the mesh filter.

- **Inspection:** Occasionally inspect the speaker for any visible damage or loose connections. If any issues are found, refer to the troubleshooting section or contact support.
- **Environment:** Ensure the installation environment remains within recommended temperature and humidity levels.

## 7. TROUBLESHOOTING

If you encounter issues with your PC-1860 speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from speaker	<ul style="list-style-type: none"> <li>◦ Amplifier/receiver is off or muted.</li> <li>◦ Incorrect wiring or loose connections.</li> <li>◦ Audio source not playing.</li> <li>◦ Speaker damaged.</li> </ul>	<ul style="list-style-type: none"> <li>◦ Ensure amplifier is on and volume is up. Check mute settings.</li> <li>◦ Verify speaker wire connections at both the speaker and amplifier. Ensure correct polarity.</li> <li>◦ Confirm audio source is active and playing.</li> <li>◦ If all else fails, contact support.</li> </ul>
Distorted or unclear sound	<ul style="list-style-type: none"> <li>◦ Overdriven amplifier.</li> <li>◦ Loose speaker connections.</li> <li>◦ Damaged speaker cone.</li> </ul>	<ul style="list-style-type: none"> <li>◦ Reduce amplifier volume.</li> <li>◦ Check and secure all wiring connections.</li> <li>◦ Inspect speaker for physical damage. Contact support if damaged.</li> </ul>
Speaker not securely mounted	<ul style="list-style-type: none"> <li>◦ Mounting clips not fully engaged.</li> <li>◦ Incorrect ceiling opening size.</li> </ul>	<ul style="list-style-type: none"> <li>◦ Re-engage mounting clips firmly.</li> <li>◦ Ensure the ceiling opening matches the speaker's specifications. Professional re-installation may be required.</li> </ul>

If the problem persists after attempting these solutions, please contact TOA Electronics customer support.

## 8. SPECIFICATIONS

Below are the key technical specifications for the TOA Electronics PC-1860 5-Inch Ceiling Mount Speaker:

Feature	Detail
Model Name	PC-1860
Brand	TOA Electronics
Speaker Type	In Ceiling
Mounting Type	Ceiling Mount
Speaker Size	5 Inches
Audio Driver Type	Dynamic Driver
Audio Output Mode	Stereo (when paired with another speaker)

Feature	Detail
Color	White
Included Components	1 x Mesh Filter
Is Waterproof	FALSE
Item Weight	10 pounds (approximate)
Power Source	Corded Electric (via amplifier)
Control Method	Voice (via compatible external devices)
Recommended Uses	Construction, Industrial
Compatible Devices	Desktop, MP3 Player, Projector, Television (via amplifier)

## 9. WARRANTY INFORMATION

---

The TOA Electronics PC-1860 speaker comes with a Limited Warranty. Specific terms and conditions of the warranty, including coverage period and claim procedures, are subject to the policies of TOA Electronics. For detailed warranty information, please refer to the official TOA Electronics website or contact their customer service directly. Retain your proof of purchase for warranty claims.

## 10. CUSTOMER SUPPORT

---

If you require further assistance, have questions not covered in this manual, or need technical support, please contact TOA Electronics customer service.

- **Online Support:** Visit the official TOA Electronics website for FAQs, product documentation, and contact forms.
- **Contact Information:** Refer to the TOA Electronics website for current phone numbers and email addresses for your region.

When contacting support, please have your product model (PC-1860) and purchase information readily available.