

Holstein Housewares HH-0914701I

Holstein Housewares HH-0914701I 5-Cup Coffee Maker

INSTRUCTION MANUAL

Introduction

This manual provides essential information for the safe and efficient operation of your Holstein Housewares 5-Cup Drip Coffee Maker. Please read all instructions carefully before using the appliance and retain this manual for future reference.

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
12. Do not use appliance for other than intended use.

13. Scalding may occur if the lid is removed during the brewing cycle.

Parts Identification

Familiarize yourself with the components of your coffee maker:

- **Lid:** Covers the water reservoir and filter basket.
- **Water Reservoir:** Holds water for brewing. Features a transparent water window with level markings.
- **Filter Basket:** Holds the reusable nylon filter.
- **Reusable Nylon Filter:** Eliminates the need for paper filters.
- **Shower Head:** Distributes hot water over coffee grounds.
- **Glass Carafe:** Collects brewed coffee. Marked for up to 5 cups.
- **Warming Plate:** Keeps the brewed coffee hot.
- **ON/OFF Switch:** Activates and deactivates the brewing process.
- **Measuring Spoon:** For accurate coffee ground measurement.



Brew up to 5 cups
Just the right amount of coffee



Figure 1: Front view of the Holstein Housewares 5-Cup Coffee Maker. This image displays the coffee maker in a mint color, showing the glass carafe, control panel, and water level indicator.



Removable cone filter

Say goodbye to disposable paper filters

Figure 2: Side view of the coffee maker, highlighting its compact design and the water level window.

Before First Use

Before using your coffee maker for the first time, it is recommended to clean all parts thoroughly.

1. Wash the glass carafe, lid, and reusable nylon filter in warm, soapy water. Rinse thoroughly and dry.
2. Wipe the exterior of the coffee maker with a soft, damp cloth. Do not immerse the main unit in water.
3. Run a brewing cycle with only water (no coffee grounds) to clean the internal components. Fill the water reservoir to the MAX level, place the empty carafe on the warming plate, and turn the unit ON. Discard the water after the cycle.

Setup and Operating Instructions

Follow these steps to brew coffee with your Holstein Housewares 5-Cup Coffee Maker:

1. **Placement:** Place the coffee maker on a flat, stable, heat-resistant surface.
2. **Fill Water Reservoir:** Open the lid and fill the water reservoir with fresh, cold water. Use the water level markings on the transparent window as a guide. Do not exceed the MAX fill line.
3. **Add Coffee Grounds:** Place the reusable nylon filter into the filter basket. Add the desired amount of ground coffee into the filter. A general guideline is one level measuring spoon (provided) per cup of coffee. Adjust to your taste.
4. **Close Lid:** Close the lid securely.
5. **Position Carafe:** Ensure the glass carafe with its lid is properly placed on the warming plate.
6. **Plug In:** Plug the power cord into a standard electrical outlet.
7. **Start Brewing:** Press the ON/OFF switch to the 'ON' position. The indicator light will illuminate, and brewing will begin.
8. **Auto Pause and Serve:** The coffee maker features an auto pause and serve function, allowing you to temporarily remove the carafe to pour a cup before the brewing cycle is complete. The flow of coffee will stop for approximately 30 seconds. Return the carafe to the warming plate within this time to prevent overflow.
9. **Serving:** Once brewing is complete, the coffee maker will automatically keep the coffee warm on the warming plate.
10. **Turn Off:** After serving, press the ON/OFF switch to the 'OFF' position and unplug the appliance.



Brewing made simple

Unbox, set up & enjoy



Figure 3: Illustrates the simple one-touch operation of the coffee maker, showing a hand pressing the ON/OFF switch.



Coffee moments made for you

Enjoy your coffee during mornings, work, or while relaxing at home

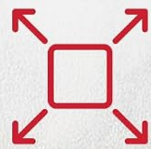


Figure 4: Demonstrates the auto pause and serve function, where the carafe can be temporarily removed to pour coffee mid-brew.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your coffee maker.

1. **Daily Cleaning:** After each use, turn off and unplug the coffee maker. Allow it to cool completely. Remove the glass carafe, lid, and reusable nylon filter. Wash these parts in warm, soapy water. The reusable filter and filter basket are top-rack dishwasher safe.
2. **Wipe Exterior:** Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Descaling (Monthly or as needed):** Mineral deposits from water can build up over time and affect performance. To descale, fill the water reservoir with a mixture of white vinegar and water (1:2 ratio). Place the empty carafe on the warming plate. Turn the coffee maker ON and allow half of the solution to brew. Turn the unit OFF and let it soak for at least 15 minutes. Then, turn the unit ON again and brew the remaining solution. Discard the solution and run two full cycles with fresh, cold water to rinse thoroughly.



Compact design

Saves space in your kitchen



Figure 5: Shows the removable cone filter, emphasizing its reusability and ease of cleaning.

Troubleshooting

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	Unit not plugged in; ON/OFF switch not activated; water reservoir empty.	Ensure unit is plugged in; press ON/OFF switch; fill water reservoir.
Coffee overflows from filter basket.	Too much coffee grounds; carafe not properly placed; filter clogged.	Reduce coffee grounds; ensure carafe is centered; clean filter.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio.	Adjust the amount of coffee grounds or water to your preference.

Problem	Possible Cause	Solution
Brewing is slow.	Mineral buildup in the coffee maker.	Descale the coffee maker as described in the Maintenance section.

Specifications

- **Model:** HH-0914701I
- **Capacity:** 5 Cups (750ml)
- **Dimensions:** 9.2"D x 7.2"W x 9.8"H
- **Weight:** 2.4 pounds
- **Power:** Standard household electrical outlet
- **Features:** One-touch operation, auto pause and serve, anti-drip function, reusable nylon filter, non-stick warming plate.

Warranty and Support

Your Holstein Housewares 5-Cup Coffee Maker is covered by a manufacturer's warranty. For detailed warranty information, product registration, or technical support, please refer to the warranty card included in your product packaging or visit the official Holstein Housewares website. Do not attempt to repair the appliance yourself.

Product Video Overview

Your browser does not support the video tag.

Video: An official overview of the Holstein Housewares 5-Cup Drip Coffee Maker, showcasing its features and design. This video highlights the product's ease of use and compact nature.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question