

UBay UBay-WSTH-ESPN

UBay Replacement Remote for Westinghouse Roku TVs - Instruction Manual

Model: UBay-WSTH-ESPN

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your UBay Replacement Remote for Westinghouse Roku TVs. This remote is designed to be fully compatible with all Westinghouse Roku TV models, offering a seamless replacement experience.

Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

SETUP: BATTERY INSTALLATION

The UBay Replacement Remote requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No programming or pairing is required. Once batteries are installed, the remote is ready for use with your Westinghouse Roku TV.



Image: Front view of the UBay Replacement Remote Control. The remote is black with various buttons, including a purple directional pad with an "OK" button in the center, and dedicated buttons for Netflix, ESPN+, Hulu, and Channel.

OPERATING INSTRUCTIONS

Compatibility

This remote control is compatible with all Westinghouse Roku TV models, including but not limited to:

- WR65UX4019, WR65UT4009
- WR55UX4019, WR55UT4009
- WR50UX4019, WR50UT4009
- WR43UX4019, WR43UT4009, WR43FX2019, WR43FT2019

- WR40FX2019, WR40FT2019
- WR32HX2019, WR32HT2019
- And 2020 Models such as WR40FX4019, WR43FX4019, WR50UX4019, WR58UX4019, WR65UX4019

Important Note: This remote is **not** compatible with Roku Sticks or Roku Player Boxes. It does not feature a pairing button or a headphone jack.



Image: A visual representation indicating that the remote is not compatible with Roku Box devices (left side, showing various Roku box models with a red 'X') and not compatible with Roku Stick devices (right side, showing various Roku stick models with a red 'X').

Button Functions

Familiarize yourself with the remote's buttons and their functions:

Button	Function
Power ()	Turns the TV on or off.
Back (↶)	Returns to the previous screen or menu.
Home (⬆)	Navigates to the Roku TV home screen.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and selections.
OK	Confirms a selection or opens an item. (Note: The "OK" button has been updated and functions correctly.)
Rewind (⏮)	Rewinds video playback.
Play/Pause (⏮)	Plays or pauses video playback.
Fast Forward (⏭)	Fast forwards video playback.
Instant Replay (⏮)	Replays the last few seconds of video.
Star (★)	Accesses options or settings within certain apps.
Sleep ()	Activates the sleep timer function.
Volume Up/Down	Adjusts the TV volume.

Button	Function
Mute	Mutes or unmutes the TV audio.
Dedicated Channel Buttons (Netflix, ESPN+, Hulu, Channel)	Directly launches the corresponding streaming application or TV channel.

MAINTENANCE

Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not responding.	• Batteries: Check if batteries are inserted correctly. Replace with fresh AAA batteries. • Line of Sight: Ensure there are no obstructions between the remote and the TV's infrared sensor. Point the remote directly at the TV. • Distance: The remote operates best within a reasonable distance from the TV. If you are too far, move closer.
Specific buttons are not working (e.g., "OK" button).	• Product Update: The "OK" button on this remote has been updated to function correctly. If you experience issues, ensure batteries are fresh and there are no obstructions. • Compatibility: Verify that your TV is a Westinghouse Roku TV model. This remote is not compatible with Roku Sticks or Roku Player Boxes.
Remote works intermittently or requires multiple presses.	• Low Batteries: Replace batteries with new ones. • Interference: Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR sensor. • Obstructions: Clear any objects blocking the path between the remote and the TV.

SPECIFICATIONS

- **Model:** UBay-WSTH-ESPN
- **Brand:** UBay
- **Product Dimensions:** 5.5 x 1.6 x 0.6 inches (approximately)
- **Item Weight:** 1.76 ounces (without batteries)
- **Power Supply:** 2 x 1.5V AAA Batteries (Not Included)
- **Connectivity Technology:** Infrared (IR)

- **Compatible Devices:** Westinghouse Roku Televisions
- **Max Number of Supported Devices:** 1
- **Special Feature:** Universal (for specified Westinghouse Roku TV models)

WARRANTY AND SUPPORT

Specific warranty details for this UBay product may vary. Please refer to the product packaging or the original point of purchase for precise warranty information.

For technical support or inquiries regarding your UBay Replacement Remote, please contact the seller or manufacturer directly through the platform where the product was purchased. Provide your order details and the product model number (UBay-WSTH-ESPN) for faster assistance.

Manufacturer: UBay Factory

© 2024 UBay. All rights reserved. Westinghouse and Roku are registered trademarks of their respective owners.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question