

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TELESIN](#) /

› [TELESIN 2nd Generation 2.7M Ultra Long Carbon Fiber Selfie Stick User Manual](#)

### TELESIN GP-MNP-270-02

# TELESIN 2nd Generation 2.7M Ultra Long Carbon Fiber Selfie Stick

Model: GP-MNP-270-02

## INTRODUCTION

Thank you for choosing the TELESIN 2nd Generation 2.7M Ultra Long Carbon Fiber Selfie Stick. This manual provides essential information for the safe and effective use of your new selfie stick. Please read it thoroughly before use and retain it for future reference.

## PRODUCT OVERVIEW

The TELESIN 2.7M Ultra Long Carbon Fiber Selfie Stick is designed for action camera users seeking extended reach and stability. Constructed from high-quality carbon fiber, it offers a lightweight yet robust solution for capturing wide-angle shots and unique perspectives. Its adjustable length and versatile mounting options make it suitable for various shooting scenarios.





Image: The TELESIN 2.7M Ultra Long Carbon Fiber Selfie Stick shown fully extended with an action camera attached.



Image: The selfie stick in a partially extended configuration, demonstrating its adjustable nature.

## Key Features:

- **Ultra-Long Reach:** Extends up to 2.7 meters (270cm) for expansive shots.
- **Adjustable Lengths:** Features 6 distinct adjustable lengths (40cm, 95cm, 125cm, 180cm, 205cm, 270cm).
- **Lightweight & Durable:** Constructed from carbon fiber for stability and reduced weight (approx. 300g).
- **Versatile Mounting:** Includes a detachable adapter with a 1/4" standard camera screw connector and a GoPro-style mount.
- **Wide Compatibility:** Compatible with GoPro series, Insta360 One R/X/X2, DJI Action 2, Osmo Action, Osmo Pocket/2, and most action cameras with a GoPro connection interface.

- **180-Degree Rotation:** Allows for flexible angle adjustments to capture desired perspectives.

## SETUP

---

### Attaching Your Camera:

1. Identify the appropriate mount for your camera. The selfie stick comes with a standard GoPro-style mount and a 1/4" screw adapter.
2. If using a GoPro or similar action camera, align its mounting tabs with the GoPro-style mount on the selfie stick. Insert the thumb screw and tighten it securely.
3. If using a camera with a 1/4" tripod thread, twist down the detachable adapter to reveal the 1/4" screw connector. Screw your camera onto this connector until it is firmly attached.





Image: Detailed view of attaching an action camera to the selfie stick's GoPro-compatible mount.




Image: A close-up showing an action camera properly mounted and secured to the selfie stick.

# Self-contained adapters Broad Adaptability

2.7M

-  
Detachable adapter, twist down  
the adapter mount  
1/4" standard camera screw connector

• • •

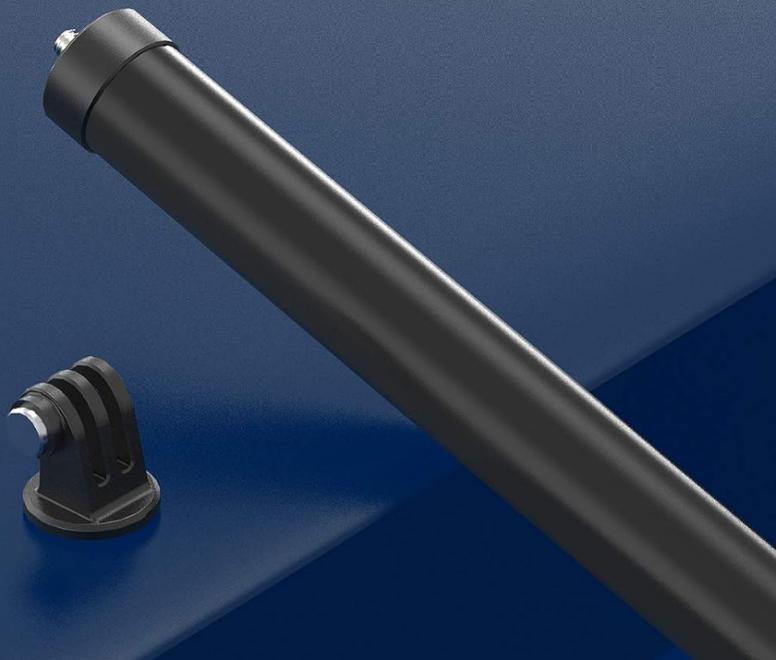

Action cameras and tabletop  
tripods are not included in this product.

Image: The detachable adapter, illustrating the 1/4" standard camera screw connector for wider camera compatibility.

## OPERATING INSTRUCTIONS

### Adjusting Length:

1. To extend the selfie stick, hold the base section firmly and gently pull out the desired sections. The stick is designed to extend to 6 different lengths: 40cm, 95cm, 125cm, 180cm, 205cm, and 270cm.
2. To lock a section in place, twist the section clockwise until it feels secure. To unlock and retract, twist counter-clockwise.
3. Ensure all extended sections are securely locked before use to prevent accidental retraction or instability.

# Multi-location rings Length adjustable

2.7M

6 regular lengths adjustable for  
more freedom of framing

9Section	270cm
8Section	
7Section	205cm
6Section	180cm
5Section	
4Section	125cm
3Section	95cm
2Section	
1Section	40cm

Action cameras and tabletop  
tripods are not included in this product.



Image: A visual guide demonstrating the six adjustable lengths and the twist-to-lock/unlock mechanism of the selfie stick.

## Angle Adjustment:

The camera mount allows for 180-degree rotation, enabling you to adjust the camera angle for various shots. Loosen the thumb screw slightly, adjust the angle, and then re-tighten the screw to secure the position.

## Tripod Compatibility:

The bottom of the selfie stick features 1/4" screw holes, allowing it to be mounted on any standard 1/4" tripod for added stability (tripod sold separately).

## MAINTENANCE

- Cleaning:** Wipe the selfie stick with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive cleaners.
- Storage:** Store the selfie stick in a cool, dry place away from direct sunlight and extreme temperatures.
- Inspection:** Regularly inspect all parts for any signs of wear, damage, or loose connections. Do not use the product if any part is damaged.

- **Safety Precaution:** When extending or retracting the stick, be mindful of the gaps between sections to avoid pinching your fingers. Follow the natural movement of the stick.

## TROUBLESHOOTING

---

### Instability or Wobbling:

- Ensure all extended sections are fully twisted and locked clockwise.
- Verify that your camera is securely attached to the mount and the thumb screw is tightened.
- Avoid over-extending the stick beyond its recommended lengths, especially with heavier cameras.

### Camera Detaching:

- Always double-check that the camera's mounting screw or thumb screw is tightened firmly before use.
- Ensure the camera is compatible with the mount type being used (GoPro-style or 1/4" screw).

## SPECIFICATIONS

---

<b>Brand</b>	TELESIN
<b>Model Number</b>	GP-MNP-270-02
<b>Material</b>	Carbon Fiber
<b>Minimum Length</b>	40 cm
<b>Maximum Length</b>	270 cm (2.7 meters)
<b>Adjustable Lengths</b>	40cm, 95cm, 125cm, 180cm, 205cm, 270cm
<b>Product Dimensions (Collapsed)</b>	40 x 1.5 x 1.5 cm
<b>Item Weight</b>	300 grams
<b>Color</b>	Black
<b>Compatible Devices</b>	Action Cameras (GoPro, Insta360, DJI Osmo Action/Pocket)

# Carbon fiber Lighter and stronger

-  
High-quality material guarantees  
stability and low weight



Image: A close-up view highlighting the carbon fiber construction, emphasizing its lightweight and strong properties.

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact TELESIN customer service directly. Keep your purchase receipt as proof of purchase.