

## Invicta 32953

# Invicta Subaqua Shutter Chronograph Quartz Men's Watch 32953 User Manual

Model: 32953

[Overview](#)

[Features](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

## 1. OVERVIEW

This manual provides detailed instructions for the proper use and care of your Invicta Subaqua Shutter Chronograph Quartz Men's Watch, model 32953. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



**Figure 1.1:** Front view of the Invicta Subaqua Shutter Chronograph Quartz Men's Watch 32953. This image displays the blue and rose gold dial, dark blue-plated stainless steel case, and band.

## 2. PRODUCT FEATURES

The Invicta Subaqua Shutter Chronograph Quartz Men's Watch 32953 is designed with precision and durability. Key features include:

- **Movement:** Reliable Quartz movement for accurate timekeeping.
- **Chronograph Function:** Integrated stopwatch functionality for measuring elapsed time.
- **Water Resistance:** Rated for 200 meters (660 feet), suitable for professional marine activity and serious surface

water sports, but not scuba diving.

- **Crystal:** Durable Flame Fusion crystal for enhanced scratch resistance.
- **Bezel:** Uni-directional Rotating bezel, useful for timing events.
- **Case & Band:** Dark Blue-plated stainless steel case and band with a fold-over clasp.
- **Dial:** Blue and Rose Gold dial with luminous rose gold-tone hands for visibility in low light.

## 3. SETUP

---

### 3.1 Unpacking and Initial Inspection

Carefully remove the watch from its packaging. Inspect the watch for any visible damage. Ensure all protective films are removed from the crystal, case, and band.



Figure 3.1: The Invicta watch packaging, designed to protect the timepiece during transit.

## 3.2 Adjusting the Band

The stainless steel band may require adjustment to fit your wrist comfortably. This typically involves removing or adding links. It is recommended to have this procedure performed by a qualified jeweler or watch technician to prevent damage to the band or clasp.



**Figure 3.2:** The Invicta watch displayed on a wrist, illustrating proper fit and appearance.

## 4. OPERATING INSTRUCTIONS

Your watch features a screw-down crown for enhanced water resistance. Always ensure the crown is securely screwed down when not adjusting the watch.



Figure 4.1: Side view of the watch, highlighting the screw-down crown and chronograph pushers.

#### 4.1 Setting the Time

1. Unscrew the crown by turning it counter-clockwise until it springs out to position 1.
2. Pull the crown out to position 2 (the outermost position).
3. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
4. Once the time is set, push the crown back into position 1 and screw it down clockwise firmly against the case to ensure water resistance.

#### 4.2 Using the Chronograph Function

The chronograph allows for precise measurement of elapsed time. The watch features two pushers, typically located at 2 o'clock (A) and 4 o'clock (B).

1. **Start:** Press pusher A to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press pusher A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping, press pusher B to reset the chronograph hands to their zero positions.
4. **Intermediate Time (Split Time):** Some chronographs allow for split time measurement. Consult the specific movement manual if this feature is desired.

### 4.3 Using the Uni-directional Rotating Bezel

The uni-directional rotating bezel can be used to measure elapsed time up to 60 minutes. It rotates only counter-clockwise to prevent accidental increases in measured time.

1. Align the zero mark (triangle or dot) on the bezel with the minute hand at the start of the event you wish to time.
2. Read the elapsed time in minutes by observing the minute hand's position against the bezel's scale.

### 4.4 Water Resistance

Your watch has a water resistance rating of 200 meters (660 feet). This rating indicates that the watch is suitable for professional marine activity and serious surface water sports. *It is not suitable for scuba diving.*

- **Important:** Always ensure the crown is fully screwed down before exposing the watch to water.
- Do not operate the crown or pushers while the watch is submerged in water.
- Avoid exposing the watch to extreme temperature changes (e.g., hot shower immediately followed by cold water), as this can compromise seals.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, dry cloth regularly.
- For the stainless steel band, use a soft brush and mild soapy water to remove dirt, then rinse thoroughly with fresh water and dry completely.
- Avoid using harsh chemicals, solvents, or abrasive cleaners.

### 5.2 Battery Replacement

Your quartz watch is powered by a battery. When the battery runs low, the second hand may start to jump in two-second intervals (End-of-Life indicator). It is recommended to have the battery replaced by an authorized service center to ensure proper sealing and maintain water resistance.

### 5.3 Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. The original watch box is ideal for storage.

## 6. TROUBLESHOOTING

---

If you encounter issues with your watch, refer to the following common problems and solutions:

- **Watch Not Running:**

- Check if the crown is pushed in and screwed down.
  - The battery may need replacement. Contact an authorized service center.
- **Chronograph Hands Not Resetting to Zero:**
    - This may require a chronograph reset procedure. Consult a watch technician or the specific movement manual for your watch.
  - **Condensation Under Crystal:**
    - This indicates a loss of water resistance. Immediately take the watch to an authorized service center to prevent further damage.

For issues not listed here, or if troubleshooting steps do not resolve the problem, please contact Invicta customer support or an authorized service center.

## 7. SPECIFICATIONS

<b>Model Number</b>	32953
<b>Brand</b>	Invicta
<b>Movement Type</b>	Quartz
<b>Case Diameter</b>	52 mm
<b>Case Thickness</b>	18.6 mm
<b>Band Width</b>	27.3 mm
<b>Case Material</b>	Dark Blue-plated Stainless Steel
<b>Band Material</b>	Dark Blue-plated Stainless Steel
<b>Crystal Material</b>	Flame Fusion
<b>Dial Color</b>	Blue and Rose Gold
<b>Water Resistance Depth</b>	200 Meters (660 Feet)
<b>Clasp Type</b>	Fold Over Clasp
<b>Special Features</b>	Chronograph, Glow In The Dark, Water Resistant, Uni-directional Rotating Bezel
<b>Item Weight</b>	490 g

## 8. WARRANTY AND SUPPORT

Invicta watches typically come with a manufacturer's warranty covering defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your watch or visit the official Invicta website. For customer support, service, or to locate an authorized service center, please visit the Invicta website or contact their customer service department directly. Keep your purchase receipt and warranty card in a safe place.

**Invicta Official Website:** [www.invictawatch.com](http://www.invictawatch.com)

