

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LEXIBOOK](#) /

> [LEXIBOOK Super Mario Projector Alarm Clock RP500NI User Manual](#)

LEXIBOOK RP500NI

LEXIBOOK Super Mario Projector Alarm Clock RP500NI User Manual

Model: RP500NI

1. INTRODUCTION

Thank you for purchasing the LEXIBOOK Super Mario Projector Alarm Clock. This device combines an alarm clock, time projector, nightlight, and sound effects to enhance your child's room. Please read this manual carefully to ensure proper use and maintenance of your product.



Front view of the LEXIBOOK Super Mario Projector Alarm Clock, featuring Mario in his kart, an LCD display, and the time projected onto the background.

2. SAFETY INFORMATION

- Keep the device away from water and moisture.
- Do not expose to direct sunlight or extreme temperatures.
- Use only the specified battery type (4 x LR6/AA batteries).
- Do not mix old and new batteries, or different types of batteries.
- Dispose of batteries responsibly according to local regulations.
- This product is not a toy. Adult supervision is recommended for young children.

3. PACKAGE CONTENTS

The package should contain the following items:

- 1 x LEXIBOOK Super Mario Projector Alarm Clock (Model: RP500NI)
- 1 x User Manual

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside of the clock.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 4 new LR6/AA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

4.2 Initial Power On

Once batteries are installed, the LCD screen will display the time. You may need to set the current time and alarm settings.



5. OPERATING INSTRUCTIONS

5.1 Setting the Time

Refer to the buttons on the clock's base (e.g., 'SET', 'MODE', 'ADJUST').

1. Press the 'MODE' button to cycle through time, alarm, and other settings.
2. When the time display is flashing, use the 'ADJUST' buttons (often labeled with arrows or '+' / '-') to set the hours and minutes.
3. Press 'MODE' again to confirm and move to the next setting or exit.

5.2 Setting the Alarm

1. Press the 'MODE' button until the alarm time is displayed (often indicated by an alarm icon).
2. Use the 'ADJUST' buttons to set the desired alarm hour and minute.
3. Press 'MODE' to confirm.
4. To activate/deactivate the alarm, look for a dedicated alarm ON/OFF switch or button, or cycle through modes until the alarm icon appears/disappears.

5.3 Snooze Function

When the alarm sounds, press the 'SNOOZE' button (usually a prominent button on the top or front) to temporarily stop the alarm. The alarm will sound again after a few minutes.

5.4 Time Projection

Press the "PROJECT" button to project the current time onto the ceiling or a wall. The projection angle may be adjustable on some models.



A child sleeping in bed with the LEXIBOOK Super Mario Projector Alarm Clock on a bedside table, showing the time projected onto the ceiling above.

5.5 Sound Effects

Press the Mario figure on the clock to activate 4 amazing sound effects.

5.6 Night Light Function

Press the base of the clock to switch on a cozy night light. This night light will automatically turn off after approximately 15 minutes.



A child sleeping peacefully in bed with the LEXIBOOK Super Mario Projector Alarm Clock on a bedside table, demonstrating its use as a nightlight.

6. FEATURES OVERVIEW

- Super Mario themed design.
- Time projection function onto the ceiling.
- 4 distinct sound effects activated by pressing Mario.
- Integrated night light with a 15-minute timer.
- Digital time display on an LCD screen.
- Alarm with snooze function.
- Battery-powered for portability (4 x LR6/AA batteries, not included).

Your browser does not support the video tag.

Official product video demonstrating the key features and functions of the LEXIBOOK Super Mario Projector Alarm Clock, including time projection, sound effects, and nightlight operation.

7. MAINTENANCE

7.1 Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.

7.2 Battery Replacement

Replace batteries when the display dims or functions become unreliable. Follow the battery installation steps in Section 4.1.

8. TROUBLESHOOTING

- **Clock not turning on:** Check battery installation and ensure batteries are fresh.
- **Projection is blurry:** Ensure the projection lens is clean. Some models may have a focus adjustment.
- **Alarm not sounding:** Verify that the alarm is set and activated. Check battery level.
- **Sound effects not working:** Ensure batteries are properly installed and have sufficient power.

9. SPECIFICATIONS

Feature	Detail
Brand	LEXIBOOK
Model Number	RP500NI
Color	Red/Blue
Display Type	Digital
Style	Super Mario
Special Feature	Alarm, Snooze, Time Projection, Nightlight, Sound Effects
Product Dimensions	7.09"W x 6.69"H
Power Source	Battery Powered (4 AA batteries required, not included)
Material	Plastic
Item Weight	13.7 ounces (387 Grams)
Mounting Type	Ceiling Mount (for projection)
Manufacturer	Lexibook
Date First Available	September 11, 2020

10. WARRANTY

This product comes with a 2-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the information provided by LEXIBOOK or contact their customer support.

11. SUPPORT

For further assistance, technical support, or to explore other LEXiBOOK products, please visit the official LEXiBOOK store:

[Visit the LEXiBOOK Store on Amazon](#)