

UNIWA E1801

UNIWA E1801 Senior Mobile Phone User Manual

Model: E1801

1. INTRODUCTION

The UNIWA E1801 is a user-friendly mobile phone designed with large buttons and a clear display, making it ideal for seniors. It features essential functions such as calling, messaging, FM radio, MP3/MP4 playback, and a built-in flashlight. This manual provides comprehensive instructions for setting up, operating, and maintaining your device.

2. SAFETY INFORMATION

- Do not disassemble or modify the device.
- Use only original or approved batteries and chargers.
- Avoid exposing the phone to extreme temperatures, direct sunlight, or moisture.
- Keep the phone away from medical devices to prevent interference.
- Dispose of the phone and battery responsibly according to local regulations.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact your retailer.

- UNIWA E1801 Mobile Phone
- BL-5C 800mAh Battery
- Charger
- User Manual (this document)



Image: Contents of the UNIWA E1801 package, showing the phone, battery, charger, and user manual neatly arranged next to the product box.

4. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your UNIWA E1801 phone.



Image: The UNIWA E1801 mobile phone held in a hand, showcasing its compact size, large keypad, and clear color display with the UNIWA logo.

- **Display:** 1.77-inch QQVGA screen (160 x 128 pixels) for clear visibility.
- **Keypad:** Large, ergonomic buttons with clear numbering for easy dialing and navigation.

- **Navigation Keys:** Plated navigation keys for intuitive menu control.
- **Rear Camera:** 0.08 MP camera for basic photo capture.
- **Speaker:** Integrated 2030 box speaker for loud and clear audio.
- **Flashlight:** Built-in LED flashlight for convenience.
- **Non-slip Frame:** Textured frame design for a secure grip.

» Ergonomic keypad Plating Navigation Keys



Image: A close-up view of the UNIWA E1801's keypad, highlighting the ergonomic design and the metallic finish of the central navigation keys.

» **Non-slip frame**



Image: The UNIWA E1801 phone with an inset showing the detailed texture of its non-slip frame, designed for a secure grip.



Image: The rear of the UNIWA E1801 phone, with an overlay illustrating the powerful 2030 box speaker and its sound projection.

5. SETUP

5.1. Installing SIM Cards

The UNIWA E1801 supports dual SIM cards, allowing you to use two different numbers simultaneously.

1. Remove the back cover of the phone.
2. Locate the SIM card slots.
3. Carefully insert your SIM cards into the designated slots with the gold contacts facing down.
4. Ensure the SIM cards are securely seated.

» Dual SIM Card Dual Standby



Image: The back of the UNIWA E1801 phone with the cover removed, clearly showing the two SIM card slots and an illustration of two SIM cards.

5.2. Installing the Battery

1. After inserting the SIM cards, place the BL-5C 800mAh battery into the battery compartment, aligning the gold contacts.
2. Gently press down until the battery is securely in place.
3. Replace the back cover, ensuring it clicks into position.

5.3. Charging the Phone

Before first use, fully charge the phone's battery.

1. Connect the charger to the charging port on the phone.
2. Plug the charger into a power outlet.
3. The battery indicator on the screen will show the charging status.
4. Once fully charged, disconnect the charger.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen lights up.
- **To Power Off:** Press and hold the Power/End Call button until the power off options appear, then select "Power off".

6.2. Making Calls

1. From the idle screen, enter the phone number using the keypad.
2. Press the Green Call button to initiate the call.
3. To end a call, press the Red End Call button.

6.3. Sending Messages

1. Go to "Menu" > "Messages" > "Write message".
2. Enter your message using the keypad.
3. Enter the recipient's phone number or select from contacts.
4. Press "Send".

6.4. Using the FM Radio

The phone features a wireless FM radio.

1. Go to "Menu" > "FM Radio".
2. Select "Auto search" to find available stations.
3. Use the navigation keys to switch between stations.



Image: The UNIWA E1801 phone displaying its FM radio interface, showing a frequency of 142.2 MHz, with musical notes and a classic radio in the background, indicating its wireless FM capability.

6.5. Using the Flashlight

The built-in flashlight can be easily activated.

- Typically, a dedicated button or a long press on a specific key (refer to your phone's quick guide) activates the flashlight.
- Alternatively, access it via "Menu" > "Tools" > "Flashlight".

» Flashlight



Image: The UNIWA E1801 phone with a bright beam of light emanating from its top, illustrating the built-in flashlight function.

6.6. Other Features

- **MP3/MP4 Playback:** Supports multimedia playback. Transfer files to a TF card (up to 16GB, not included) and access them via the "Multimedia" menu.
- **Phonebook:** Store up to 300 contacts.
- **Tools:** Includes games, calendar, alarm clock, calculator, world clock, and recorder.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Do not use liquid cleaners or aerosols.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge it regularly to prolong its lifespan.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on.	Battery is low or not installed correctly.	Charge the battery. Ensure the battery is correctly inserted.
Cannot make or receive calls.	No SIM card, SIM card not inserted correctly, or no network signal.	Ensure SIM card is inserted. Check network signal strength. Contact your service provider.
Poor audio quality.	Low volume, poor network signal, or speaker/microphone obstruction.	Adjust volume. Move to an area with better signal. Clean speaker/microphone openings.
Battery drains quickly.	Frequent use, background applications, or old battery.	Reduce screen brightness. Close unused applications. Consider replacing the battery if it's old.

9. SPECIFICATIONS

Feature	Detail
Model Number	E1801
Dimensions	108 x 45 x 14 mm
Weight	68 g
CPU	SC6531E
Network Band	2G: GSM850/900/1800/1900 MHz, GPRS
SIM Card	Dual SIM, Dual Standby
Phonebook Capacity	300 entries
Display	1.77 inch QQVGA, 160 x 128 pixels
Camera	0.08 MP Rear Camera, 640 x 480 pixels
Multimedia	MP3, MP4
Memory	Supports TF card up to 16 GB (max)
Bluetooth	V2.1
Battery	BL-5C 800mAh
Talk Time	Up to 240 minutes
Standby Time	Up to 200 hours
Languages	English, Russian, Hebrew, Arabic, French, Spanish, Polish, German, Italian, Portuguese, Chinese
Features	Games, Calendar, Alarm Clock, Calculator, World Clock, Flashlight, E-book, WAP, Recorder

10. WARRANTY AND SUPPORT

For more information, visit the official UNIWA website or contact their support channels.

Related Documents - E1801

UNIWA
Born for Love

V1000
User Manual

Thank you for choosing UNIWA V1000 4G senior phone, it mainly support American 4G bands, not support European 4G bands currently, but it supports 2G(GSM)/3G(WCDMA) global bands.

It is unlocked (SIM free) and take single Nano SIM card. If any question during use, please email us, we will try our best to help you.

Our after-sales email:
2850699288@qq.com

Safety instructions

This phone is not water-resistant, keep it dry.
To prevent possible hearing damage, do not listen at high volume level for long time.
Exercise caution when holding your device.

Table of Contents

- ▶ External features 01
- ▶ Install SIM card 02
- ▶ Install the battery 02
- ▶ Turn on/off the phone 03
- ▶ Unlock keypad 03
- ▶ Charging 03
- ▶ Save contact 04
- ▶ Make call 04
- ▶ Answer call 05
- ▶ Send and receive SMS 05
- ▶ Multimedia Settings 06
- ▶ Bluetooth/Application 07
- ▶ Settings 07
- ▶ Speed Dial 10
- ▶ SOS Settings 10
- ▶ Torch light 11
- ▶ Product specifications 11

External features

① LED indicator
② Earpiece
③ Torch
④ Volume +/-
⑤ Torch button
⑥ Menu key
⑦ Dial key
⑧ OK key
⑨ Navigation key
⑩ Charging indicator

⑪ Charging dock
⑫ Hang up key
⑬ Keypad unlock button
⑭ Return key
⑮ SOS button
⑯ Corners
⑰ Headphone port
⑱ Micro USB
⑲ Dock connector

-01-

Install SIM card

Open the back cover from the bottom right corner of the phone (see figure 1) and insert your SIM card (see figure 2).

Install the battery

Before starting up, please tear off the insulating sticker on the battery contacts, then install the battery and cover the back cover, please see the figure below:

Turn on/off the phone

Long press [Power] for 5 seconds, the phone


will turn on/off.

Unlock keypad

Unlock button is on the right side of the phone, you can slide it up to unlock keypad. If the unlock button is already at unlocked state, you can slide it again to unlock.

Charging

When the battery is low, please charge the phone in time. There are 2 ways for charging:

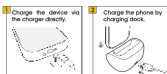

- 03

When charging, the indicator on the dock will get red, if the phone is not placed properly with the dock, the indicator will display green. Please reposition the phone until it is well placed.

Save contact

For frequent contacts, you can save their phone number in the contact list by step:



Make call

Enter the phone number on keypad, and then press **Call** to dial.

You can press **Call** to turn on "handfree" mode. See figure on the right:



- 04

Answer call

 
When coming call, press **Call** key to answer or press **Call** to hang up.

If there is a missed call or unread text message, the indicator on the phone will light up, you can see call history through "Call logs" menu.



Send and receive SMS

You can press **Message** button to write SMS under "Message" menu. When you receive SMS, please view it in the "Inbox". Under "Message" menu, you can set "Broadcast message" and "Voice mail server". See figure below:

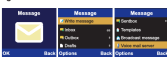


- 05

Multimedia Settings

In "Multimedia" menu, you can see sub-menu "Camera, DV, Audio, Video, FM radio", see figure on the right:

You can use **Left** key to move the cursor and press **Call** key to enter photo mode. And then press **Call** key to take photo. Using the same steps, you can use DV, Video, Audio functions.

 Regarding FM radio, when you enter the menu, need use "auto search and save" in the Options menu to find out nearby radio stations. See figure below:

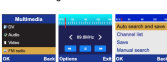

- 06

Bluetooth/Application

Under "Application" menu, you can see sub-menu "Calendar, Calculator, Recorder, Clock, STK, Unit conversion, Bluetooth, Internet, My list".

Regarding "Bluetooth" function, you can press **Call** key to activate it and then select "Paired device" to search for nearby Bluetooth device. See figure below:



Settings

In "Settings" menu, you can see sub-menu "Phone settings, Call settings, Profiles, Display, Security, Connections".



- 07

 
► Phone settings
Time& date, language settings, shortcut settings, auto power on/off, restore factory settings.

In "Phone settings" menu, you can restore the phone to factory settings. Please backup your data before restore factory setting, the data will be lost after restore factory. The default restore factory password is "0000".

► Call settings
Call divert, Call waiting, Call barred, Hide ID, others. See figure on the right:



► Profiles
Normal, Silent, Meeting, Indoor, Outdoor. If you want to change "Profiles" setting, press **Call** key to enter "Options" menu, and then press **Call** key to select "Customize". You will see "Rename, Ring settings, Adjust volume, Ring type, Other alert ring". See figure below:

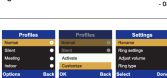

- 08

You can also press the volume +/- keys on the left side of the phone to adjust volume.

► Display
Animation effect, Wallpaper settings, Screen saver settings, Contrast, Keypad backlight time, Auto keypad lock.

► Security
PIN Modify PIN2, Phone locked, Modify the cellphone password, Privacy, Fixed Dialing number, blacklist.
In order to avoid forgetting password and lock the phone forever, we do not recommend user to set password. Please set and keep password carefully if you use this function.

► Connections
Network account, Data service, Data Roaming, Network selection, Network type, VoLTE.

- 09

Speed Dial

For some frequent contacts, "Speed dial" can dial them quickly. Key 2~9 can be set as speed dial keys. See figure below:

UNIWA V1000 4G Senior Phone User Manual

User manual for the UNIWA V1000 4G senior phone, detailing features, setup, operation, and specifications. Supports global 2G/3G bands and US 4G bands.



1



10

10

User manual for the UNIWA V202T 4G flip feature phone, covering unboxing, basic functions, contact management, settings, SOS emergency calls, product specifications, and technical support.

User manual for the UNIWA V909T 4G flip phone, covering installation, operation, settings, and specifications. This feature phone supports single Nano SIM and offers features like FM radio, SOS, and speed dial.

Descubre el manual de usuario del UNIWA V909T, un teléfono plegable 2G/3G/4G fácil de usar. Aprende sobre sus características, instalación, llamadas, mensajes, configuraciones y especificaciones técnicas.

<div><div><div>SYMFONISK</div></div><div></div></div>	<div><div><div>SYMFONISK Wi-Fi Bookshelf Speaker - User Guide and Information</div><div>Comprehensive guide for the IKEA SYMFONISK Wi-Fi bookshelf speaker, covering setup, functions, technical specifications, important warnings, care instructions, and disposal information.</div></div></div>
<div><div><div>SYMFONISK</div></div><div></div></div>	<div><div><div>SYMFONISK Smart Speaker - Quick Start Guide and Information</div><div>Learn how to set up and use your SYMFONISK smart speaker from IKEA and Sonos. Includes quick start guide, speaker functions, care instructions, technical specifications, important warnings, and compliance information.</div></div></div>

Documents - UNIWA – E1801

Model No.	UNIWA E1801
Dimensions	108x45.2x13.9mm
Weight	68g
CPU	SC6531E
Band	2G:GSM850/900/1800/1900MHz,GPRS
SIM Card	Dual SIM card(dual standby)
Phonebook Number	255
Ringtone	40 ringtones(support ring and mp3rings)
Speaker	2000 Hz speaker
FM Radio	FM radio
Screen	1.77 inch QVGA display screen, 160x128px
Camera	Single camera, 300K pixel camera, 30x108px
Multimedia	Video, MP3
Memory	Support TF card up to 1GB (max 1GB)
BT	BT
Other features	FM, support Camera, calendar, alarm, call, calendar, record, lock, touch, recorder etc.
Working time	up to 200 minutes
Standby time	up to 200 hours
Languages	English, Russian, Italian, Arabic, French, Spanish, Polish, Deutsch, Italian, Norwegian
Color	Black, Blue, Red
Accessories	1x 30 30 30mm x 3mm 1x Charger 1x User Manual

[\[pdf\]](#) User Manual Dimension Guide Accessories

Model No UNIWA E1801 Dimensions 108*45 2*13 9mm Weight 68g CPU SC6531E Band 2G GSM850 900 1800 1900MHz GPRS SIM Card Dual card dual standby K1197685278 p globalsources IMAGES PDT SPEC 278 |||

Model No. Dimensions Weight CPU Band SIM Card Phonebook number Ringtones Speaker FM Radio Screen Camera Multimedia Memory BT Vibrator Other features Talking time Standby time Languages Color Accessories UNIWA **E1801** 108*45.2*13.9mm 68g SC6531E 2G:GSM850/900/1800/1900MHz,GPRS Dual SIM card dual stand...

lang:en score:31 filesize: 93.51 K page_count: 1 document date: 2022-07-07