

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Greesum](#) /

› [Greesum 3-Piece Rocking Wicker Bistro Set Instruction Manual](#)

Greesum 3 Pieces Rocking Bistro Set

Greesum 3-Piece Rocking Wicker Bistro Set Instruction Manual

Model: 3 Pieces Rocking Bistro Set

1. INTRODUCTION

Thank you for choosing the Greesum 3-Piece Rocking Wicker Bistro Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new patio furniture. Please read these instructions thoroughly before use and retain them for future reference.

Package Contents:

- Two (2) Single Rocking Chairs
- One (1) Glass Rattan Table
- Beige Cushions (for chairs)
- One (1) Tool Kit
- One (1) Installation and Usage Manual



Image 1.1: The Greesum 3-Piece Rocking Wicker Bistro Set, featuring two rocking chairs and a glass-top table, arranged in a lush outdoor environment.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembling or using this product. Failure to follow these instructions may result in injury or damage.

- For safe use, follow the assembly instructions carefully and ensure the furniture is stable before use.
- Regularly inspect the furniture for any signs of wear or damage. Discontinue use if damage is found and contact customer support.
- Keep the furniture away from high traffic areas or areas where it may be bumped or knocked over.
- Do not exceed the recommended load capacity for seating or tabletops. The rocking chairs have a bearing capacity of 300 lbs each, and the table has a bearing capacity of 200 lbs.
- Keep small parts and sharp edges away from children during assembly and use.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not stand on the chairs or table.

3. SETUP AND ASSEMBLY

The Greesum 3-Piece Rocking Wicker Bistro Set is designed for easy assembly. A detailed installation manual and a complete tool kit are included in the package to assist you.

Assembly Steps:

1. Unpack all components and verify against the parts list in the included manual.
2. Lay out all parts on a soft, clean surface to prevent scratching.
3. Follow the step-by-step instructions provided in the separate installation manual for assembling the rocking chairs and the glass table.
4. Do not fully tighten all screws until all components are loosely assembled and aligned. This allows for easier adjustment.
5. Once all parts are in place and aligned, securely tighten all screws using the provided tool.
6. Place the cushions on the chairs and the glass top on the table.



Image 3.1: A diagram illustrating the dimensions of the rocking chair (36" H x 23" W x 28.5" D) and the coffee table (19" H x 17" W x 17" D), along with their respective weight capacities.

4. OPERATING INSTRUCTIONS

This bistro set is designed for comfortable outdoor relaxation. The rocking chairs provide a gentle motion, and the table offers a convenient surface for beverages or small items.

Using the Rocking Chairs:

- Ensure the chair is placed on a flat, stable surface before sitting.
- Sit gently into the chair, distributing your weight evenly.
- The balanced design allows for a smooth, comfortable rocking motion. Avoid excessive force when rocking.
- Do not attempt to stand on the chair or use it as a step stool.

Using the Glass Coffee Table:

- Place the table on a level surface.
- The tempered glass top is suitable for holding drinks, books, or small decorative items.
- Avoid placing excessively hot items directly on the glass without a coaster.
- Do not sit or stand on the table.



Image 4.1: An illustration demonstrating the stable rocking motion of the chair, designed for comfort and relaxation.

5. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your Greesum Bistro Set.

Cleaning Instructions:

- **Frame and Wicker:** Wipe with a damp cloth to remove dust and dirt. For stubborn stains, use a mild soap solution and rinse thoroughly. Dry with a clean, dry cloth.
- **Glass Tabletop:** Clean with a glass cleaner and a soft cloth. Avoid abrasive cleaners that may scratch the surface.
- **Cushions:** Spot clean with a mild soap and water solution. Allow to air dry completely. For deeper cleaning, refer to the care label on the cushions. Store cushions indoors during inclement weather or when not in use for extended periods to prevent fading and mildew.

General Care:

- Periodically check all bolts and screws to ensure they remain tight. Re-tighten as needed.
- While the rattan wicker is designed for all-weather use, covering the set during harsh weather conditions (heavy rain, snow, strong sun) or prolonged periods of non-use is recommended to prolong its lifespan.
- Avoid dragging the furniture, as this can damage the frame or flooring. Lift and move when relocating.



Image 5.1: The glass coffee table, featuring a tempered glass top and metal frame, designed for easy cleaning and durability.

6. TROUBLESHOOTING

If you encounter any issues with your bistro set, please refer to the following common solutions:

- **Problem:** The furniture feels unstable or wobbly.
Solution: Ensure all bolts and screws are fully tightened. Check that the furniture is placed on a level surface.
- **Problem:** Missing parts during assembly.
Solution: Double-check the package contents against the parts list in the manual. If parts are genuinely missing, contact Greesum customer support.
- **Problem:** Difficulty aligning screw holes during assembly.

Solution: Do not fully tighten any screws until all components are loosely assembled. This allows for minor adjustments to align holes.

- **Problem:** Cushions slide off the chairs.

Solution: While the cushions are designed to stay in place, consider adding non-slip pads or ties to secure them further if needed.

If these solutions do not resolve your issue, please contact Greesum customer support for further assistance.

7. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Greesum
Model Number	3 Pieces Rocking Bistro Set
Color	Beige
Material	Rattan wicker, Metal, Glass
Table Dimensions (L x W x H)	17" x 17" x 19"
Rocking Chair Dimensions (L x W x H)	23" x 28.5" x 36"
Item Weight	46.3 lbs (total package weight)
Chair Bearing Capacity	300 lbs
Table Bearing Capacity	200 lbs
UPC	788474294599



Image 7.1: Detailed view of the rocking chair's construction, highlighting the durable all-weather rattan, robust metal frame, comfortable handrails, and soft cushion for an enhanced user experience.

8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Greesum customer service directly. Refer to the contact information provided on the product packaging or the official Greesum website. Please have your model number (3 Pieces Rocking Bistro Set) and proof of purchase available when contacting support.

