

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Magnavox](#) /

› [Magnavox MM435M-SL Compact CD Shelf System User Manual](#)

Magnavox MM435M-SL

Magnavox MM435M-SL Compact CD Shelf System User Manual

Model: MM435M-SL

1. INTRODUCTION

Thank you for purchasing the Magnavox MM435M-SL Compact CD Shelf System. This system offers versatile audio playback options including CD, FM radio, Bluetooth wireless technology, and a 3.5mm auxiliary input. Designed for ease of use and compact placement, this manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.

2. WHAT'S IN THE BOX

- Main Unit (CD Player/Receiver)
- Two (2) Satellite Speakers
- Remote Control (requires 2 x AAA batteries, not included)
- AC Power Adapter
- FM Antenna Wire
- User Manual (this document)

3. PRODUCT FEATURES

The Magnavox MM435M-SL system is equipped with the following key features:

- **Multiple Audio Options:** Play music via the top-loading, programmable CD player (CD-R/CD-RW compatible), digital FM stereo radio, 3.5mm auxiliary input, or Bluetooth wireless technology.
- **LCD Display:** A large, easy-to-read LCD screen displays time, mode, and track information.
- **Balanced Sound:** Two satellite speakers deliver clear audio, suitable for various listening environments.
- **Remote Control:** Full-function remote control for convenient operation from a distance.

MAGNAVOX

Play your favorite music

 **Bluetooth®**



Image: The Magnavox MM435M-SL system showcasing its multiple audio input options: CD, FM Radio, 3.5mm Aux port, and Bluetooth wireless technology.

Listen to your:



**Favorite
hits**



**Audio
books**



Podcast



Image: A person reading a book with the Magnavox MM435M-SL system in the background, symbolizing its use for listening to favorite hits, audiobooks, and podcasts.

Powerful sound



Image: A close-up view of one of the satellite speakers from the Magnavox MM435M-SL system, highlighting its design and powerful sound capability.

4. SETUP GUIDE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Speaker Connection:** Connect the two satellite speakers to the speaker output jacks on the rear of the main unit. Ensure correct polarity (positive to positive, negative to negative) for optimal sound.
3. **FM Antenna:** Extend the FM antenna wire for better radio reception. Position it away from other electronic devices for minimal interference.
4. **Power Connection:** Plug the AC power adapter into the DC IN jack on the main unit, then plug the adapter into a standard wall outlet (AC 120V ~ 60Hz).
5. **Remote Control Batteries:** Open the battery compartment on the remote control and insert two (2) AAA batteries, observing the correct polarity.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **POWER** button on the main unit or the remote control to turn the system on or off.

5.2 Mode Selection

Press the **FUNCTION** button on the main unit or the remote control repeatedly to cycle through available modes: CD, FM, Bluetooth, and AUX.

5.3 CD Playback

1. Select the CD mode.
2. Open the CD compartment lid by gently lifting it.
3. Place a CD with the label side facing up onto the spindle.
4. Close the CD compartment lid. The system will read the disc and begin playback automatically.
5. Use the **PLAY/PAUSE**, **STOP**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons on the unit or remote to control playback.

5.4 FM Radio Operation

1. Select the FM mode.
2. Press the **TUNE +/-** buttons to manually tune to a desired station. Press and hold to auto-scan for the next available station.
3. To save a preset station: Tune to the desired station, press the **MEMORY** button, use **PRESET +/-** to select a preset number, then press **MEMORY** again to confirm.
4. To recall a preset station: Use the **PRESET +/-** buttons.

5.5 Bluetooth Pairing

1. Select the Bluetooth mode. The LCD display will show "BT" and flash, indicating it's in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "MM435M-SL" from the list of devices.
4. Once paired, the system will emit a confirmation tone, and "BT" on the display will stop flashing. You can now stream audio from your device.

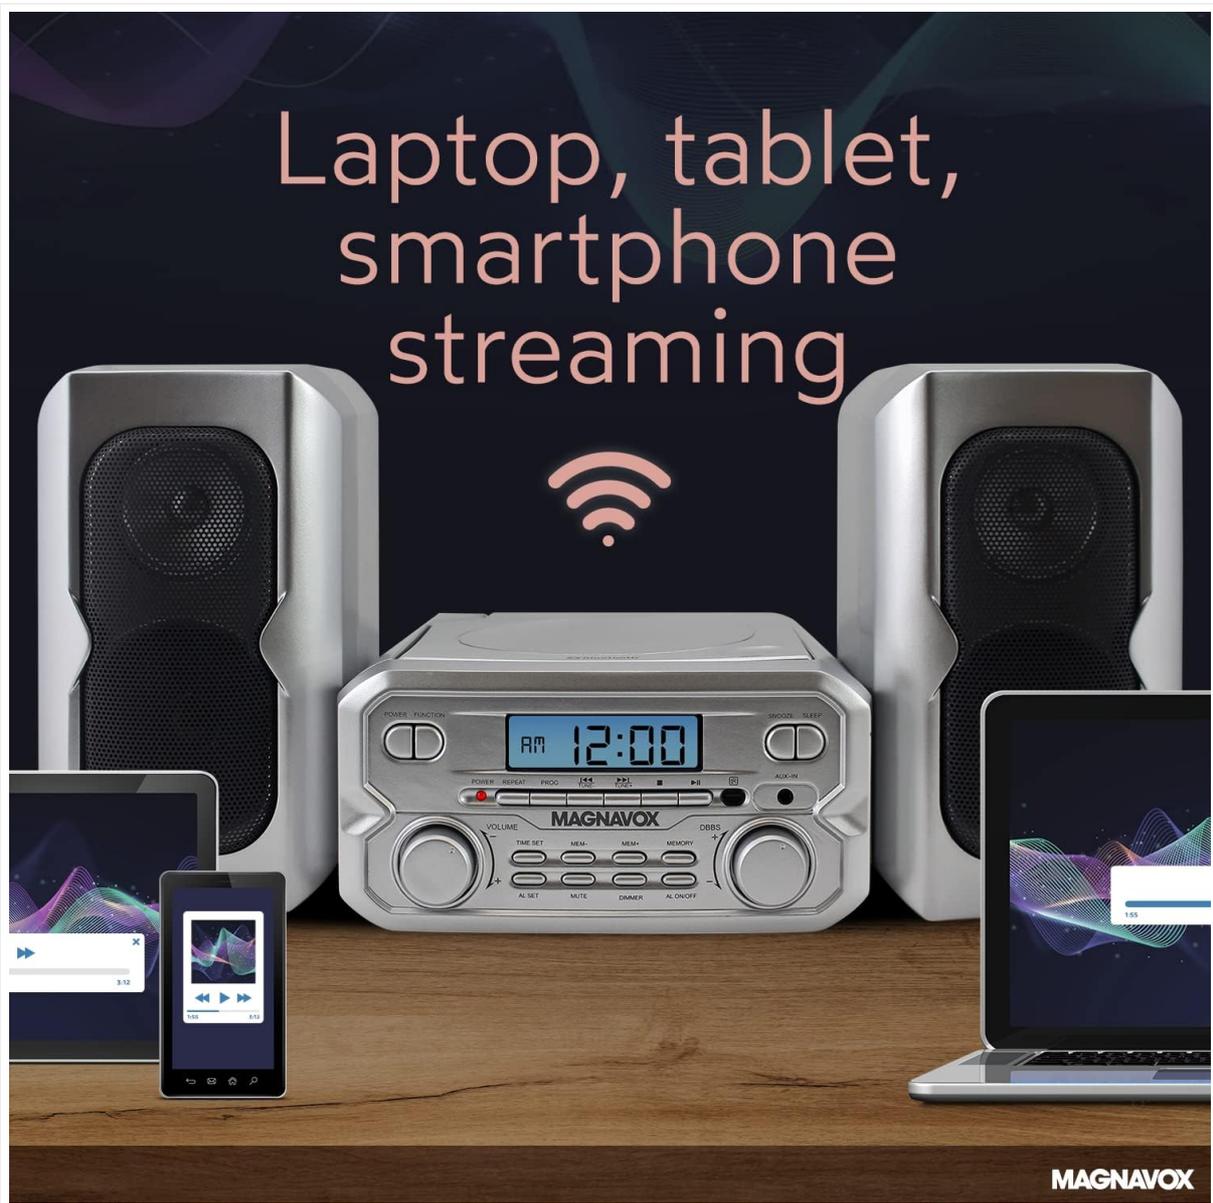


Image: The Magnavox MM435M-SL system demonstrating its Bluetooth connectivity, streaming music from a laptop, tablet, and smartphone.

5.6 AUX Input

1. Select the AUX mode.
2. Connect an external audio device (e.g., MP3 player, older smartphone) to the 3.5mm AUX IN port on the front of the main unit using a 3.5mm audio cable (not included).
3. Play audio from your connected device. The system will output the sound.

5.7 Volume Control

Rotate the **VOLUME** knob on the main unit or use the **VOL +/-** buttons on the remote control to adjust the sound level.

5.8 Setting Time and Alarm

The LCD display shows the current time. Refer to the detailed instructions in the full user manual for setting the clock and alarm functions, which typically involve using the **TIME SET** and **AL SET** buttons.

Large LCD Screen



Image: A close-up of the Magnavox MM435M-SL's control panel, highlighting the large LCD screen displaying the time and various function buttons.

6. REMOTE CONTROL

The included remote control provides convenient access to all major functions of the Magnavox MM435M-SL system. It allows you to power on/off, switch modes, control CD playback, adjust volume, tune radio stations, and manage presets from a distance.



Image: The Magnavox MM435M-SL system displayed with its remote control, also showing the overall dimensions of the unit.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- **Ventilation:** Ensure adequate ventilation around the unit to prevent overheating. Do not block ventilation openings.
- **Storage:** When not in use for extended periods, unplug the unit from the power outlet.

8. TROUBLESHOOTING

Problem	Possible Cause / Solution
No power	Ensure the AC adapter is securely plugged into the unit and a working wall outlet.
No sound	Check volume level. Ensure speakers are correctly connected. Verify correct mode selection (CD, FM, BT, AUX). If using AUX, check the external device's volume.

Problem	Possible Cause / Solution
CD not playing	Ensure CD is inserted correctly (label side up). Check if the CD is scratched or dirty. Try a different CD.
Poor FM reception	Adjust the position of the FM antenna. Move the unit away from other electronic devices that may cause interference.
Bluetooth pairing issues	Ensure the unit is in Bluetooth mode and flashing. Make sure your device's Bluetooth is on and discoverable. Move your device closer to the system. Disconnect from other Bluetooth devices.
Remote control not working	Check and replace batteries if necessary. Ensure there are no obstructions between the remote and the unit's sensor.

9. SPECIFICATIONS

- **Model Number:** MM435M-SL
- **Product Dimensions (L x W x H):** 18.2 x 9.8 x 5.6 inches
- **Item Weight:** 4.79 pounds
- **Brand:** Magnavox
- **Connectivity Technology:** Auxiliary, Bluetooth
- **Speaker Type:** Stereo
- **Manufacturer:** Craig Electronics, LLC
- **Power Source:** AC Operation (AC adapter included)
- **Remote Control Battery:** 1 x CR2025 (included) - *Note: Product feature bullets state 2 x AAA, please refer to the product packaging for definitive battery type.*



Image: The Magnavox MM435M-SL 3-Piece Compact CD Shelf System, showcasing the main unit and two satellite speakers in silver finish.

10. WARRANTY AND SUPPORT

This product is manufactured by Craig Electronics, LLC. For warranty information and customer support, please

refer to the warranty card included with your product or contact Craig Electronics, LLC directly. Warranty terms typically cover manufacturing defects in material and workmanship for a specified period from the date of purchase. Please retain your proof of purchase for warranty claims.

Note: Some protection plans may be available for purchase separately through retailers. These plans are independent of the manufacturer's warranty.