

XREXS DC395

XREXS Digital Kitchen Timer (Model DC395) - Instruction Manual

Brand: XREXS

INTRODUCTION

Thank you for choosing the XREXS Digital Kitchen Timer, Model DC395. This versatile timer is designed to assist you with various time-sensitive tasks, from cooking and baking to managing study sessions and workouts. Its user-friendly interface, large display, and multiple placement options make it an essential tool for any kitchen or classroom environment. Please read this manual carefully to ensure proper use and to maximize the benefits of your new timer.

PRODUCT FEATURES

- **Loud Ringing Alarm & Mute Mode:** Easily hear the alarm from another room. Features adjustable volume (high, low, mute) to suit your environment. A red light flashes in mute mode.
- **Count Up/Down Timer & Memory Function:** Functions as both a countdown timer (up to 99 hours, 99 minutes, 99 seconds) and a count-up timer (up to 99 hours, 59 minutes, 59 seconds). The START/STOP button recalls the last time setting.
- **Large Clear LCD Display:** Features a large LCD screen (2.56 x 0.98 inches) with big digits for clear readability from any angle.
- **Versatile Placement Options:** Equipped with a strong magnetic back for attachment to metal surfaces (e.g., refrigerator), a retractable stand for tabletop use, and a hook for hanging.
- **Wide Application:** Ideal for homework, exercise, gym workouts, cooking, sports, games, and classroom activities.

PACKAGE CONTENTS

- 1 x XREXS Digital Kitchen Timer (Model DC395)
- 2 x AAA Batteries (pre-installed with protective plastic)
- 1 x User Manual
- 1 x Lanyard (for hanging)

Your browser does not support the video tag.

Video: Unboxing the XREXS Digital Kitchen Timer, showing included items like batteries, lanyard, and user manual.

PRODUCT DIAGRAM



Image: Detailed diagram highlighting the large LCD display, strong magnet, hanging hole, retractable stand, and the High/Low/Mute volume switch on the side of the XREXS Digital Kitchen Timer.

Button Functions:

- **TIMER/CLOCK:** Switches between Timer mode and Clock mode.
- **RESET/STOP:** Resets the timer to zero; stops timing or setting clock.
- **START:** Starts or pauses the timer.
- **5 Min / 10 Min / 1 Min / 10 Sec:** Buttons to quickly add time in minutes or seconds.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the timer.
2. Slide the battery cover downwards to open.

3. Remove the protective plastic film from the pre-installed 2 AAA batteries.
4. Insert the batteries, ensuring correct polarity (+/-).
5. Slide the battery cover back into place until it clicks securely.

Your browser does not support the video tag.

Video: Demonstration of battery installation and initial setup for the XREXS Digital Kitchen Timer.

OPERATING INSTRUCTIONS

1. Setting the Clock:

1. Press the **TIMER/CLOCK** button to switch to Clock mode. The display will show "12:00".
2. Press and hold the **RESET/STOP** button for 3 seconds until the hour value flashes.
3. Press the **START** button to increase the hour.
4. Press the **RESET/STOP** button again to make the minute value flash.
5. Press the **START** button to increase the minute.
6. Press the **RESET/STOP** button one more time to finish setting the clock.

Multifunction Timer

Can be used as a clock



Timer Mode



12-Hour Clock Mode




Press  to switch between Timer mode and Clock mode

Image: The XREXS Digital Kitchen Timer showing the clock display, indicating the current time.

2. Setting the Countdown Timer:

1. Press the **TIMER/CLOCK** button to switch to Timer mode. The display will show "00:00:00".
2. Press the **RESET/STOP** button to clear any previous settings.
3. Use the **1 Min**, **5 Min**, **10 Min**, and **10 Sec** buttons to set your desired countdown time. Press and hold for quick adjustment.
4. Press the **START** button to begin the countdown.
5. To pause the countdown, press **START**. To resume, press **START** again.
6. To stop and reset the timer to zero, press **RESET/STOP**.

Fast Setting & Easy to Use

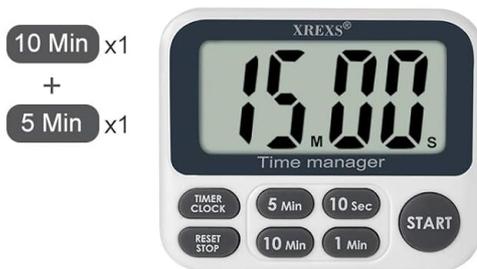

Press 10 Min button once
and 5 Minute button once



Press 1 Min button 2 times

Image: The XREXS Digital Kitchen Timer displaying a countdown in progress, with the minute and second buttons visible for setting.

3. Using the Count-Up Timer (Stopwatch):

1. Ensure the timer is in Timer mode ("00:00:00" displayed). If not, press **TIMER/CLOCK** and then **RESET/STOP**.
2. Press the **START** button to begin counting up.
3. To pause, press **START**. To resume, press **START** again.
4. To stop and reset, press **RESET/STOP**.

4. Adjusting Alarm Volume:

The timer features a three-level volume switch on its side:

- **HIGH:** Loudest alarm setting, suitable for noisy environments or when you are far from the timer.
- **LOW:** Moderate alarm setting for quieter environments.
- **MUTE:** No audible alarm. A red LED light will flash when the timer reaches zero.

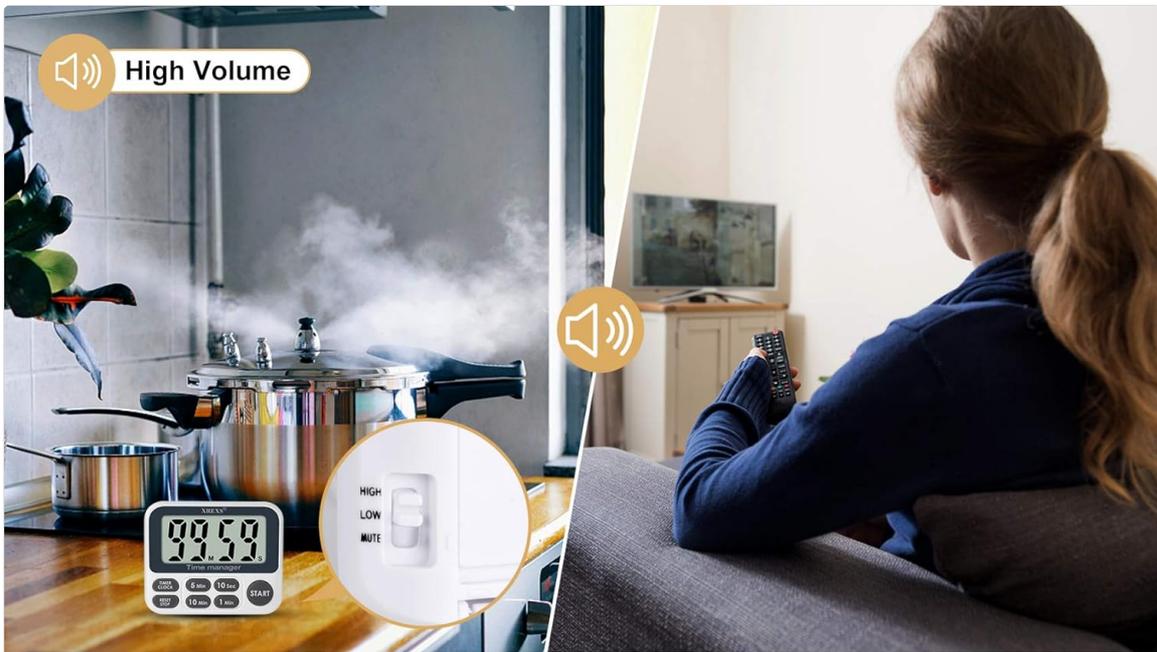


Image: The XREXS Digital Kitchen Timer illustrating the side-mounted switch for adjusting alarm volume to High, Low, or Mute.

PLACEMENT OPTIONS

Your XREXS Digital Kitchen Timer offers multiple convenient placement options:

- **Magnetic Back:** The strong magnets on the back allow you to attach the timer securely to any metal surface, such as a refrigerator door, oven, or whiteboard.
- **Retractable Stand:** Flip out the stand on the back to place the timer upright on a countertop, desk, or table for easy viewing.
- **Hanging Hook:** Use the integrated hook at the top to hang the timer on a wall hook or a lanyard.



Image: The XREXS Digital Kitchen Timer demonstrating its versatile placement options: magnetic attachment to a refrigerator, hanging from a hook, and standing on a surface using its retractable stand.

MAINTENANCE

- Clean the timer with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the timer to extreme temperatures, direct sunlight, or high humidity.
- If the display becomes dim or unclear, replace the batteries.
- Remove batteries if the timer will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Solution
Timer not turning on or display is dim.	Check battery polarity. Ensure protective plastic tabs are removed from batteries. Replace with fresh AAA batteries.
Alarm is not audible.	Check the volume switch on the side of the timer. Ensure it is not set to "MUTE".
Timer automatically turns off.	The timer has an automatic power-off feature after 10 minutes of inactivity to save battery. Press any button to wake it up.
Magnets not holding securely.	Ensure the surface is flat and metallic. Magnets may not adhere as strongly to textured or non-ferrous surfaces.

SPECIFICATIONS

- **Brand:** XREXS
- **Model:** DC395
- **Material:** Plastic
- **Product Dimensions:** 0.75"D x 2.95"W x 2.56"H
- **Screen Size:** 3.54 Inches (LCD display: 2.56 x 0.98 inches)
- **Weight:** 3.2 ounces
- **Batteries:** 2 x AAA batteries (included)
- **Max Countdown/Count-up:** 99 hours, 59 minutes, 59 seconds

WARRANTY & SUPPORT

For warranty information or technical support, please refer to the product packaging or contact XREXS customer service directly through their official website or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.