

[Manuals.plus](#) /

> [AUNA](#) /

> Auna Graceland Touch Jukebox User Manual

AUNA BX-9200-dfsf

Auna Graceland Touch Jukebox User Manual

Model: BX-9200-dfsf

1. INTRODUCTION

The Auna Graceland Touch Jukebox combines nostalgic design with modern technology. This unit features a 12-inch touch control panel, CD player, Bluetooth connectivity, Wi-Fi interface, LED lighting, USB port, SD card reader, microphone input, and FM/Internet radio. This manual provides instructions for safe and efficient operation of your jukebox.

2. SAFETY INSTRUCTIONS

- Read all instructions before operating the device.
- Keep the unit away from water, moisture, and direct sunlight.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power supply specified for this device.
- Do not attempt to repair the unit yourself. Refer all servicing to qualified personnel.
- Keep children and pets away from the unit during operation.

3. SETUP

3.1 Unpacking

Carefully remove the jukebox from its packaging. Check for any signs of damage. Retain the packaging for future transport or storage.

3.2 Placement

Place the jukebox on a stable, level surface. Ensure there is enough space around the unit for proper air circulation.

3.3 Power Connection

Connect the power cable to the unit's power input and then to a standard 100-240 VAC, 50/60 Hz wall outlet.

3.4 Initial Power On

Press the power button on the unit or the remote control to turn on the jukebox. The 12-inch touch panel will illuminate.



Figure 1: Front view of the Auna Graceland Touch Jukebox.

4. OPERATING INSTRUCTIONS

4.1 Touch Panel Operation

The 12-inch touch panel serves as the primary interface for navigating media options, settings, and internet features. Tap icons to select functions, swipe to scroll, and use on-screen controls for playback.

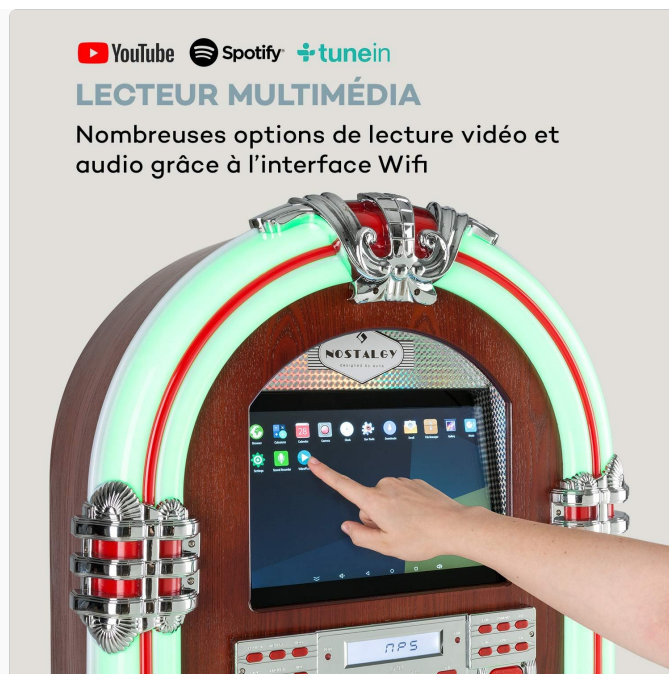


Figure 2: Interacting with the 12-inch touch panel.

4.2 Wi-Fi Connectivity

To access internet radio, streaming services (YouTube, Spotify, TuneIn), and other online features, connect the jukebox to your Wi-Fi network via the settings menu on the touch panel. The operating system is Android 6.0.1.

4.3 CD Playback

Insert a CD (CD, CD-R, CD-RW, MP3 CD) into the CD slot located on the front panel. The unit will automatically detect the disc and begin playback or prompt you to select tracks via the touch panel. Supported formats include CD, CD-R, CD-RW, and MP3.



EN ROTATION

Lecteur CD compatible MP3 pour les formats CD, CD-R et CD-RW

Figure 3: Inserting a CD for playback.

4.4 Bluetooth Pairing

Activate Bluetooth on your smartphone, tablet, or laptop. On the jukebox, select the Bluetooth mode. Search for the jukebox on your device and pair. Once connected, you can stream audio wirelessly to the jukebox.



Figure 4: Connecting via Bluetooth.

4.5 USB and SD Card Playback

Insert a USB flash drive into the USB 2.0 port or an SD card into the SD card reader. The jukebox will detect the media and allow you to browse and play audio files (e.g., MP3) or video files (up to 1080P resolution) through the touch panel.



Figure 5: USB and SD card slots for media playback.

4.6 Radio Function

The jukebox supports FM radio (87.5 - 108 MHz) and digital internet radio via Wi-Fi. Select the radio mode and tune to your desired stations. The FM tuner has 20 memory slots for saving favorite stations.

4.7 KaraokeReady Function

Connect a microphone to the 6.3 mm microphone input. Adjust microphone volume and reverb using the dedicated controls. This feature allows for vocal performances alongside music playback.



Figure 6: Microphone input and controls.

4.8 LED Lighting

The integrated LED lighting system can be controlled separately. It features a 7-color changing light function, enhancing the retro aesthetic of the jukebox.

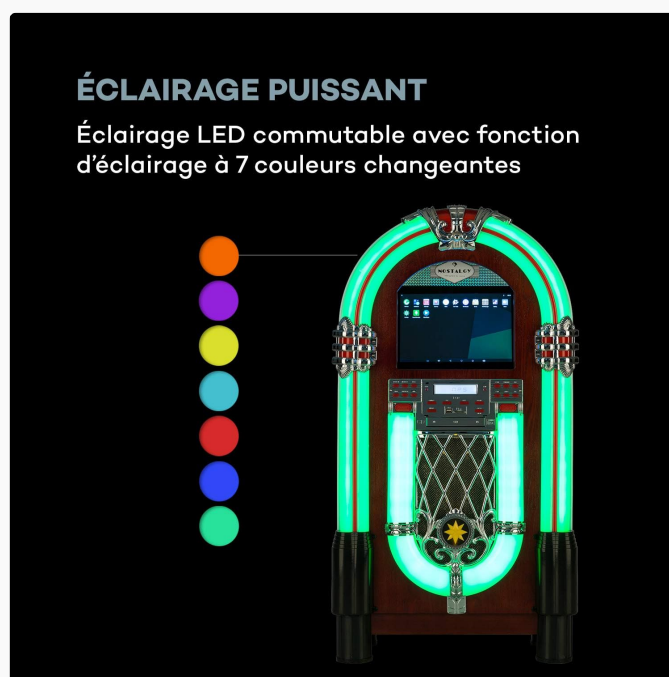


Figure 7: Jukebox with LED lighting activated.

5. MAINTENANCE

5.1 Cleaning

Wipe the exterior of the jukebox with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and then dry thoroughly. Do not use abrasive cleaners or solvents.

5.2 CD Player Care

Handle CDs by their edges to avoid fingerprints and scratches. Clean CDs with a soft, lint-free cloth, wiping from the center outwards.

6. TROUBLESHOOTING

- **No Power:** Check if the power cable is securely connected to both the jukebox and the wall outlet. Ensure the outlet is functional.
- **No Sound:** Verify that the volume is turned up. Check speaker connections if external speakers are used. Ensure the correct input source is selected.
- **CD Not Playing:** Ensure the CD is inserted correctly and is clean and free of scratches. Try a different CD.
- **Bluetooth Connection Issues:** Make sure Bluetooth is enabled on both devices and they are within range. Disconnect and re-pair if necessary.
- **Wi-Fi Connection Failure:** Check your router and internet connection. Re-enter Wi-Fi password if prompted.

7. SPECIFICATIONS

Feature	Specification
Model	BX-9200-dfsf
Brand	AUNA
Power Output	65 Watts RMS
Amplifier Output	2.0 Audio Channel
Screen Size	12 inches
FM Radio Frequency	87.5 - 108 MHz
Connectivity	Bluetooth, USB 2.0, SD Card, Wi-Fi, 6.3 mm Microphone Input, RCA Stereo Line Output
Compatible Disc Formats	CD, CD-R, CD-RW, MP3 CD
Video Resolution	1080P (1920x1080)
Operating System	Android 6.0.1
Power Supply	100-240 VAC 50/60 Hz
Dimensions (WxHxD)	Approx. 56 x 104 x 30 cm
Weight	Approx. 26 kg

8. WARRANTY

Warranty information is typically provided with your purchase documentation. Please refer to the specific warranty terms and conditions provided by the retailer or manufacturer at the time of purchase. Keep your proof of purchase for any warranty claims.

9. SUPPORT

For technical assistance, troubleshooting beyond this manual, or service inquiries, please contact your retailer or the Auna customer support. Contact details can usually be found on the manufacturer's official website or your purchase invoice.

© 2026 Auna. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08HZ16Z9L>

More documents and user manuals: <https://manuals.plus/>