

BEETRO TC0364A

BEETRO 15-Inch Pressure Washer Surface Cleaner Instruction Manual

MODEL: TC0364A

1. Introduction

This manual provides essential instructions for the safe and effective use, assembly, operation, maintenance, and troubleshooting of your BEETRO 15-inch Pressure Washer Surface Cleaner. This device is designed to efficiently clean large flat surfaces such as driveways, sidewalks, decks, and patios when connected to a compatible pressure washer. Please read this manual thoroughly before first use and retain it for future reference.

Safety Warnings:

- Always wear appropriate personal protective equipment, including eye protection, during operation.
- Ensure all connections are secure before starting the pressure washer.
- Never direct the high-pressure spray at people, animals, or electrical equipment.
- Operate the surface cleaner on stable, level ground.
- Do not exceed the maximum rated pressure of 4000 PSI.



BEETRO 15-inch Surface Cleaner demonstrating effective cleaning on a paved surface.

2. Package Contents

Verify that all items listed below are included in your package. If any parts are missing or damaged, please contact BEETRO customer support.

- 1 x 15-inch Surface Cleaner
- 2 x 15-inch Pressure Washer Extension Wands
- 5 x Spray Nozzles (0°, 15°, 25°, 40°, 65° soap)
- 1 x Instruction Manual (this document)

15" PRESSURE WASHER SURFACE CLEANER


5X FASTER CLEANING

THAN A STANDARD NOZZLE

UP TO 4000 PSI

Package:

Surface Cleaner x 1
Extension Wand x 2
Manual x 1
Pressure Washer Nozzle x 5
(0, 15, 25, 40, soap 65 degree)

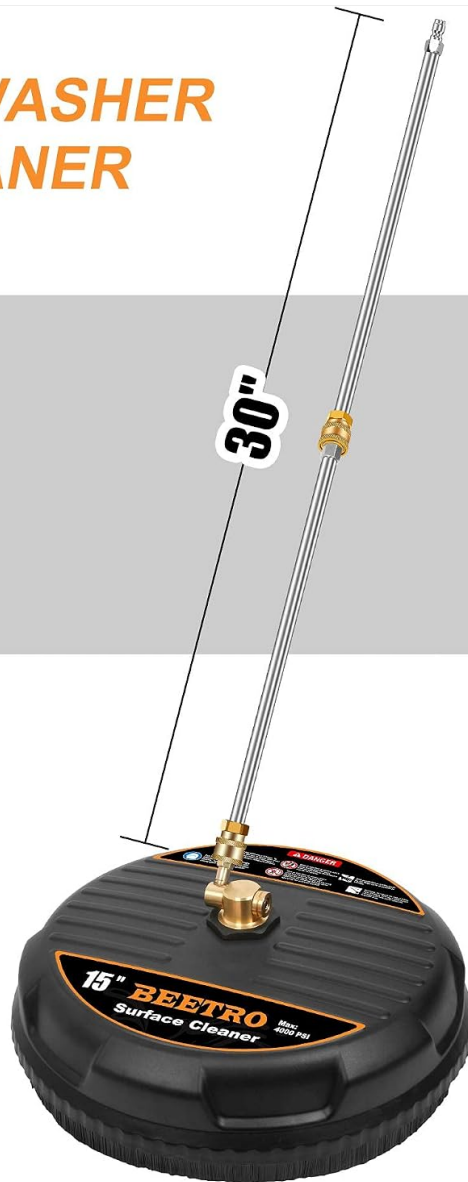

Included components: Surface Cleaner, Extension Wands, and various spray nozzles.

3. Setup

Follow these steps to assemble and connect your surface cleaner to your pressure washer:


1. **Connect Extension Wands:** Attach the two 15-inch extension wands together using their 1/4-inch quick connectors. Ensure they are securely locked.
2. **Attach to Surface Cleaner:** Connect the assembled extension wands to the 1/4-inch quick plug on top of the BEETRO surface cleaner. Pull back the collar on the quick connector, insert the plug, and release the collar to lock it in place.
3. **Connect to Pressure Washer:** Attach the other end of the extension wands to your pressure washer gun. Ensure all connections are tight and leak-free.
4. **Select Nozzle:** Choose the appropriate spray nozzle for your cleaning task and insert it into your pressure washer gun (if not using the surface cleaner directly). The surface cleaner has its own internal rotating jets.

Removable Strainer

Remove Impurities
Prevent nozzle blockage



Connecting the 1/4-inch quick plug to the surface cleaner.

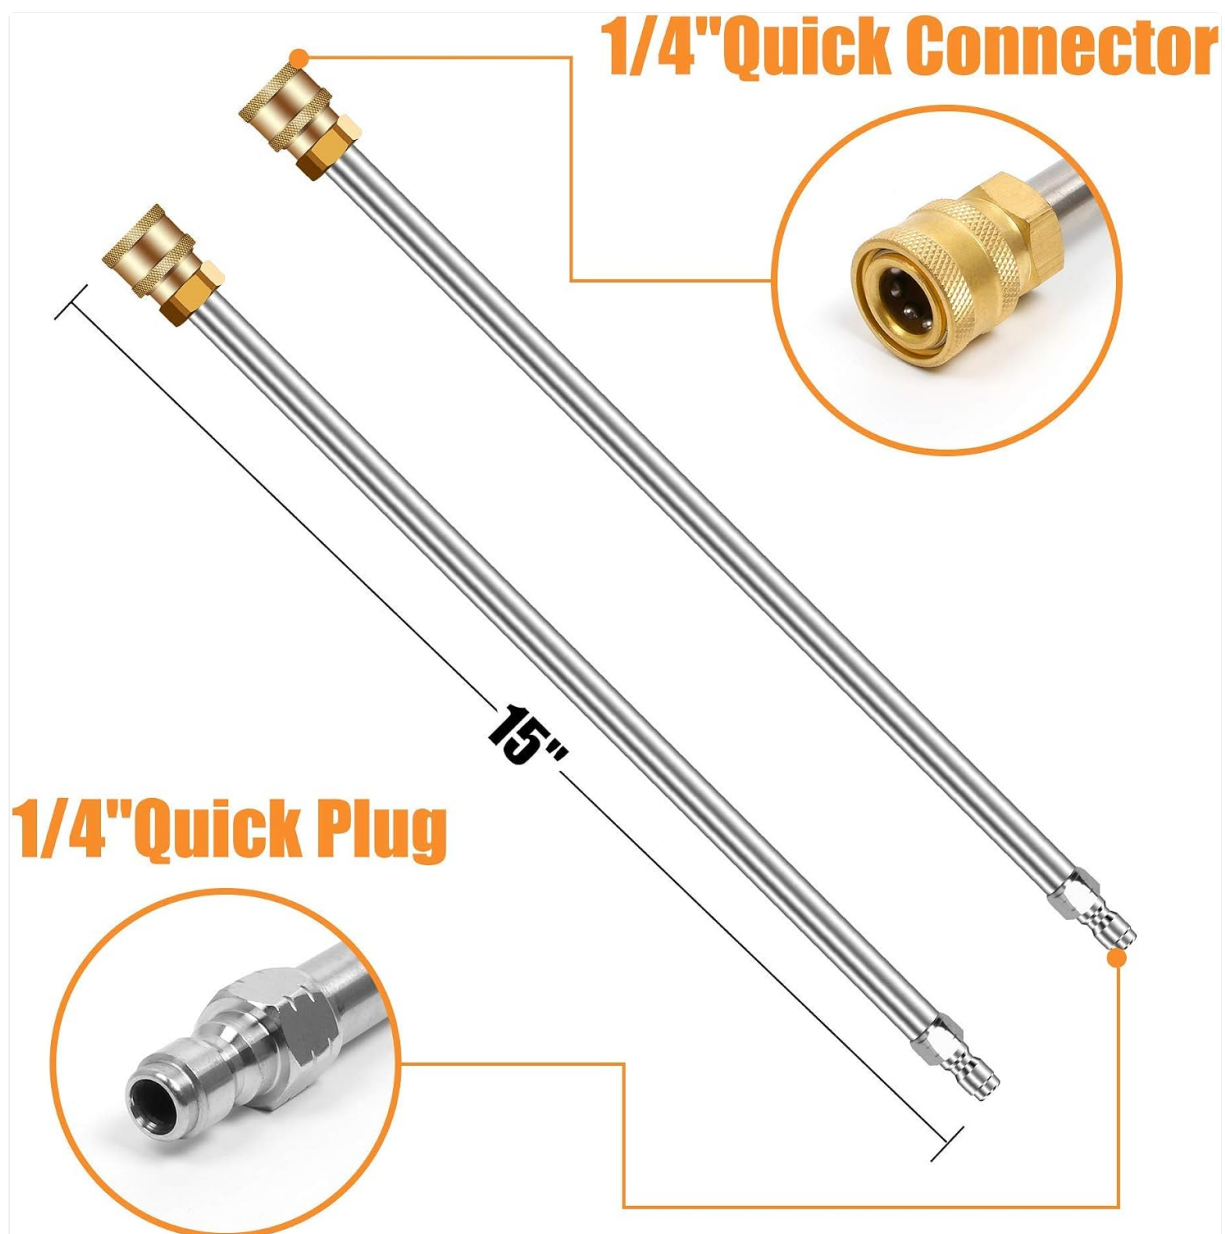

The two 15-inch extension wands with quick connectors.

Setup Demonstration Video:

Your browser does not support the video tag.

Official product video demonstrating the BEETRO 15-inch Surface Cleaner in action, highlighting its dual high-pressure rotating jets and splash-free skirt for efficient cleaning of various surfaces.

4. Operating Instructions

The BEETRO 15-inch Surface Cleaner is designed for efficient and streak-free cleaning of large flat areas. It features dual high-pressure rotating jets that clean a 15-inch wide path up to 5 times faster than a standard nozzle.


1. **Prepare the Area:** Clear the cleaning area of any loose debris, furniture, or obstacles.
2. **Start Pressure Washer:** Turn on your pressure washer according to its manufacturer's instructions.
3. **Begin Cleaning:** Place the surface cleaner flat on the surface to be cleaned. Squeeze the trigger on your pressure washer gun to start the water flow. Move the surface cleaner slowly and steadily across the surface in overlapping passes. The splash-free skirt will help keep you dry during operation.

4. **Avoid Streaks:** To prevent streaking, maintain a consistent speed and overlap your passes slightly. Do not lift the cleaner off the surface while the water is flowing.
5. **Nozzle Selection (for separate use):** The included 5 spray nozzles can be used with your pressure washer gun for specific tasks not suited for the surface cleaner.
 - **0° (Red):** For high-reach areas or stubborn spots.
 - **15° (Yellow):** For concrete, brick, and other hard surfaces with tough stains.
 - **25° (Green):** Ideal for wooden surfaces, fences, and lawn mowers.
 - **40° (White):** Gentle cleaning for windows or screens.
 - **65° (Black):** For applying detergents.




Dual high-pressure rotating jets for efficient cleaning.

5 Different angles spray nozzle tips, meet your different needs.

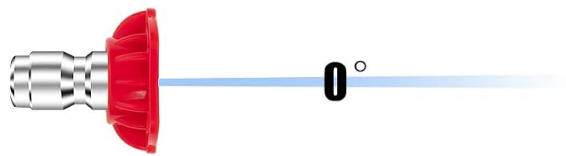

Use to clean high area or hard to reach place

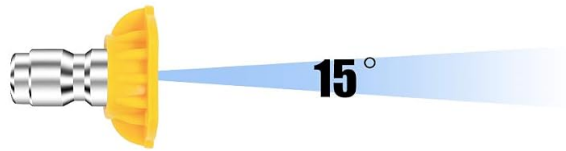


Use to clean concrete, brick and other hard surfaces with stubborn stains



Use to clean wooden surfaces, fences and lawn mowers



Use to clean windows or screens

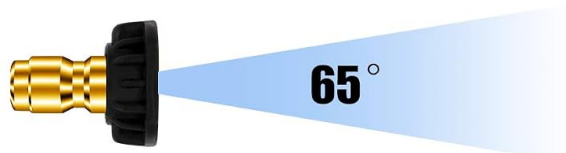

Use to spray detergents



Guide to the five included spray nozzle tips and their applications.



The surface cleaner effectively cleaning a wooden deck.

5. Maintenance

Regular maintenance ensures optimal performance and extends the life of your surface cleaner.

- **Clean Removable Strainer:** The surface cleaner features a removable strainer to prevent nozzle blockage. Periodically remove and clean this strainer to ensure unobstructed water flow. Refer to the image in the Setup section for its location.
- **Inspect Nozzles:** Regularly check the internal rotating jets for any clogs or damage. Clear any debris

using a nozzle cleaning tool (not included) or a thin wire.

- **Storage:** After each use, rinse the surface cleaner thoroughly with clean water. Store it in a dry, protected area away from freezing temperatures.

6. Troubleshooting

If you encounter issues with your BEETRO surface cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Loss of pressure or reduced cleaning power	Clogged removable strainer or internal nozzles.	Remove and clean the strainer. Inspect and clear any debris from the internal rotating jets. Ensure all connections are tight.
Streaking on cleaned surface	Moving the cleaner too quickly or inconsistent overlap.	Slow down your cleaning pace and ensure consistent, slightly overlapping passes.
Water leaking from connections	Loose connections or worn O-rings.	Tighten all quick-connect fittings. Inspect O-rings for wear and replace if necessary (replacement seals are typically included).

7. Specifications

- **Product Dimensions:** 15"L x 15"W x 5.1"H
- **Item Weight:** 4.4 Pounds
- **Maximum Pressure:** 4000 PSI
- **Working Pressure:** 2000 to 4000 PSI
- **Cleaning Area:** 15 inches
- **Connection Type:** 1/4-inch Quick Connector
- **Power Source:** Electric or gas pressure washer (not included)
- **Model Number:** TC0364A
- **UPC:** 603813099348

8. Warranty and Support

BEETRO products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or visit the official BEETRO website. If you require technical assistance, have questions about product operation, or need to report a missing/damaged part, please contact BEETRO customer support directly. Contact information can typically be found on the product packaging or the BEETRO brand store.