

[manuals.plus](#) /

› [Saphe](#) /

› [Saphe Drive Pro Speed Camera Detector User Manual](#)

Saphe Drive Pro

Saphe Drive Pro Speed Camera Detector User Manual

MODEL: DRIVE PRO

Brand: Saphe

INTRODUCTION

The Saphe Drive Pro is a speed camera detector designed to alert drivers to upcoming speed cameras and hazards across Europe. It features a color display and is compatible with Apple CarPlay and Android Auto, enhancing your driving experience by providing timely traffic information.

What's in the Box:

- 1 x Saphe Drive Pro speed camera detector
- 2 x Saphe Drive Pro mounts
- Saphe Drive Pro adhesive pads
- Charging cable (USB-C)



The Sapeh Drive Pro device features a color display showing speed limits, current speed, and alerts for speed cameras and hazards.

SETUP

1. Unboxing and Initial Inspection

Carefully unpack all components and ensure that all items listed in the 'What's in the Box' section are present and undamaged.



The front of the Sapeh Drive Pro packaging, highlighting its purpose to avoid accidents and speeding fines. It also notes that a subscription is not included.



The side of the Saphe Drive Pro packaging, indicating it functions as a 'Traffic alarm' and shows icons for Google Play and App Store.



The back of the Saphe Drive Pro packaging, detailing included items (Drive Pro, USB-C cable, mounting kit) and types of alerts (speed camera, danger, speed limit, car on shoulder). It also mentions the requirement for a paid subscription and provides a QR code for more information. For more details, visit saphe.com/drive.

2. Charging the Device

Before first use, fully charge your Saphe Drive Pro using the provided USB-C cable. Connect the cable to the device and a suitable USB power source (e.g., car charger, computer USB port). The device's display will indicate charging status.

3. Mounting the Device

Use the included mounts and adhesive pads to securely attach the Saphe Drive Pro to your dashboard or windshield. Choose a location that does not obstruct your view of the road and allows for easy access to the device buttons.

4. App Installation and Pairing

The Saphe Drive Pro requires the Saphe Link App to function. Download the app from the Apple App Store or Google Play Store on your smartphone. Once installed, open the app and follow the on-screen instructions to pair your device via Bluetooth. Ensure your phone's Bluetooth is enabled.




A screenshot of the Saphe Link App interface, displaying a map with a mobile speed camera alert and a list of various alert types including mobile speed camera, stationary camera, distance control, red light, accident, car on shoulder, and general danger.

OPERATING INSTRUCTIONS

1. Automatic Start and Connectivity

Once paired with your smartphone and within Bluetooth range, the Saphe Drive Pro will automatically turn on and connect when you start your vehicle. It relies on your phone's internet connection for real-time traffic data.

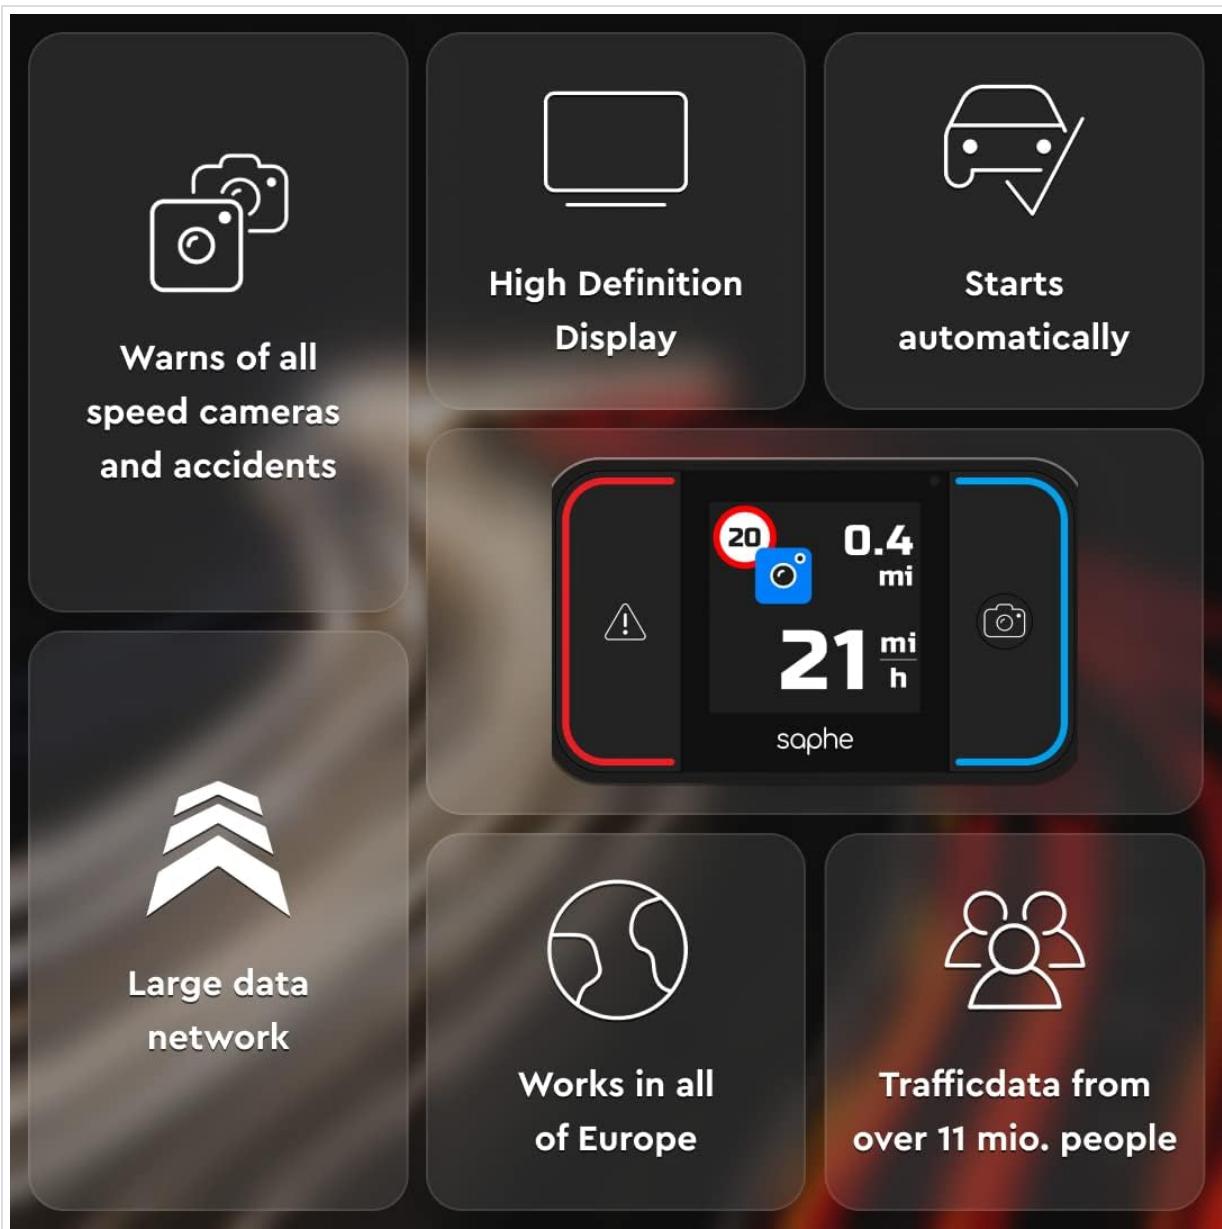


An infographic highlighting key features of the Saphe Drive Pro: warns of speed cameras and accidents, high definition display, starts automatically, large data network, works in all of Europe, and traffic data from over 11 million people.

2. Display Information

The 1.54-inch color display provides clear visual alerts. When approaching a speed camera or hazard, the display will show:

- **Type of alarm:** Indicated by an icon (e.g., speed camera, danger triangle).
- **Distance to incident:** Shows how far away the alert is.
- **Current speed:** Displays your vehicle's current speed.
- **Speed limit:** Where available, the current speed limit will be shown.

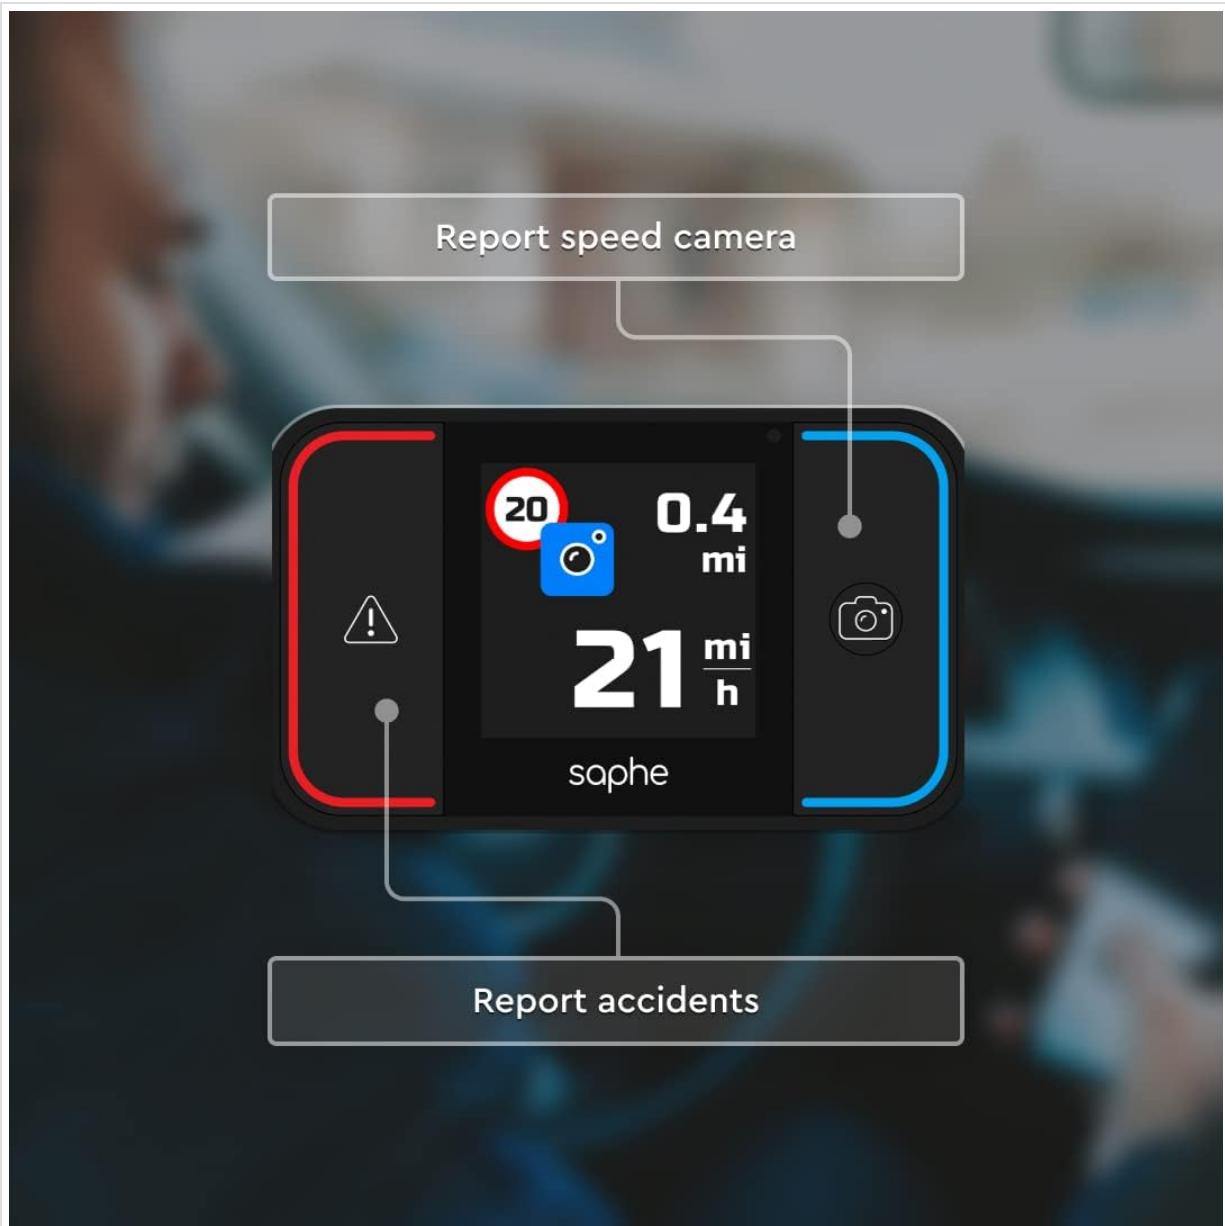

An image of the Sophe Drive Pro display with labels pointing to 'Type of alarm', 'Distance to incident', and 'Current speed', illustrating how information is presented to the user.

3. Reporting Incidents

You can contribute to the community data by reporting incidents directly from your device:

- To report a **speed camera**, press the button on the right side of the device.
- To report an **accident or hazard**, press the button on the left side of the device.



An illustration of the Saphe Drive Pro device showing how to report a speed camera using the right button and report accidents using the left button.

4. Subscription Requirement

The Saphe Drive Pro requires a paid Saphe Premium subscription for full functionality, including access to the extensive traffic community data and future software updates. The subscription is sold separately.

MAINTENANCE

1. Cleaning

To clean your Saphe Drive Pro, gently wipe the device with a soft, dry, or slightly damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the display and casing.

2. Battery Care

The device contains a Lithium Ion battery. For optimal battery life, avoid exposing the device to extreme temperatures. Recharge the device when the battery indicator shows low power. Do not attempt to replace the battery yourself.

3. Software Updates

Ensure your Saphe Premium subscription is active to receive automatic software updates, which provide new features, improvements, and database updates for speed cameras and hazards.

TROUBLESHOOTING

1. Device Not Connecting

- Ensure your smartphone's Bluetooth is enabled.
- Verify that the Saphe Link App is running in the background or foreground.
- Check your phone's internet connection, as the device relies on it for data.
- Restart both your phone and the Saphe Drive Pro device.

2. Inaccurate or Missing Alerts

- Confirm your Saphe Premium subscription is active.
- Ensure your phone has a stable internet connection.
- The device relies on community data; newly installed cameras or temporary hazards may not be immediately in the database. You can report them using the device buttons.

3. Battery Life Issues

- Ensure the device is fully charged before use.
- Battery life can vary based on usage and environmental conditions.
- If battery life significantly degrades, contact customer support.

SPECIFICATIONS

- **Batteries:** 1 Lithium Ion battery (included)
- **Language:** English
- **Product Dimensions:** 6.92 x 4.22 x 2.03 cm
- **Weight:** 100 g
- **Manufacturer:** Saphe
- **ASIN:** B08J48BCB4
- **Item Model Number:** 5714901010130
- **Compatible Devices:** Cars, trucks, motorcycles

WARRANTY AND SUPPORT

Warranty Information

Your Saphe Drive Pro device is covered by a manufacturer's warranty. Please refer to the warranty documentation included with your purchase or visit the official Saphe website for detailed terms and conditions.

Customer Support

For technical assistance, troubleshooting, or further inquiries, please visit the official Saphe website at saphe.com/drive. You may find FAQs, support articles, and contact information there.

Related Documents - Drive Pro

