

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HP](#) /

› [HP 240 G7 Laptop User Manual - Model 1S5F1PA#ACJ](#)

HP 1S5F1PA#ACJ

HP 240 G7 Laptop User Manual

MODEL: 1S5F1PA#ACJ

Introduction

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your HP 240 G7 Laptop, Model 1S5F1PA#ACJ. Please read this guide thoroughly to ensure proper use and to maximize the lifespan of your device.



Image: Front view of the HP 240 G7 Laptop with the screen displaying the Windows operating system desktop.

Package Contents

Verify that the following items are included in your product package:

- HP 240 G7 Laptop (Model 1S5F1PA#ACJ)
- AC Power Adapter and Power Cord
- Documentation (Quick Start Guide, Warranty Information)

Product Overview

Familiarize yourself with the physical features and ports of your HP 240 G7 Laptop.

Left Side Components



Image: Left side of the laptop, illustrating the various ports and connectors.

- **AC Power Connector:** For connecting the power adapter.
- **RJ-45 (Ethernet) Port:** For wired network connections.
- **HDMI 1.4b Port:** For connecting to external displays or projectors.
- **USB 3.1 Gen 1 Ports (x2):** For connecting high-speed USB devices.
- **Headphone/Microphone Combo Jack:** For connecting a headset or external audio devices.

Right Side Components



Image: Right side of the laptop, illustrating the USB port and media card reader.

- **Security Lock Slot:** For attaching a security cable.
- **USB 2.0 Port:** For connecting standard USB devices.
- **Multi-Format Digital Media Reader:** Supports SD, SDHC, and SDXC memory cards.

Top and Back Views



Image: Top-down view of the laptop with the lid closed, showing the HP logo.

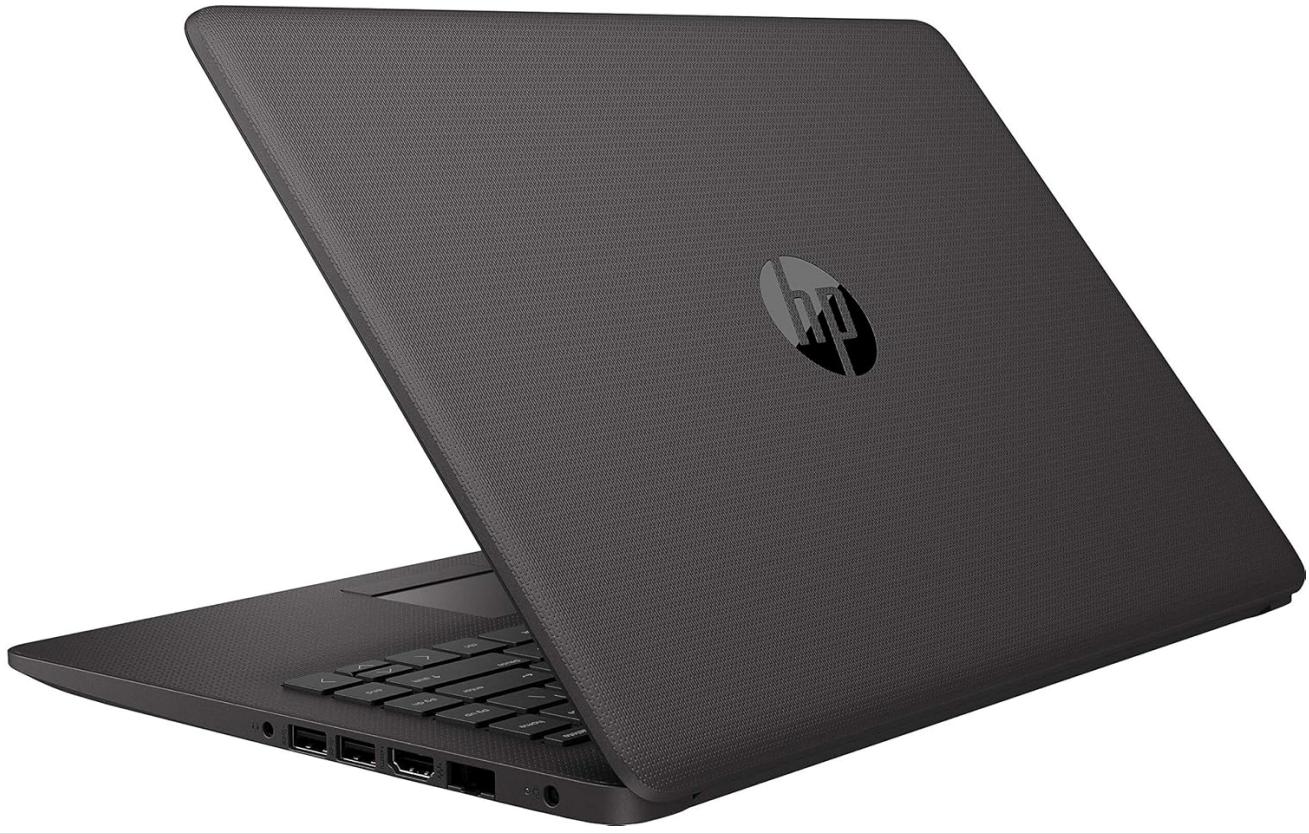


Image: Angled view of the laptop's back, highlighting the textured finish and HP logo.

The top cover features the HP logo. The back of the laptop is designed for durability and aesthetics.

Setup

- 1. Connect Power:** Plug the AC power adapter into the laptop's AC power connector and then into a wall outlet.
- 2. Initial Power On:** Open the laptop lid and press the power button. The laptop will begin its initial boot sequence.
- 3. Operating System Setup:** Follow the on-screen instructions to complete the Windows 10 Pro setup, including language selection, network connection, and user account creation.

Operating

Power Management

- Power On:** Press the power button located on the keyboard deck.
- Shut Down:** Click the Start button, then Power > Shut down.
- Sleep Mode:** Click the Start button, then Power > Sleep, or close the laptop lid.

Keyboard and Touchpad

- Keyboard:** Use the integrated keyboard for typing. Function keys (F1-F12) provide shortcuts for various system functions when pressed with the Fn key.
- Touchpad:** The touchpad supports multi-touch gestures for navigation, scrolling, and zooming. Refer to Windows settings for customization.

Connectivity

- Wi-Fi:** Connect to wireless networks via the Realtek RTL8822CE 802.11a/b/g/n/ac (2x2) Wi-Fi adapter. Access Wi-Fi settings through the Windows taskbar.

- **Bluetooth:** Pair Bluetooth 5 compatible devices such as headphones or mice. Manage Bluetooth devices in Windows settings.
- **External Displays:** Connect an external monitor or projector using the HDMI 1.4b port. Press **Windows key + P** to manage display modes.

Maintenance

- **Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner to clean the display and exterior surfaces. Avoid harsh chemicals.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Periodically allow the battery to discharge partially before recharging.
- **Software Updates:** Regularly check for and install Windows updates and HP driver updates to ensure optimal performance and security.
- **Data Backup:** Regularly back up important data to an external drive or cloud storage to prevent data loss.

Troubleshooting

This section addresses common issues you might encounter with your HP 240 G7 Laptop.

System Performance Issues

- **Slow Performance:** If the system feels slow, check for background applications consuming resources. Ensure sufficient free space on the hard drive. Consider upgrading RAM if performance remains an issue for your usage.
- **Laptop Not Booting:** Ensure the power adapter is securely connected and the battery has sufficient charge. Try performing a hard reset by holding the power button for 15 seconds. If the issue persists, contact HP Support.

Display and Graphics

- **Whitish/Dull Screen:** Adjust display brightness and contrast settings in Windows. Ensure display drivers are up to date. Note that the display resolution is 1366 x 768, which may appear less sharp compared to higher-resolution screens.
- **No Display:** If the screen is black, try connecting an external monitor to verify if the issue is with the laptop's internal display. Restart the laptop.

Overheating

- **Excessive Heat:** Ensure the laptop's vents are not obstructed. Use the laptop on a hard, flat surface to allow for proper airflow. Avoid operating in direct sunlight or hot environments. If a specific area, like the palm rest, feels excessively hot, this could indicate internal component heat. Ensure all system drivers and BIOS are updated.

For further assistance, refer to the HP support website or contact their customer service.

Specifications

Feature	Detail
Model Name	HP 240 G7

Item Model Number	1S5F1PA#ACJ
Processor	Intel Core i3-1005G1 (1.2 GHz base, up to 3.4 GHz with Intel Turbo Boost, 4 MB L3 Cache, 2 Cores)
RAM	4 GB DDR4-2666 SDRAM (1 x 4 GB)
Storage	1 TB 5400 RPM SATA HDD
Display	14-inch Diagonal, HD (1366 x 768), Anti-glare, 220 Nits, 45% NTSC
Graphics	Intel UHD Graphics
Operating System	Windows 10 Pro
Wireless Connectivity	Realtek RTL8822CE 802.11a/b/g/n/ac (2x2) Wi-Fi and Bluetooth 5 Combo
Ports	2x USB 3.1 Gen 1, 1x USB 2.0, 1x HDMI 1.4b, 1x RJ-45, 1x Headphone/Microphone Combo, 1x AC Power, 1x Multi-Format Digital Media Reader
Dimensions (W x D x H)	33.5 x 23.4 x 1.99 cm
Weight	1.52 kg
Battery	Lithium Battery, 4.9 Watt Hours

Warranty and Support

Your HP 240 G7 Laptop comes with a standard manufacturer's warranty. Please refer to the warranty documentation included in your package for specific terms and conditions.

For technical support, driver downloads, or service inquiries, please visit the official HP support website or contact HP customer service. You can find more information and resources on the [HP Store on Amazon](#) or the main HP website.