

Manuals.plus /

› Philips /

› Philips TAM6805/10 Micro Music System User Manual

Philips TAM6805/10

Philips TAM6805/10 Micro Music System User Manual

Model: TAM6805/10

1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Philips TAM6805/10 Micro Music System. This all-in-one audio system features Internet radio, DAB+, FM radio, a CD player, Bluetooth connectivity, USB playback, and Spotify Connect. Its bass-reflex speaker system delivers rich sound quality.

Please read this manual thoroughly before using the device to ensure proper and safe operation.

2. PACKAGE CONTENTS

Verify that all items are present in the packaging:

- Philips TAM6805/10 Micro Music System unit
- 2 x AC Power Cords
- FM Antenna
- Remote Control
- 2 x AAA Batteries (for remote control)
- Quick Start Guide
- Warranty Booklet

3. INITIAL SETUP

3.1 Unpacking and Placement

Carefully remove the unit from its packaging. Place the micro music system on a stable, flat surface, ensuring

adequate ventilation around the unit. Avoid placing it near heat sources or in direct sunlight.

3.2 Connecting the FM Antenna

Connect the supplied FM antenna to the FM antenna jack on the rear of the unit. Extend the antenna fully for optimal FM reception.

3.3 Power Connection

Connect one end of the AC power cord to the AC IN socket on the back of the micro music system and the other end to a wall power outlet.



Image: Front view of the Philips TAM6805/10 Micro Music System, showcasing the display, control knobs, and speaker grilles.

3.4 Initial Power On and Setup Wizard

Press the Power button on the unit or remote control to turn on the system. The first time you power on, the system will guide you through an initial setup wizard. This typically includes:

- **Language Selection:** Choose your preferred language.
- **Network Connection:** Connect to your Wi-Fi network for Internet radio and Spotify Connect functionality. Follow the on-screen prompts to select your network and enter the password.
- **Time and Date Setting:** Set the current time and date.



Image: Close-up of the Philips TAM6805/10 display, showing various menu icons for different audio sources like Internet radio, Bluetooth, and CD.

4. OPERATING INSTRUCTIONS

4.1 Source Selection

Use the 'Source' button on the unit or remote control, or navigate through the on-screen menu, to select your desired audio source (e.g., CD, FM, DAB+, Internet Radio, Bluetooth, USB).

4.2 CD Playback

1. Select 'CD' as the source.
2. Gently insert a CD into the disc slot with the label side facing up. The system will automatically load the CD and begin playback.
3. Use the Play/Pause, Stop, Skip Forward, and Skip Backward buttons to control playback.

4.3 Radio Operation (FM, DAB+, Internet Radio)

1. Select 'FM', 'DAB+', or 'Internet Radio' as the source.
2. **Tuning:** For FM/DAB+, use the tuning knob or seek buttons to find stations. For Internet Radio, browse by genre, location, or search for specific stations using the on-screen menu.
3. **Presets:** To save a station, tune to it, then press and hold a preset number button (1-20) until the display confirms it's saved. To recall a preset, press the corresponding number button.



Image: Detailed view of the control panel buttons on the Philips TAM6805/10, highlighting the DAB+ and Bluetooth indicators.

4.4 Bluetooth Connectivity

1. Select 'Bluetooth' as the source. The system will enter pairing mode automatically or you may need to select 'Pairing' from the menu.
2. On your Bluetooth-enabled device (smartphone, tablet), search for available devices and select 'Philips TAM6805/10'.
3. Once paired, you can stream audio from your device to the micro music system.

4.5 USB Playback

1. Insert a USB storage device (e.g., USB flash drive) into the USB port on the front of the unit.
2. Select 'USB' as the source.
3. Navigate through the folders and files on your USB device using the control knobs or remote control.

4.6 Spotify Connect

To use Spotify Connect, ensure your micro music system is connected to the internet and your smartphone/tablet is on the same Wi-Fi network. Open the Spotify app on your device, play a song, and then select the 'Devices Available' icon. Choose 'Philips TAM6805/10' to stream music directly to your system.

5. MAINTENANCE

5.1 Cleaning

Always unplug the device from the power outlet before cleaning. Use a soft, dry cloth to clean the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. For the CD lens, use a specialized CD lens cleaner.

5.2 Storage

If you do not plan to use the system for an extended period, unplug it from the power outlet and store it in a cool, dry place, away from direct sunlight and excessive dust.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active.	Ensure power cord is securely connected. Test the outlet with another device.
No sound	Volume too low; Mute function active; Incorrect source selected.	Increase volume. Deactivate mute. Select the correct audio source.
Poor radio reception	Antenna not properly positioned; Interference.	Adjust the position of the FM antenna. Move the unit away from other electronic devices.
Bluetooth pairing fails	Device too far; Bluetooth not enabled on source device; System not in pairing mode.	Ensure devices are within range. Enable Bluetooth on your device. Put the system into Bluetooth pairing mode.
Internet Radio not working	No Wi-Fi connection; Incorrect network settings.	Check your Wi-Fi router and network connection. Re-enter Wi-Fi settings via the setup wizard.

7. SPECIFICATIONS

- **Model Name:** TAM6805/10
- **Brand:** Philips
- **Color:** Black
- **Material:** Metal
- **Speaker Type:** Stereo
- **Speaker Size:** 3 Inches
- **Maximum Speaker Output Power:** 50 Watts
- **Frequency Response:** 20000 Hz
- **Connectivity Technology:** Bluetooth
- **Wireless Communication Technology:** Bluetooth
- **Special Features:** Bluetooth, USB Port
- **Control Method:** Application

- **Power Source:** Electric Cable
- **Input Voltage:** 230 Volts
- **Item Weight:** 4.4 Kilograms
- **Mounting Type:** Table Mount
- **Number of Units:** 1
- **Rechargeable Battery:** No
- **Battery Composition (for remote):** Alkaline
- **Manufacturer:** TP Vision
- **Country of Origin:** China

8. WARRANTY AND SUPPORT

This Philips Micro Music System is covered by a manufacturer's warranty. Please refer to the included warranty booklet for detailed terms and conditions, including warranty period and claim procedures.

For technical support, service, or further assistance, please visit the official Philips support website or contact your local Philips customer service center. Contact information can typically be found in the warranty booklet or on the Philips website.