

MZK MZK-GT-01

MZK 7.2V Cordless 2-in-1 Grass Shear & Hedge Trimmer Instruction Manual

Model: MZK-GT-01

INTRODUCTION

Thank you for choosing the MZK 7.2V Cordless 2-in-1 Grass Shear & Hedge Trimmer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your tool. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: Read all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always use safety glasses and gloves when operating.
- Keep bystanders at a safe distance to avoid injury from flying debris.
- Do not operate in wet conditions.
- Always unplug or remove the battery before performing maintenance or cleaning.
- Ensure the double lock safety mechanism is engaged before operation.

PRODUCT COMPONENTS

The MZK 7.2V Cordless 2-in-1 Grass Shear & Hedge Trimmer comes with the main unit, a grass shear blade, a hedge trimmer blade, and a removable battery with charger.



Image: The MZK 7.2V Cordless 2-in-1 Grass Shear & Hedge Trimmer, showing the main unit, the grass shear blade, the hedge trimmer blade, and the removable battery.

SETUP AND ASSEMBLY

1. Charging the Battery

The unit features a removable 7.2V Lithium-Ion battery. For optimal performance, fully charge the battery before first use. The battery can be charged separately from the main unit.



Image: Illustration of the removable 7.2V 1500mAh Lithium battery and its charging process.

The LED power display on the tool indicates the battery charge level. It is recommended to allow the battery to go through approximately five full charge/discharge cycles to achieve its full capacity.

2. Attaching/Detaching Blades

The MZK 2-in-1 tool allows for quick and easy blade replacement between the grass shear and hedge trimmer blades.

1. Ensure the tool is turned off and the battery is removed before changing blades.
2. To detach a blade, locate the release mechanism (usually a button or latch) on the tool head and press/slide it. The blade attachment can then be removed.
3. To attach a blade, align the new blade attachment with the tool head and push it firmly until it clicks into place. Ensure it is securely fastened.

QUICK BLADE REPLACEMENT

Safe Not to Fall Off



**Embedded
Design**



**Stainless
Steel Gear**

MZK

Image: Detail of the quick blade replacement system, highlighting the embedded design and stainless steel gear for secure attachment.

Your browser does not support the video tag.

Video: This video demonstrates the MZK 7.2V 2-in-1 Cordless Grass Shear & Hedge Trimmer in use, showcasing its functionality and ease of blade changes.

OPERATING INSTRUCTIONS

1. Powering On/Off and Safety Lock

The tool is equipped with a dual safety lock mechanism to prevent accidental starting. To operate:

1. Press and hold the safety lock button (usually located on the side of the handle).
2. While holding the safety lock, press the main power trigger.
3. Release the safety lock button once the tool is running, keeping the power trigger pressed to continue operation.
4. To turn off, release the power trigger.

2. Using the Grass Shear Blade

The short blade is designed for trimming grass in areas inaccessible to a lawnmower, such as around flowerbeds, edges, or obstacles.

- Attach the grass shear blade securely.
- Hold the tool firmly and guide the blade along the desired cutting path.
- Avoid contact with hard surfaces like stones or concrete to prevent blade damage.



Image: The MZK cordless grass shear being used to trim grass along a garden edge.

3. Using the Hedge Trimmer Blade

The long blade is suitable for shaping and trimming hedges, shrubs, and small branches.

- Attach the hedge trimmer blade securely.
- Use a smooth, sweeping motion to cut through foliage.
- The 180° rotatable handle design allows for comfortable operation at various angles. Adjust the handle by pressing the rotation button and turning it to the desired position (0°, 90°, or 180°).

- Do not attempt to cut branches thicker than 1/8 inch (approximately 3mm) to avoid damaging the blades or motor.



Image: The 180° rotatable handle design of the MZK hedge trimmer, illustrating its flexibility for different trimming angles.

Your browser does not support the video tag.

Video: This video demonstrates the MZK 7.2V 2-in-1 Cordless Grass Shear & Hedge Trimmer in use, showcasing its functionality and ease of blade changes.

MAINTENANCE AND CARE

- **Cleaning:** After each use, ensure the tool is turned off and the battery is removed. Clean the blades and housing with a damp cloth. Remove any debris, grass, or sap from the blades to prevent rust and maintain sharpness.
- **Blade Lubrication:** Periodically apply a light machine oil to the blades to ensure smooth operation and prevent corrosion.
- **Storage:** Store the tool in a dry, secure place, out of reach of children. Ensure the blade guard is in place when storing.
- **Battery Care:** Store the battery in a cool, dry place. Do not store fully discharged. Charge the battery every 3-6 months if not in regular use to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not start	Battery not charged; Safety lock not engaged; Battery not properly inserted.	Charge battery; Ensure safety lock and trigger are pressed simultaneously; Reinsert battery firmly.
Blades not cutting effectively	Blades are dull or dirty; Material being cut is too thick.	Clean and lubricate blades; Sharpen or replace blades if necessary; Do not attempt to cut oversized material.
Tool stops during operation	Battery is low; Overload protection activated.	Recharge battery; Reduce load on the tool, allow it to cool down if overheated.

SPECIFICATIONS

- **Brand:** MZK
- **Model:** MZK-GT-01
- **Power Source:** Battery Powered
- **Battery Type:** 7.2V Lithium Ion (1 required)
- **Item Weight:** 2 Pounds (approx. 0.91 kg)
- **Blade Length:** 7.8 Inches (Hedge Trimmer)
- **Blade Material:** High Carbon Steel
- **Speed:** 1100 RPM
- **Product Dimensions:** 4.9"L x 5.35"W x 13.4"H (approx. 12.4cm L x 13.6cm W x 34cm H)
- **Manufacturer:** ZAKER
- **UPC:** 610452345583

WARRANTY AND SUPPORT

For any questions, problems, or support needs regarding your MZK tool, please feel free to contact us. We are committed to assisting you with any issues you may encounter.

Please refer to your purchase documentation for specific warranty details and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question