

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER 3-in-1 Stick Vacuum Cleaner BXVMS600E User Manual

BLACK+DECKER BXVMS600E

BLACK+DECKER 3-in-1 Stick Vacuum Cleaner

MODEL: BXVMS600E

User Manual

Introduction

Thank you for choosing the BLACK+DECKER BXVMS600E 3-in-1 Stick Vacuum Cleaner. This versatile appliance is designed to provide efficient and convenient cleaning for your home. Please read this manual thoroughly before operating the vacuum cleaner to ensure safe and optimal performance. Keep this manual for future reference.

General Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Power Supply:** Ensure the voltage rating on the appliance matches your local power supply before connecting.
- **Cord Care:** Do not pull the power cord to unplug the appliance. Always grasp the plug. Keep the cord away from heated surfaces.
- **Wet Surfaces:** Do not use the vacuum cleaner on wet surfaces or to pick up liquids. This appliance is for dry vacuuming only.
- **Filter Maintenance:** Regularly clean the filters as instructed in the Maintenance section. Clogged filters can lead to reduced suction and motor overheating.
- **Attachments:** Use only manufacturer-recommended attachments.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Do not allow children to operate the vacuum cleaner.
- **Storage:** Store the vacuum cleaner in a dry, safe place when not in use.
- **Damage:** Do not operate the appliance if the power cord or plug is damaged, or if the appliance has been dropped or damaged in any way. Contact customer support for repair.

Product Overview and Components

The BLACK+DECKER BXVMS600E is a versatile 3-in-1 vacuum cleaner, functioning as a stick vacuum, handheld vacuum, and with an extension tube for various cleaning tasks. Below are the main components:

- Main Motor Unit with Dust Tank
- Extension Tube (Telescopic Tube)

- Floor Nozzle
- Crevice Tool (for corners and hard-to-reach areas)
- Upholstery Brush (for furniture and fabrics)
- Power Cord (6 meters long)
- Washable Filters (Pre-filter and EPA filter)



Figure 1: The BLACK+DECKER BXVMS600E 3-in-1 Stick Vacuum Cleaner in its assembled stick vacuum configuration, showcasing its sleek blue and grey design. This image provides a full view of the product, including the main motor unit, extension tube, and floor nozzle.



Figure 2: The BLACK+DECKER BXVMS600E vacuum cleaner shown in use, highlighting its 600W power and 6-meter cable length for extended reach and consistent performance.



Figure 3: This image illustrates the 3-in-1 functionality of the BLACK+DECKER BXVMS600E. It shows the vacuum cleaner configured as a stick vacuum for floor cleaning, a handheld vacuum for upholstery, and with the extension tube for reaching high areas or corners.

Setup

Follow these steps to assemble your vacuum cleaner:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Stick Vacuum:**
 - Insert the extension tube into the main motor unit until it clicks securely into place.
 - Attach the floor nozzle to the other end of the extension tube, ensuring it is firmly connected.
3. **Handheld Configuration:** To use as a handheld vacuum, detach the extension tube and floor nozzle from the main motor unit. You can then directly attach the crevice tool or upholstery brush to the main motor unit.
4. **Power Connection:** Unwind the 6-meter power cord and plug it into a suitable electrical outlet.

Operating Instructions

The BLACK+DECKER BXVMS600E is designed for ease of use across various surfaces.

- **Power On/Off:** Locate the power switch on the main motor unit. Press it to turn the vacuum cleaner on or off.
- **Floor Cleaning (Stick Vacuum Mode):**
 - Ensure the floor nozzle is attached.
 - The floor nozzle is suitable for all floor types, including parquet, hard floors, carpets, and rugs.
 - Maneuver the vacuum cleaner across the desired surface. The lightweight design (2.5 kg) and flexible floor nozzle allow for easy movement around furniture and into corners.
- **Above-Floor Cleaning (Handheld Mode):**
 - Detach the extension tube and floor nozzle.
 - Attach the crevice tool for narrow spaces, edges, and corners.
 - Attach the upholstery brush for cleaning sofas, chairs, and other fabric surfaces.

**WASHABLE
FILTER**



Figure 4: A user demonstrating the handheld functionality of the BLACK+DECKER BXVMS600E, using the upholstery brush attachment to

clean a blanket on a wooden stool. This highlights the versatility for cleaning furniture and other elevated surfaces.

Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner. Always unplug the appliance before performing any maintenance.

1. Emptying the Dust Tank:

- The vacuum cleaner features a large capacity dust tank, reducing the frequency of emptying.
- To empty, press the release button on the main motor unit to detach the dust tank.
- Position the dust tank over a waste bin and open the bottom flap to release collected debris.
- Reattach the dust tank to the main motor unit, ensuring it clicks securely.

2. Cleaning the Filters:

The BXVMS600E features a 3-phase filtration system including a micro-perforated stainless steel pre-filter and an EPA filter. Regular cleaning of these filters is crucial to maintain suction power and prevent motor overheating.

- Detach the dust tank from the main unit.
- Remove the pre-filter and EPA filter from inside the dust tank.
- Both filters are removable and washable. Tap off loose dirt over a bin.
- Rinse the filters under cool running water until the water runs clear.
- Allow the filters to air dry completely for at least 24 hours before reinserting them into the dust tank. Do not use heat to dry.
- Reassemble the filters and dust tank, then reattach to the vacuum cleaner.



Figure 5: A hand demonstrating the removal of the large capacity dust tank from the main unit of the BLACK+DECKER BXVMS600E, illustrating the ease of emptying and filter access.



Figure 6: A close-up view of the BLACK+DECKER BXVMS600E's triple filtration system, highlighting the transparent dust tank and the internal cyclone mechanism for efficient particle separation.



Figure 7: A close-up view of the washable filter components, including the pleated EPA filter and the micro-perforated stainless steel pre-filter, emphasizing their design for easy cleaning and maintenance.

Troubleshooting

If you encounter issues with your BLACK+DECKER BXVMS600E, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply; damaged cord/plug.	Check if the plug is securely in the outlet. Inspect the power cord and plug for damage. If damaged, do not use and contact customer support.

Problem	Possible Cause	Solution
Reduced suction power.	Full dust tank; clogged filters; blockage in nozzle/tube.	Empty the dust tank. Clean the pre-filter and EPA filter thoroughly (see Maintenance). Check the floor nozzle, extension tube, and main unit inlet for any blockages and remove them.
Motor overheating or unusual noise.	Clogged filters; prolonged use; blockage.	Turn off and unplug the vacuum. Allow it to cool down. Clean all filters. Check for and remove any blockages in the air pathways. If the problem persists, contact customer support.

Specifications

Brand	BLACK+DECKER
Model Number	BXVMS600E (Internal: ES9480030B)
Power	600 Watts
Weight	2.7 Kilograms
Dimensions (Product)	19.1 x 7.5 x 7.4 cm
Cable Length	6 meters
Noise Level	78 dB
Filter Type	Cartridge (EPA Filter, Micro-perforated Stainless Steel Pre-filter)
Dust Collection	Bagless, Cyclone System

Warranty and Support

For warranty information, technical support, or to order replacement parts, please refer to the warranty card included with your purchase or visit the official BLACK+DECKER website. Keep your proof of purchase for warranty claims.
Online Support: www.blackanddecker.com/support

© 2025 BLACK+DECKER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question