

OKP X100

OKP X100 Cordless Vacuum Cleaner User Manual

Model: X100 | Brand: OKP

1. INTRODUCTION

Thank you for choosing the OKP X100 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and retain it for future reference.

The OKP X100 is a versatile 4-in-1 cordless stick vacuum designed for various cleaning tasks. It features a powerful 17Kpa suction, a lightweight design, and multiple attachments for effective cleaning on different surfaces, including pet hair and hardwood floors.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this appliance.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

3. PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present and undamaged:

- Main Motor Unit (Handheld Vacuum)
- Extension Wand (Adjustable Length)
- Motorized Floor Brush with LED Lights
- Crevice Nozzle
- Upholstery Nozzle (2-in-1 Brush)
- Wall Mount Bracket
- Power Adapter/Charger
- User Manual
- Extra Filters (Quantity may vary)



Image: The OKP X100 Cordless Vacuum Cleaner shown with its main components including the handheld unit, extension wand, floor brush, and two smaller attachments.

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your OKP X100 vacuum cleaner:

1. **Main Motor Unit:** Contains the motor, dust cup, and battery.
2. **Dust Cup:** Transparent container for collecting dust and debris.
3. **Filter System:** Multi-layer filtration including pre-filter, honeycomb, sponge, and cyclone filtration.
4. **Power Button:** Turns the vacuum on/off and adjusts suction mode.
5. **Extension Wand:** Connects the main unit to the floor brush or other attachments, adjustable length.
6. **Motorized Floor Brush:** Equipped with LED lights for illuminating dark areas and a flexible joint for easy maneuvering.
7. **Crevice Nozzle:** Ideal for narrow gaps and corners.
8. **Upholstery Nozzle:** Suitable for furniture, drapes, and mattresses.

4 IN 1

VERSATILITY
CORD FREE HASSLE FREE



Image: The OKP X100 vacuum cleaner configured in four different ways: as a stick vacuum, a handheld vacuum with crevice tool, a handheld vacuum with upholstery tool, and a compact handheld unit.

5. ASSEMBLY AND SETUP

Follow these steps to assemble your OKP X100 vacuum cleaner:

1. Assemble the Stick Vacuum:

- Insert the extension wand into the main motor unit until it clicks into place.
- Attach the motorized floor brush to the other end of the extension wand until it clicks into place.

2. Assemble the Handheld Vacuum:

- For a compact handheld unit, directly attach the crevice nozzle or upholstery nozzle to the main motor unit until it clicks.
- For extended reach, attach the desired nozzle to the extension wand, then attach the extension wand to the main motor unit.

3. Wall Mount Installation (Optional):

- Choose a suitable location near a power outlet.
- Mark the drilling points for the wall mount bracket.
- Drill holes and insert wall anchors (if necessary).
- Secure the wall mount bracket to the wall using screws.
- You can store the vacuum on the wall mount to save space.

6. CHARGING THE BATTERY

The OKP X100 is powered by a Lithium-Ion battery. Before first use, fully charge the battery.

1. Connect the power adapter to the charging port on the main motor unit.
2. Plug the power adapter into a wall outlet.
3. The battery indicator lights on the main unit will illuminate to show charging status. They will typically stop blinking or change color when fully charged.
4. A full charge provides approximately 30 minutes of fade-free run time in standard mode. Actual runtime may vary based on suction mode and surface type.

2200 RECHARGEABLE



2200

Removable

30 min

UP TO 30 MIN

fade-free run time
for uninterrupted cleaning

Image: A close-up of the OKP X100 main unit highlighting the rechargeable battery and indicating up to 30 minutes of run time.

7. OPERATION

7.1 Power On/Off and Suction Modes

- Press the power button once to turn on the vacuum in standard suction mode (8Kpa).
- Press the power button a second time to switch to strong suction mode (17Kpa).
- Press the power button a third time to turn off the vacuum.

17000PA STRONG SUCTION

Easy to pick up debris, dust, crumbs and pet hairs on multiple kinds of floor



Image: The OKP X100 vacuum cleaner in action, illustrating its strong suction power picking up various debris, with indicators for standard (8Kpa) and strong (17Kpa) modes.

7.2 Using Attachments

- **Motorized Floor Brush:** Ideal for cleaning carpets, rugs, and hard floors. The built-in LED lights illuminate dust and debris in dark areas, such as under furniture. The 180-degree flexible joint allows for easy maneuvering around obstacles.
- **Crevice Nozzle:** Use for cleaning tight spaces, corners, edges, and car interiors.
- **Upholstery Nozzle:** Designed for cleaning upholstery, drapes, mattresses, and other fabric surfaces.

FLEXIBLE HEAD

With the floor brush light

Easily move to all hard to reach areas

Capture dust under the furniture and the bed



Image: The flexible head of the OKP X100 vacuum cleaner, demonstrating its 180-degree swivel capability and the front-mounted LED lights for improved visibility under furniture.

8. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

8.1 Emptying the Dust Cup

- The transparent dust cup allows you to monitor the dust level. Empty it when it reaches the MAX line.
- To empty, hold the main unit over a trash bin. Press the one-button release latch on the dust cup to open the bottom flap and release debris.
- Close the dust cup flap securely after emptying.

ONE-CLICK RELEASE

USER-FRIENDLY DESIGN, EASY TO EMPTY, WILL NOT KICK UP A DUST



Image: The OKP X100 handheld vacuum unit demonstrating the one-click release mechanism for emptying the 1.2L dust cup directly into a trash receptacle.

8.2 Cleaning the Filters

The OKP X100 features a 4-layer filtration system. Regular cleaning of filters is crucial for maintaining suction power.

- Twist and pull to remove the dust cup from the main motor unit.
- Remove the filter components (pre-filter, honeycomb, sponge filters).
- Tap off loose dirt from the filters over a trash bin.
- Rinse the filters under cool running water. Ensure they are completely dry (allow 24-48 hours) before reassembling. Do not use the vacuum with wet filters.
- Reassemble the filters and dust cup in reverse order.
- It is recommended to clean filters regularly, especially if you notice a decrease in suction. Replace filters as needed (extra filters are often included or can be purchased separately).



Image: A cutaway view of the OKP X100 main unit, illustrating its multi-stage filtration system including a large pre-filter, honeycomb filtration, sponge filtration, and cyclone filtration, designed to capture microscopic dust and allergens.

8.3 Cleaning the Brush Roll

- Periodically check the brush roll in the motorized floor brush for tangled hair or debris.
- To remove the brush roll, locate the release tab or screw on the side of the brush head.
- Carefully remove any tangled hair or fibers using scissors or a cleaning tool.
- Reinsert the brush roll and secure it.

9. TROUBLESHOOTING

If you encounter issues with your OKP X100, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged.	Charge the battery fully.
	Battery not properly installed.	Ensure battery is securely clicked into place.
Low suction power.	Dust cup is full.	Empty the dust cup.
	Filters are clogged.	Clean or replace the filters. Ensure they are completely dry before reinstallation.
	Hose or attachments are blocked.	Check for blockages in the extension wand, floor brush, or nozzles and remove them.
Brush roll not spinning.	Brush roll is tangled with hair or debris.	Clean the brush roll as described in the maintenance section.
	Brush roll is jammed.	Turn off the vacuum and remove any obstructions.
Vacuum stops suddenly during use.	Battery is depleted.	Recharge the battery.
	Overheating protection activated.	Turn off the vacuum and let it cool down for at least 30 minutes. Check for blockages or clogged filters.

If the problem persists after trying these solutions, please contact customer support.

10. SPECIFICATIONS

Feature	Detail
Model Number	X100
Brand	OKP
Suction Power	Standard: 8Kpa, Strong: 17Kpa
Motor Wattage	160W
Battery Type	Lithium-Ion
Runtime	Up to 30 minutes (Standard Mode)
Dust Cup Capacity	1.2 Liters
Filtration System	4-Layer (Pre-filter, Honeycomb, Sponge, Cyclone)
Noise Level	72 dB
Product Dimensions	45.67"L x 7.87"W x 9.84"H
Item Weight	7 pounds
Included Components	Battery, Brush, Crevice Tool, Nozzle

11. WARRANTY AND CUSTOMER SUPPORT

OKP products are manufactured to the highest quality standards. For specific warranty details, please refer to the warranty card or documentation included with your purchase. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

If you experience any issues with your OKP X100 Cordless Vacuum Cleaner, require replacement parts, or have questions not covered in this manual, please contact OKP Customer Support. Contact information is usually available on the product packaging, the official OKP website, or through your retailer.

When contacting support, please have your product model number (X100) and purchase information ready to assist the service representative.

© 2024 OKP. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question