

[Manuals.plus](#) /

› [BELLISSIMA](#) /

› Bellissima Imetec My Pro Hydra Sonic Hair Dryer User Manual

## BELLISSIMA 11806

# Bellissima Imetec My Pro Hydra Sonic Hair Dryer User Manual

Model: 11806

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Bellissima Imetec My Pro Hydra Sonic Hair Dryer. Retain this manual for future reference.

- **Warning:** Do not use this appliance near water, such as in bathtubs, showers, basins, or other vessels containing water.
- Do not use near hot surfaces.
- Always unplug the appliance after use and before cleaning.
- Keep out of reach of children.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Do not use the appliance for purposes other than drying hair.

## 2. PRODUCT OVERVIEW

The Bellissima Imetec My Pro Hydra Sonic Hair Dryer is designed for efficient and gentle hair drying with advanced features.



Image 2.1: The Bellissima Imetec My Pro Hydra Sonic Hair Dryer, its retail packaging, and included accessories: a diffuser and two concentrator nozzles.

### Key Features:

- Digital Motor for powerful airflow.
- Dual-Action Ionizer for deep hydration and reduced frizz.
- 3 Speed Settings.
- 3 Temperature Settings.
- Compact and lightweight design.
- Magnetic attachment for accessories.

- Includes a travel case.

### 3. SETUP

---

#### 3.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Ensure all items listed in the "What's in the Box" section are present and undamaged.

#### 3.2 What's in the Box

- Bellissima Imetec My Pro Hydra Sonic Hair Dryer
- 3 Magnetic Accessories (Diffuser, 2 Concentrator Nozzles)
- Travel Case
- User Manual (this document)



Image 3.1: The three magnetic accessories included with the hair dryer: one diffuser and two concentrator nozzles of different widths.

#### 3.3 Attaching Accessories

The hair dryer features a magnetic attachment system for its accessories. To attach an accessory (concentrator or diffuser), simply align it with the front nozzle of the hair dryer. The magnets will securely hold it in place. To remove, gently

pull the accessory away from the nozzle.



Image 3.2: The hair dryer with a concentrator nozzle magnetically attached to the front, ready for use.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Powering On/Off

Plug the hair dryer into a suitable electrical outlet. Locate the power button on the handle. Press it once to turn the appliance on, and press it again to turn it off.



Image 4.1: A detailed view of the hair dryer's control panel, showing buttons for speed, temperature, and the power switch.

### 4.2 Speed and Temperature Settings

The hair dryer offers 3 speed settings and 3 temperature settings. Use the dedicated buttons on the handle to adjust these to your preference. Indicator lights will show the selected level.

- **Speed Settings:** Press the fan icon button to cycle through low, medium, and high airflow.
- **Temperature Settings:** Press the thermometer icon button to cycle through cool, warm, and hot temperatures.
- **Cold Shot:** A dedicated button (often snowflake icon) provides a burst of cool air to set your hairstyle.

### 4.3 Dual-Action Ionizer

The integrated dual-action ionizer releases negative ions during drying. This technology helps to reduce static electricity, minimize frizz, and leave hair smoother and shinier by promoting better hydration.

### 4.4 Using the Concentrator Nozzles

The concentrator nozzles direct airflow to specific sections of hair, ideal for precision styling and smoothing. Use a round brush with the concentrator for best results.

### 4.5 Using the Diffuser

The diffuser is designed to enhance natural curls and waves, adding volume and reducing frizz. Attach the diffuser and gently cup sections of hair, moving the dryer in circular motions towards the scalp.





Image 4.2: The hair dryer with the diffuser attachment, suitable for drying curly or wavy hair while maintaining volume.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Air Filter

Regularly clean the rear air filter to maintain optimal performance and prevent overheating. Ensure the appliance is unplugged before cleaning.

1. Unplug the hair dryer from the power outlet.
2. Gently twist or pull off the rear filter cover (refer to Image 4.1 for location).
3. Remove any accumulated dust or hair using a soft brush or cloth.
4. Replace the filter cover securely.

### 5.2 General Cleaning

Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.

### 5.3 Storage

When not in use, store the hair dryer in a cool, dry place. The included travel case is ideal for protecting the appliance and its accessories.



Image 5.1: The black velvet travel pouch provided for convenient storage and transport of the hair dryer and its accessories.

## 6. TROUBLESHOOTING

If you encounter issues with your Bellissima Imetec My Pro Hydra Sonic Hair Dryer, please refer to the following common problems and solutions:

| Problem                      | Possible Cause                                            | Solution                                                                                                |
|------------------------------|-----------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| Hair dryer does not turn on. | No power supply; faulty outlet; power button not pressed. | Check if the plug is fully inserted. Try a different outlet. Ensure the power button is pressed firmly. |
| Low airflow or overheating.  | Blocked air intake filter.                                | Unplug the appliance and clean the rear air filter as described in Section 5.1.                         |

| Problem                               | Possible Cause                                                           | Solution                                                                                                               |
|---------------------------------------|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Hair dryer suddenly stops during use. | Overheat protection activated.                                           | Unplug the appliance and allow it to cool down for several minutes. Clean the air filter.                              |
| Hair is still frizzy after drying.    | Incorrect technique; ionizer not fully effective for specific hair type. | Ensure you are using the ionizer function. Try using a lower temperature setting. Apply a suitable anti-frizz product. |

If the problem persists after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

| Feature              | Detail                                                                                          |
|----------------------|-------------------------------------------------------------------------------------------------|
| Brand                | BELLISSIMA (Imetec)                                                                             |
| Model Number         | 11806                                                                                           |
| Power                | 1800 Watts                                                                                      |
| Power Source         | Corded Electric                                                                                 |
| Dimensions (Product) | 9.5 x 23.7 x 33.5 cm (approximately 3.7 x 9.3 x 13.2 inches)                                    |
| Weight               | 940 grams (approximately 2.07 lbs)                                                              |
| Color                | Black                                                                                           |
| Material             | Plastic                                                                                         |
| Special Features     | Digital Motor, Dual-Action Ionizer, 3 Speeds, 3 Temperatures, Magnetic Accessories, Travel Case |

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

Specific warranty details for the Bellissima Imetec My Pro Hydra Sonic Hair Dryer are typically provided with the product packaging or can be found on the official Bellissima or Imetec website. Please refer to these sources for the most accurate and up-to-date warranty terms and conditions.

### 8.2 Customer Support

For technical assistance, product inquiries, or warranty claims, please contact Bellissima/Imetec customer support. Contact information can usually be found on the product packaging, the official brand website, or through your retailer. You may also visit the official Bellissima store on Amazon for more information:[Bellissima Store](#)

