

WMF 416700011

WMF Cromargan 300 ml Portable USB Rechargeable Mini Mixer User Manual

Model: 416700011

Brand: WMF

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the WMF Cromargan Mini Mixer. Retain this manual for future reference.

- Always ensure the lid is securely attached before operating the mixer. The device features an automatic safety shutdown that prevents operation if the lid is open or not properly secured.
- Do not immerse the motor unit (lid) in water or other liquids. Clean with a damp cloth only.
- Keep hands and utensils out of the mixing container while the mixer is operating to prevent injury.
- The blades are sharp. Handle with extreme care during assembly, disassembly, and cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Only use the provided USB charging cable. Do not use damaged cables or chargers.
- Do not attempt to blend hot liquids, as pressure buildup can cause injury.
- Avoid overfilling the mixing container beyond the 'Max' line.

2. PRODUCT OVERVIEW

The WMF Cromargan Mini Mixer is a portable, USB-rechargeable device designed for preparing fresh smoothies and shakes on the go. Its compact design and powerful motor make it ideal for an active lifestyle.





Image: The WMF Cromargan Mini Mixer shown with its USB charging cable.

Components

Familiarize yourself with the parts of your WMF Mini Mixer:

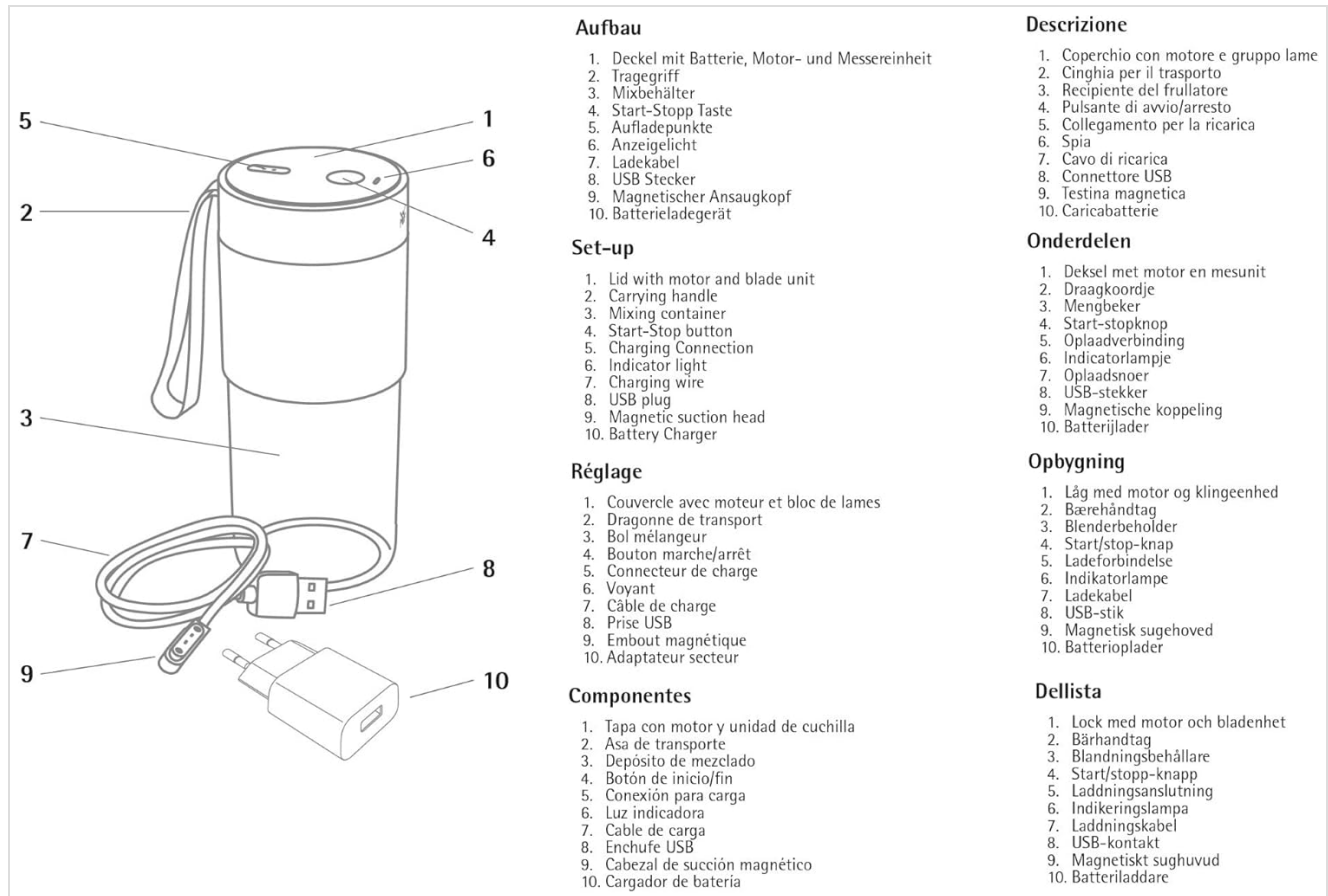


Image: Exploded view diagram illustrating the main components of the WMF Mini Mixer.

1. Lid with motor and blade unit
2. Carrying handle
3. Mixing container (300 ml, BPA-free plastic)
4. Start-Stop button
5. Charging Connection
6. Indicator light
7. Charging wire (USB cable)
8. USB plug
9. Magnetic suction head (for charging cable)
10. Battery Charger (USB power adapter, not always included)

3. SETUP

Initial Charging

Before first use, fully charge the mixer's internal 1,200 mAh lithium-ion battery. A full charge allows for up to ten blending cycles.

- Connect the magnetic suction head of the USB charging cable to the charging connection on the lid.

- Plug the USB plug into a compatible USB power source (e.g., computer USB port, USB wall adapter).
- The indicator lights on the lid will show the charging status. Refer to the diagram below for details.



Image: Diagram illustrating how to connect the USB charging cable and the location of the indicator lights on the mixer's lid.





Image: The WMF Mini Mixer with its magnetic USB charging cable attached to the lid.

Assembly

Ensure all components are clean before assembly.

- Place the mixing container on a flat, stable surface.
- Align the lid (motor and blade unit) with the top of the mixing container.
- Twist the lid clockwise until it is securely fastened. A click may be heard, and the safety mechanism will engage, allowing the mixer to operate.





Image: The WMF Mini Mixer shown with its lid detached from the mixing container, illustrating the two main parts.

4. OPERATING INSTRUCTIONS

The WMF Mini Mixer is designed for quick and easy preparation of various drinks.

Preparing Ingredients

- Wash and cut fruits and vegetables into small pieces (approximately 1-2 cm) to ensure optimal blending.

- Add your ingredients to the mixing container. Do not exceed the 'Max' fill line (300 ml capacity).
- Add liquid (water, milk, juice) as needed.

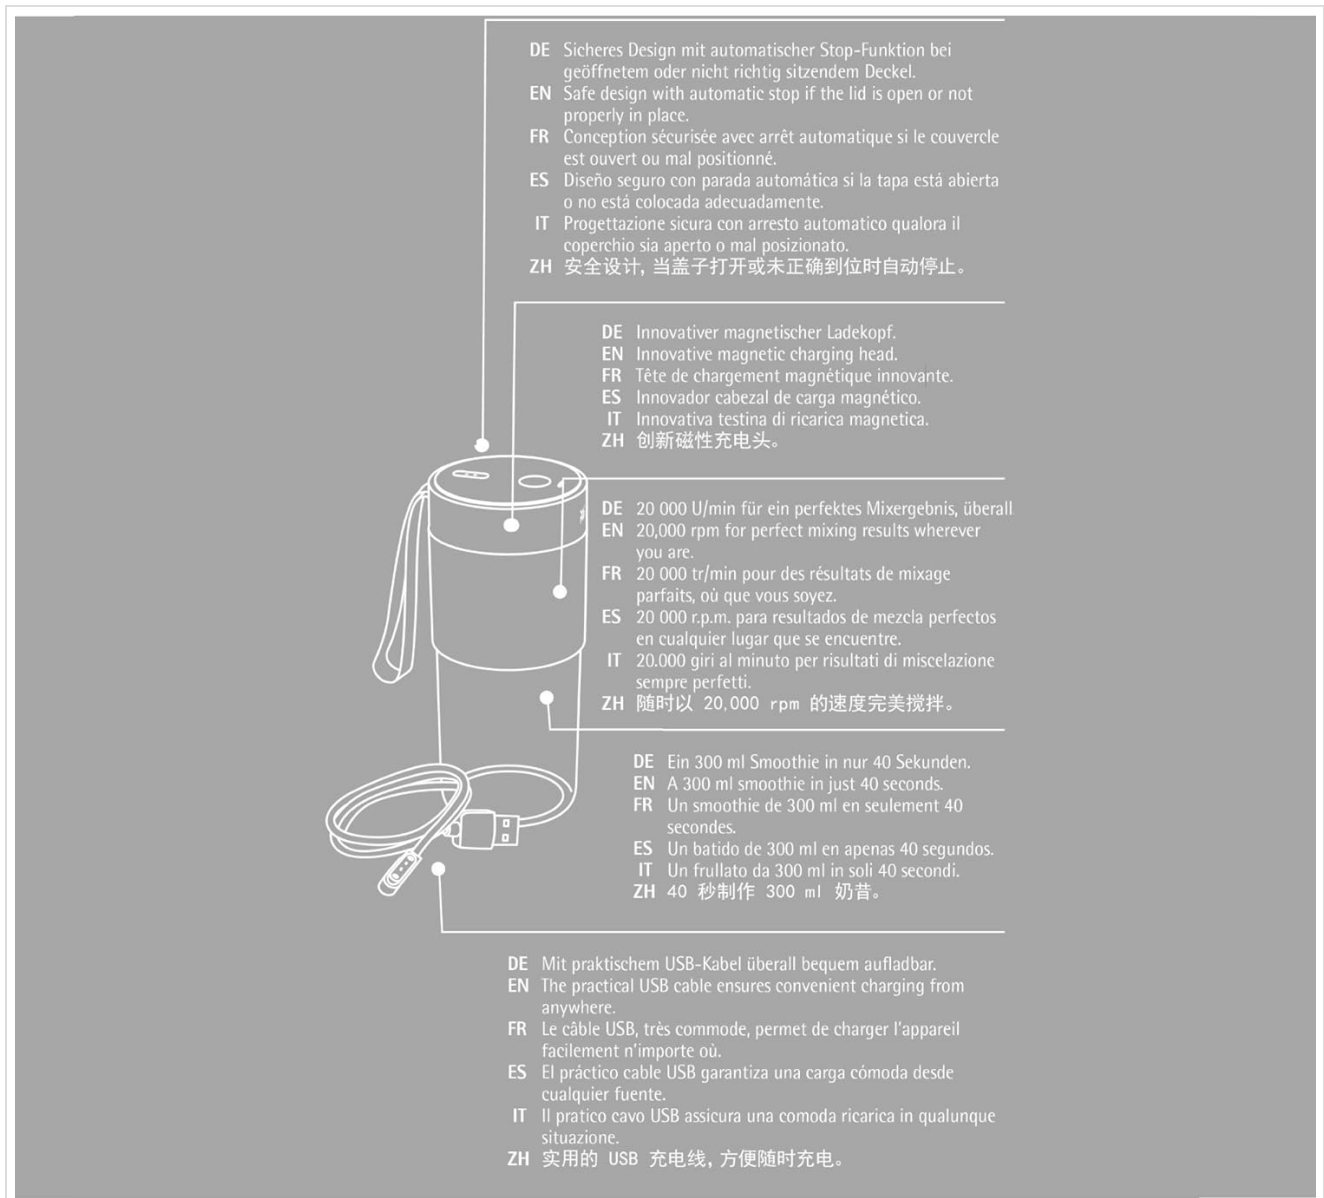


Image: The WMF Mini Mixer container filled with various cut fruits and berries, ready for blending.

Blending

- Ensure the lid is securely twisted onto the mixing container.
- To start blending, press the Start-Stop button on the lid twice in quick succession. The mixer will operate for approximately 40 seconds at 20,000 RPM.
- For best results, gently invert the mixer or tilt it during operation to ensure all ingredients come into contact with the 2-blade stainless steel blade.
- To stop blending before the automatic cycle ends, press the Start-Stop button once.
- The mixer is suitable for smoothies, juice mixes, protein shakes, milk powder, and baby food.



Image: Operational diagram showing the sequence: press the button twice, then invert and gently shake the mixer for optimal blending.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic use of your WMF Mini Mixer.

Cleaning the Mixing Container

- After each use, rinse the mixing container thoroughly with warm water and a mild detergent.
- The BPA-free plastic container can be cleaned by hand or in a dishwasher (top rack recommended, if applicable, check product markings).

Cleaning the Lid and Blade Unit

- The lid, which contains the motor and blade unit, should never be immersed in water.
- Carefully wipe the exterior of the lid with a damp cloth.
- To clean the blades, add a small amount of water and a drop of dish soap to the empty container, secure the lid, and run the mixer for a few seconds. Rinse thoroughly.
- Exercise extreme caution when cleaning around the sharp blades. Use a brush if necessary to remove stubborn residue.



Image: The underside of the WMF Mini Mixer lid, displaying the stainless steel blade assembly.

6. TROUBLESHOOTING

If you encounter issues with your WMF Mini Mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Mixer does not start when button is pressed.	Lid not securely attached. Battery is low or depleted.	Ensure the lid is twisted on tightly until the safety mechanism engages. Charge the mixer using the provided USB cable.
Poor blending results or mixer struggles.	Container is overfilled. Ingredients are too large or too hard. Insufficient liquid.	Do not exceed the 'Max' fill line. Cut ingredients into smaller pieces. Add more liquid if the mixture is too thick. Gently invert or tilt the mixer during operation.
Mixer stops unexpectedly during operation.	Lid became loose. Battery is low. Overload protection activated.	Re-secure the lid. If the lid was opened, the safety stop function is active. Recharge the battery. Reduce the amount of ingredients or add more liquid. Allow the motor to cool down before restarting.
Charging indicator lights do not illuminate.	USB cable not properly connected. USB power source is not active.	Ensure the magnetic charging head is firmly attached to the charging connection. Try a different USB port or power adapter.

7. SPECIFICATIONS

Feature	Specification
Model Number	416700011
Brand	WMF
Capacity	300 ml
Power	50 W
Rotations Per Minute (RPM)	20,000 rpm
Battery Type	1,200 mAh Lithium-ion
Power Source	Battery Powered (USB Rechargeable)
Voltage	5 Volts
Controls	Push Button
Blade Material	Stainless Steel

Feature	Specification
Container Material	BPA-free Plastic
Product Dimensions (approx.)	8.2 cm (D) x 9 cm (W) x 18.5 cm (H)
Item Weight (approx.)	510 g (1.12 lbs)



Image: The WMF Mini Mixer with its approximate dimensions (height, width, depth) indicated.





8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official WMF website. You may also contact WMF customer service directly for assistance.

WMF Official Website: www.wmf.com

© 2023 WMF. All rights reserved.

Related Documents - 416700011

	<p>WMF KÜCHENminis Smoothie-to-go User Manual</p> <p>Comprehensive user manual for the WMF KÜCHENminis Smoothie-to-go blender, detailing safety instructions, operation, cleaning, and care. Learn how to make smoothies and crush ice with this kitchen appliance.</p>
	<p>WMF KITCHENminis Smoothie-to-go Operating Instructions</p> <p>Comprehensive operating instructions for the WMF KITCHENminis Smoothie-to-go blender, covering components, safety, usage, cleaning, and technical specifications.</p>
	<p>WMF KULT X Mix & Go Blender User Manual</p> <p>Comprehensive user manual for the WMF KULT X Mix & Go blender, covering safety instructions, operation, cleaning, and maintenance for various models including Mix & Go, Mix & Go Duo, and Mix & Go Keep Cool.</p>
	<p>WMF MIX ON THE GO KITCHENMINIS – Bedienungsanleitung und Informationen</p> <p>Entdecken Sie den WMF MIX ON THE GO KITCHENMINIS, einen kompakten und tragbaren Mixer für gesunde Smoothies und Shakes. Diese Anleitung bietet wichtige Informationen zur sicheren Nutzung, Reinigung und Wartung des Geräts.</p>



WMF KULT X Mix & Go Blender User Manual

This document provides comprehensive instructions for the WMF KULT X Mix & Go blender, covering safe operation, assembly, cleaning, and maintenance. It details the features of various models including Mix & Go, Mix & Go Duo, and Mix & Go Keep Cool.



[WMF Kult X Mix & Go Blender: Operation Manual, Safety, and Cleaning Guide](#)

Detailed operating manual for the WMF Kult X Mix & Go blender. Learn about safe usage, assembly, operation, cleaning, and maintenance for making smoothies, juices, and crushing ice. Includes technical specifications and model information.