

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [ZdalaMit NB677/NB677UD Replacement Remote Control Instruction Manual for Magnavox DVD Players](#)

ZdalaMit NB677/NB677UD

ZdalaMit NB677/NB677UD Replacement Remote Control Instruction Manual

For Magnavox DVD Player Models: CDV220MW9, CDV220MW9/F7, DV220MW9, DV220MW9A, GDV228MG9

1. SETUP AND INITIAL USE

The ZdalaMit NB677/NB677UD replacement remote control is designed for immediate use with compatible Magnavox DVD Players. No programming or pairing is required.

1.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) 1.5V AA Alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for operation.

1.2 Compatible Models

This remote control is compatible with the following Magnavox DVD Player models:

- CDV220MW9
- CDV220MW9/F7
- DV220MW9
- DV220MW9A
- GDV228MG9

2. OPERATING INSTRUCTIONS

Point the remote control directly at your Magnavox DVD Player. Ensure there are no obstructions between the remote and the player's infrared sensor.



NB677



Figure 1: ZdalaMit NB677/NB677UD Remote Control Layout. This image displays the full button layout of the remote, including power, number keys, playback controls, and menu navigation.

2.1 Basic Functions

- **STANDBY-ON (Red Button):** Powers the DVD player on or off.
- **Number Buttons (0-9):** Used for direct track selection or inputting numerical data.
- **PLAY (▶):** Starts playback of a DVD.
- **STOP (■):** Stops playback.
- **PAUSE (||):** Pauses playback. Press again to resume.
- **PREV (◀◀):** Skips to the previous track/chapter.
- **NEXT (▶▶):** Skips to the next track/chapter.
- **REWIND (◀◀◀):** Rewinds playback.
- **FAST FORWARD (▶▶▶):** Fast forwards playback.
- **OPEN/CLOSE (▲):** Opens or closes the disc tray.
- **MENU / DISC MENU:** Accesses the DVD disc menu.
- **SETUP:** Enters the system setup menu of the DVD player.
- **OK / Directional Arrows (▲ ◀ ▼ ▶):** Navigates through menus and confirms selections.

Refer to your Magnavox DVD Player's original manual for specific functions of less common buttons, as their behavior may vary by model.

3. MAINTENANCE

3.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AA Alkaline batteries. Do not mix old and new batteries, or different types of batteries.

3.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's finish or internal components.

3.3 Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

4. TROUBLESHOOTING

4.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new 1.5V AA Alkaline batteries.
- **Line of Sight:** Make sure there are no objects blocking the path between the remote control and the infrared sensor on your DVD player.
- **Distance:** Operate the remote within a reasonable distance from the DVD player (typically up to 20 feet or 6 meters).
- **Infrared Interference:** Bright light sources, such as direct sunlight or certain types of fluorescent lighting, can interfere with the remote's infrared signal. Try operating the remote in a different lighting condition.

4.2 Specific Button Issues

If only certain buttons are not working, try cleaning the remote as described in Section 3.2. If the issue persists after cleaning and battery replacement, the remote may require replacement.

5. SPECIFICATIONS

Feature	Detail
Model Number	NB677/NB677UD
Product Dimensions	5.6 x 2 x 0.5 inches (14.2 x 5.1 x 1.3 cm)
Item Weight	1.41 ounces (40 grams)
Power Supply	2 x 1.5V AA Alkaline Batteries (not included)
Compatible Devices	Magnavox DVD Players (specific models listed in Section 1.2)
Special Feature	Ergonomic design

6. SUPPORT

If you encounter any issues or have questions regarding your ZdalaMit NB677/NB677UD replacement remote control that are not addressed in this manual, please contact the seller or manufacturer for assistance. Your satisfaction is important, and support is available to help resolve any queries.