

GENERAL TRADE GNR12067

GENERAL TRADE GNR12067 L.DICTROLUX 600W Portable Vacuum Cleaner User Manual

Model: GNR12067 | Brand: GENERAL TRADE

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your GENERAL TRADE GNR12067 L.DICTROLUX 600W Portable Vacuum Cleaner. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance:

- Ensure the power supply voltage matches the rating indicated on the vacuum cleaner.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

3. PACKAGE CONTENTS

Carefully unpack your vacuum cleaner and check that all items are present and in good condition. The package should contain:

- Main Vacuum Unit
- Flexible Hose
- Crevice Tool
- Brush Tool
- Various Nozzle Attachments
- Shoulder Strap
- Filter Assembly (Pre-filter and HEPA filter)



Figure 3.1: Overview of the GENERAL TRADE GNR12067 L.DICTROLUX 600W Portable Vacuum Cleaner and its included accessories, including the main unit, flexible hose, various nozzles, and shoulder strap.

4. PRODUCT OVERVIEW (COMPONENTS)

Familiarize yourself with the main components of your vacuum cleaner:

1. **Main Unit:** Contains the motor, handle, and power switch.
2. **Dust Collection Chamber:** Transparent container for collecting dust and debris.

3. **Filter System:** Consists of a pre-filter and a HEPA filter, located inside the dust chamber.
4. **Hose Connection Port:** Located at the front of the main unit for attaching the flexible hose.
5. **Power Cord:** For connecting the vacuum cleaner to an electrical outlet.
6. **Attachments:** Various nozzles and brushes for different cleaning tasks.



Figure 4.1: An exploded view showing the dust collection chamber, pre-filter, and HEPA filter components of the vacuum cleaner, ready for assembly or cleaning.

5. SETUP

1. **Unpack:** Remove all components from the packaging.
2. **Filter Installation:** Ensure the pre-filter and HEPA filter are correctly seated within the dust collection chamber. Refer to Figure 4.1 for proper assembly.
3. **Attach Hose:** Insert the flexible hose firmly into the hose connection port on the front of the main unit.
4. **Select Attachment:** Choose the appropriate nozzle or brush for your cleaning task and attach it to the end of the flexible hose. For example, use the crevice tool for narrow spaces or the brush tool for upholstery.
5. **Shoulder Strap (Optional):** If desired, attach the shoulder strap to the designated points on the main unit for easier portability during use.

6. OPERATION

1. **Connect Power:** Plug the power cord into a suitable electrical outlet.
2. **Power On:** Locate the power switch on the handle of the main unit and slide it to the "ON" position. The vacuum cleaner will start.
3. **Vacuuming:** Guide the attached nozzle over the surface you wish to clean. The 600W motor provides strong suction for

various tasks.

- 4. **Blower Function:** This model also features a blower function. To use it, detach the flexible hose from the front suction port and attach it to the exhaust port (usually located at the rear or side of the main unit). Turn on the vacuum to activate the blower.
- 5. **Power Off:** When finished, slide the power switch to the "OFF" position and unplug the appliance from the outlet.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

7.1. Emptying the Dust Collection Chamber

- 1. Ensure the vacuum cleaner is unplugged.
- 2. Detach the dust collection chamber from the main unit.
- 3. Carefully open the chamber and empty its contents into a waste bin.
- 4. Wipe the inside of the chamber with a damp cloth if necessary.

7.2. Cleaning the Filters

The filters should be cleaned regularly, especially when suction power decreases.

- 1. With the dust chamber detached, remove the pre-filter and HEPA filter.
- 2. Tap the filters gently to dislodge loose dust.
- 3. If heavily soiled, rinse the filters under cool running water. Do not use detergents.
- 4. Allow filters to air dry completely for at least 24 hours before reinserting them. Do not use the vacuum cleaner with wet filters.

7.3. Storage

Store the vacuum cleaner and its accessories in a cool, dry place, away from direct sunlight and out of reach of children.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; power switch off; no power at outlet.	Check plug connection; ensure switch is ON; test outlet with another appliance.
Loss of suction.	Dust chamber full; filters clogged; hose or nozzle blocked.	Empty dust chamber; clean or replace filters; check and clear blockages in hose/nozzle.
Unusual noise.	Blockage in motor area; damaged motor.	Turn off and unplug. Check for blockages. If noise persists, contact support.

9. SPECIFICATIONS

Brand	GENERAL TRADE
Model Number	GNR12067
Power	600 Watts
Color	Black

Item Weight	2.01 Kilograms
Special Feature	Compact, Portable
Filter Type	Cartridge
Surface Recommendation	Upholstery
Power Source	Corded Electric

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact GENERAL TRADE customer service. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question