

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nokia](#) /
- › [Nokia 125 TA-1253 DS Feature Phone User Manual](#)

## Nokia Nokia 125

# Nokia 125 TA-1253 DS Feature Phone User Manual

Model: Nokia 125 (TA-1253)

[Box](#) [Setup](#) [Operating](#) [Features](#) [Specifications](#) [Introduction](#) [What's in the](#) [Maintenance](#) [Troubleshooting](#) [Warranty & Support](#)

## 1. INTRODUCTION

The Nokia 125 is a reliable and user-friendly feature phone designed for essential communication. It combines a classic design with modern conveniences, offering a comfortable and durable experience. This manual provides detailed instructions to help you get started and make the most of your device.

# Nokia 125



Colors available in  
White & Black



Built-in Torch



Wireless FM




Classic Games

Made in India.  
Made for India.



Super Storage up to  
2,000 contacts & 500 messages.

Enjoy clarity with  
2.4" Display

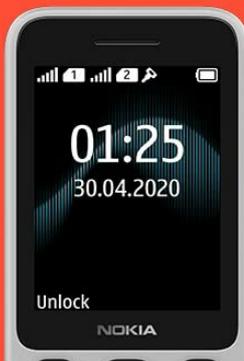

Long-lasting Battery

Talktime upto 19.4 hours

Figure 1: Nokia 125 DS product overview, showcasing its design and main functionalities.

## 2. WHAT'S IN THE BOX

Your Nokia 125 package includes the following items:

- Nokia 125 device
- Battery (BL-5C 1020mAh)
- Micro USB Charger
- Quick Start Guide



Figure 2: Unboxed contents of the Nokia 125 DS.

## 2.1 Unboxing Video

Video Description: This video demonstrates the unboxing process of the Nokia 125 Dual SIM Feature Phone, showing all included accessories.

## 3. SETUP

---

### 3.1 Inserting the Battery and SIM Cards

1. Carefully remove the back cover of the phone.
2. Insert your SIM card(s) into the designated slots. The Nokia 125 supports dual SIM functionality.
3. Align the battery (BL-5C 1020mAh) with the contacts and gently press it into place.
4. Replace the back cover, ensuring it clicks securely.



Figure 3: Rear view of the Nokia 125 DS, illustrating the battery and SIM card access.

### 3.2 Powering On/Off

- **To Power On:** Press and hold the **Call Cancel** button (red button) until the Nokia logo appears on the screen.
- **To Power Off:** Press and hold the **Call Cancel** button. A menu will appear; select "Switch off" or simply continue holding the button until the phone powers down.

### 3.3 Initial Setup (Language, Time, Date)

Upon first power-on, you will be prompted to select your preferred language. Use the navigation keys to select and confirm. You can also set the correct time and date through the settings menu.

### 3.4 Setup and Basic Operation Video

Video Description: This video guides you through the initial setup of the Nokia 125, including battery insertion, powering on, and setting language, time, and date.

## 4. OPERATING YOUR NOKIA 125

---

### 4.1 Navigation

Use the central navigation key to scroll through menus and select options. The left and right soft keys perform context-sensitive actions displayed on the screen.

### 4.2 Making Calls

1. Enter the phone number using the keypad.
2. Press the **Call** button (green button) to dial.
3. To end a call, press the **Call Cancel** button.

### 4.3 Sending Messages

1. Go to **Menu** > **Messages**.
2. Select **Create message**.
3. Type your message using the alphanumeric keypad.
4. Enter the recipient's number or select from contacts.
5. Select **Send**.

#### 4.4 Flashlight

The Nokia 125 includes a built-in flashlight. To activate or deactivate it, navigate to the flashlight option in the menu and select 'On' or 'Off'.

#### 4.5 Ringtone Settings

You can customize your phone's ringtone and volume. Go to **Menu** > **Settings** > **Tone settings** to adjust these options.

#### 4.6 Pre-installed Games

Enjoy classic games like Snake Xenzia. Access them through the main menu.

### 5. KEY FEATURES

---

- **Display:** 2.4-inch (6.09 cm) QVGA display for clear visibility.
- **Ergonomic Design:** Features large, comfortable buttons and an all-new longer design for enhanced usability.
- **Durability:** Built with a tough polycarbonate shell, designed for longevity.
- **Storage:** Capable of storing up to 2,000 contacts and 500 SMS messages.
- **Battery Life:** Equipped with a 1020 mAh Lithium Polymer battery, offering up to 19.4 hours of talk time and up to 23.4 days of standby time.
- **Connectivity:** Dual SIM support, 3.5 mm headphone jack, Bluetooth, and GSM.
- **Entertainment:** Wireless FM radio and pre-installed classic games like Snake Xenzia.
- **Utility:** Built-in torch (flashlight).



Figure 4: Front view of the Nokia 125 DS.



Figure 5: Side profile of the Nokia 125 DS.

## 6. SPECIFICATIONS

Feature	Detail
Operating System	KaiOS

Feature	Detail
RAM	4 MB
Product Dimensions	13.2 x 5 x 1.5 cm
Item Weight	91 g
Batteries	1 Lithium Polymer battery (included)
Item Model Number	Nokia 125
Wireless Communication Technologies	Radio Frequency
Connectivity Technologies	Bluetooth, GSM
GPS	AGPS
Special Features	Basic Phone, Bluetooth Enabled, Dual SIM, Torch
Device Interface - Primary	Buttons
Resolution	320 x 240
Other Camera Features	NO CAMERA
Audio Jack	3.5 mm
Form Factor	QWERTY Phone
Colour	Black
Battery Power Rating	1020 mAh
Phone Talk Time	19.4 Hours
Phone Standby Time (with data)	23.4 Days
Manufacturer	RISING STARS MOBILE INDIA PVT LTD
Date First Available	17 September 2020

## 7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not leave the phone charging for extended periods after it's fully charged.
- **Storage:** Store the phone in a cool, dry place when not in use.
- **Software Updates:** Keep your phone's software updated to ensure optimal performance and security. Check for updates periodically through the settings menu.

## 8. TROUBLESHOOTING

- **Phone not turning on:** Ensure the battery is correctly inserted and charged. Connect the charger and try again.

- **No network signal:** Check if your SIM card is properly inserted. Ensure you are in an area with network coverage. Try restarting the phone.
- **Poor call quality:** Move to an area with better signal. Check the earpiece and microphone for any obstructions.
- **Battery draining quickly:** Reduce screen brightness. Close unused applications. Limit background data usage if applicable.
- **Keypad unresponsive:** Restart the phone. If the issue persists, contact customer support.

## 9. WARRANTY AND SUPPORT

---

Your Nokia 125 comes with a standard manufacturer's warranty:

- **Device Warranty:** 1 year manufacturer warranty from the date of purchase.
- **In-box Accessories:** 6 months manufacturer warranty for in-box accessories, including batteries, from the date of purchase.

For further assistance, please refer to the official Nokia support channels or the contact information provided in your Quick Start Guide.