

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lavazza](#) /

› [Lavazza Expert Vessel / Milk Frother for Lavazza Classy Plus Coffee Machine LB 400 Instruction Manual](#)

Lavazza LB 400

Lavazza Expert Vessel / Milk Frother for Lavazza Classy Plus Coffee Machine LB 400 Instruction Manual

Model: LB 400

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The Lavazza Expert Vessel / Milk Frother is designed to enhance your coffee experience when used with the Lavazza Classy Plus Coffee Machine LB 400. This accessory allows for easy frothing of milk-based beverages, enabling you to create a variety of coffee drinks such as lattes, cappuccinos, and macchiato. It features a durable glass vessel for milk preparation and is designed for straightforward use and cleaning. This product is specifically designed to work ONLY with the Lavazza Classy Plus Machine.



Image 1: The Lavazza Expert Vessel / Milk Frother, a clear glass vessel with a black lid and frothing mechanism, designed to integrate with the Lavazza Classy Plus Coffee Machine.

2. SETUP

- 1. Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: the glass vessel, the frother lid with its internal components, and any accompanying cleaning tools.
- 2. Initial Cleaning:** Before first use, wash the glass vessel and the frother lid components with warm, soapy water. Rinse thoroughly and dry.
- 3. Machine Placement:** Ensure your Lavazza Classy Plus Coffee Machine LB 400 is placed on a stable, level surface near a power outlet.
- 4. Water Tank:** Fill the coffee machine's water tank with fresh, cold water up to the maximum level indicated.
- 5. Power On:** Plug in the coffee machine and press the ON/OFF button. The button lights will blink during warm-up. The machine is ready once the lights stop blinking.
- 6. First Use Rinse (without capsule):** Place an empty mug under the coffee machine's dispenser. Press the "Coffee 8 oz." button twice without inserting a capsule to rinse the internal circuits. Discard the water.

Your browser does not support the video tag.

Video 1: A tutorial demonstrating the setup process for the Lavazza Classy Plus ALL-IN-ONE Coffee Machine, including filling the water tank and initial rinsing steps. This video is provided by Lavazza North America, Inc.

3. OPERATION

3.1. Preparing Coffee (without milk)

- 1. Raise the Lever:** Lift the chrome lever on the coffee machine.
- 2. Insert Capsule:** Place a Lavazza Expert capsule (e.g., Espresso, Lungo, Coffee 8 oz.) into the designated slot.
- 3. Close Lever:** Lower the chrome lever firmly.
- 4. Place Cup:** Position your cup under the coffee dispenser.
- 5. Select Beverage:** Press the desired coffee button (Espresso, Lungo, or Coffee 8 oz.). The machine will automatically brew your coffee.

3.2. Preparing Milk-Based Beverages (with Expert Vessel)

- 1. Fill Vessel with Milk:** Pour the appropriate amount of milk into the glass vessel according to the desired recipe (Macchiato, Cappuccino, or Latte). The vessel has markings for each.
- 2. Attach Frother Lid:** Securely place the frother lid onto the glass vessel. Ensure the spout is correctly aligned to connect with the machine.
- 3. Place Vessel:** Position the filled glass vessel with the frother lid in the designated space on the coffee machine.
- 4. Insert Espresso Capsule:** Raise the chrome lever, insert an Espresso or Espresso x2 capsule, and lower the lever.
- 5. Select Milk Beverage:** Press the desired milk beverage button (Macchiato, Cappuccino, or Latte). The machine will automatically froth the milk and brew the coffee into the vessel. Do not remove the vessel until brewing is complete (the machine will beep).
- 6. Optional Double Shot:** For a stronger milk-based beverage, press the "Double Shot" button before selecting your milk recipe.

3.3. Programming Coffee Selections

You can customize the volume of your coffee beverages:

- 1. Start Programming:** Press and hold the desired coffee selection button (Espresso, Lungo, or Coffee 8 oz.). Brewing will start after approximately 3 seconds.
- 2. Adjust Volume:** Continue holding the button until the desired amount of coffee is dispensed into your cup.
- 3. Save Setting:** Release the button. The machine will save this new volume setting for future use.

4. MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your Lavazza coffee machine and vessel.

4.1. Daily Cleaning

- **Glass Vessel and Frother Lid:** After each use, disassemble and wash the glass vessel and frother lid components with warm, soapy water. Rinse thoroughly. These parts are generally dishwasher safe.
- **Drip Tray:** Empty and clean the drip tray regularly to prevent overflow and maintain hygiene.
- **Used Capsule Container:** Empty the used capsule container when full or regularly to prevent mold growth.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

4.2. Descaling

Descaling is essential to remove mineral buildup and maintain brewing quality. The machine will indicate when descaling is needed (refer to Troubleshooting section).

1. **Prepare Descaling Solution:** Follow the instructions on a suitable descaling solution for coffee machines.
2. **Fill Water Tank:** Pour the descaling solution into the water tank.
3. **Start Descaling Cycle:** Refer to your main Lavazza Classy Plus Machine manual for specific descaling instructions, as the process may vary. This typically involves pressing a combination of buttons to initiate a descaling cycle.
4. **Rinse Cycle:** After the descaling cycle, rinse the water tank thoroughly and fill it with fresh water. Run several rinse cycles (without capsules) to remove any residual descaling solution.

5. TROUBLESHOOTING

The machine's control panel uses indicator lights to alert you to common issues:

- **Empty Water Tank Warning:** An indicator light (often a water drop icon) will illuminate if the water tank is empty or below the minimum level.
Solution: Refill the water tank with fresh water.
- **Used Capsule Container Full Warning:** An indicator light (often a capsule bin icon) will illuminate when the used capsule container is full.
Solution: Empty the used capsule container and clean it.
- **Descaling Needed:** An indicator light (often a series of dots or a specific symbol) will illuminate when descaling is required.
Solution: Perform a descaling cycle as described in the Maintenance section.

For other issues, please consult the full instruction manual for your Lavazza Classy Plus Coffee Machine LB 400 or contact Lavazza customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Lavazza
Model	LB 400 (Classy Plus Machine compatible)
Material	Glass (Vessel)
Color	Black

Capacity	1 Liters (Water Tank, for main machine)
Special Feature	Milk Frother
Package Dimensions	7.09 x 6.26 x 4.72 inches
Weight	1.69 Pounds

7. WARRANTY & SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your Lavazza Classy Plus Coffee Machine LB 400 or visit the official Lavazza website. Keep your proof of purchase for warranty claims.

© 2023 Lavazza. All rights reserved.