

## Gioteck SWIAGJC

# Gioteck VX-4 Wired Controller User Manual

Model: SWIAGJC

Brand: Gioteck

## INTRODUCTION

The Gioteck VX-4 Wired Controller is designed for PlayStation 4 and PC, offering a comfortable and responsive gaming experience. It features quick-fire triggers, a precision D-pad, and anti-slip rubber thumb sticks for enhanced performance, providing a next-level immersive gaming experience.

## Key Features:

- Quick Fire triggers
- Ergonomic design
- Traditional PlayStation layout

## Package Contents:

- Gioteck VX-4 Wired Controller
- User Manual (this document)

## Product Overview:



Image: Gioteck VX-4 Wired Controller retail packaging. This image shows the black controller inside its blue and white box, highlighting key features like ergonomic design, traditional layout, and quick-fire triggers.



Image: Top view of the Gioteck VX-4 Wired Controller. This image displays the controller from a top-down perspective, showing the D-pad, analog sticks, action buttons, and central touch pad area.

## SETUP

### Connecting to PlayStation 4:

1. Ensure your PlayStation 4 console is powered on.
2. Insert the USB connector of the VX-4 Wired Controller into an available USB port on your PlayStation 4 console.
3. The controller should be automatically recognized and ready for use.

### Connecting to PC:

1. Ensure your PC is powered on.
2. Insert the USB connector of the VX-4 Wired Controller into an available USB port on your PC.

3. The PC operating system should automatically install the necessary drivers. If prompted, allow the driver installation to complete.
4. The controller will be ready for use with compatible PC games.



Image: Rear view of the Gioteck VX-4 Wired Controller. This image shows the back of the controller, including the L2/R2 triggers and the attached USB cable.

## OPERATING INSTRUCTIONS

### Button Layout:



Image: Angled view of the Gioteck VX-4 Wired Controller. This image provides a three-quarter view of the controller, highlighting its ergonomic shape and button placement.

The VX-4 Wired Controller features a traditional PlayStation layout:

- **Directional Pad (D-Pad):** For precise directional input.
- **Left Analog Stick:** Primary movement control.
- **Right Analog Stick:** Camera or aiming control.
- **Action Buttons (Triangle, Circle, Cross, Square):** Context-sensitive actions in games.
- **SHARE Button:** Share gameplay moments (PS4 only).
- **OPTIONS Button:** Access in-game menus or pause (PS4 only).
- **PS Button:** Access the PlayStation Home screen or power on/off the console (PS4 only).
- **L1/R1 Buttons:** Shoulder buttons, typically for quick actions.
- **L2/R2 Triggers:** Analog triggers for precise input, such as acceleration or firing.

### Using the Controller:

Once connected, the controller functions similarly to a standard PlayStation 4 controller for compatible games. For PC, ensure the game supports XInput or DirectInput controllers for optimal performance.

## MAINTENANCE

### Cleaning:

To clean the controller, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the controller's internal components. Do not use harsh chemicals or abrasive cleaners, as these may damage the finish or internal electronics.

**Storage:**

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the controller to prevent damage to the cable or buttons.

**Cable Care:**

Do not sharply bend, twist, or pull on the controller cable. Always grasp the plug, not the cable, when connecting or disconnecting it from your console or PC to prevent internal wire damage.

**TROUBLESHOOTING**

**Controller Not Responding:**

- Ensure the USB cable is securely plugged into both the controller and the console/PC.
- Try plugging the controller into a different USB port on your console/PC.
- Restart your console or PC.
- If on PC, check Device Manager to ensure the controller is recognized and drivers are installed correctly.

**Buttons or Sticks Not Working Correctly:**

- Check for any physical obstructions or debris around the buttons or analog sticks.
- Ensure the controller is clean (refer to Maintenance section).
- Test the controller with another game or application to determine if the issue is specific to one program.

**Vibration Not Working:**

- Verify that the game or application you are playing supports vibration feedback.
- Check in-game settings to ensure vibration is enabled.

**SPECIFICATIONS**

| Feature                         | Detail                                     |
|---------------------------------|--|
| Model Number                    | SWIAGJC                                    |
| Connectivity                    | Wired USB                                  |
| Compatibility                   | PlayStation 4, PC                          |
| Product Dimensions (Controller) | Approximately 7.2 inches (18 cm) in height |
| Item Weight                     | 7.41 ounces (210 grams)                    |

Manufacturer

Gioteck



Image: Gioteck VX-4 Wired Controller with dimensions. This image shows the controller held in a hand, with an overlay indicating a height of 7.2 inches (18 cm).

## WARRANTY AND SUPPORT

For warranty information and technical support regarding your Gioteck VX-4 Wired Controller, please refer to the official Gioteck website or contact their customer service directly. It is recommended to keep your proof of purchase for any warranty claims.

Manufacturer: Gioteck

Date First Available: September 10, 2020

Gioteck VX-4 Wired Controller User Manual - Model SWIAGJC






© 2024 Gioteck. All rights reserved.

## Related Documents - SWIAGJC



### [Gioteck TX70 Wireless RF Stereo Gaming Headset - Quickstart Guide](#)

Gioteck TX70 Wireless RF Stereo Gaming Headset Quickstart Guide. Learn how to set up and use your TX70 headset with PlayStation, Xbox, Nintendo Switch, PC, and mobile devices. Features wireless connectivity and stereo sound.

|  |   |
|--|---|
|    | <p><a href="#">Gioteck WX-4 Wireless Controller User Manual</a></p> <p>Comprehensive user manual for the Gioteck WX-4 wireless controller, detailing setup, features, and compatibility for Nintendo Switch and Windows PC.</p>   |
|   | <p><a href="#">Gioteck VX4 Wireless Controller Quickstart Guide</a></p> <p>A quickstart guide for the Gioteck VX4 Wireless Controller, covering button mapping, basic operations, touch pad gestures, setup for PS4 and PC (wired and Bluetooth), and troubleshooting.</p>  |
|   | <p><a href="#">Gioteck WX4+ Wireless RGB Controller Quickstart Guide</a></p> <p>A comprehensive quickstart guide for the Gioteck WX4+ Wireless RGB Controller, detailing setup for Nintendo Switch and Windows PC via Bluetooth and USB, button mapping, and troubleshooting.</p>   |
|   | <p><a href="#">Gioteck VX4+ Wireless RGB Controller Quickstart Guide</a></p> <p>Get started quickly with the Gioteck VX4+ Wireless RGB Controller. This guide provides essential information on button mapping, setup for PS4 and PC, and basic operations for an enhanced gaming experience.</p>   |
|  | <p><a href="#">Gioteck Smart TV+ Duo Wireless Controller Quickstart Guide</a></p> <p>Get started with your Gioteck Smart TV+ Duo Wireless Controller. This guide provides essential information for setup, connection methods (USB, 2.4GHz, Bluetooth), basic operation, features like Turbo mode and LED customization, technical specifications, customer support, warranty, and safety guidelines.</p> |