

Midea MFCY75A2

Midea 7.3L Extra Large Digital Air Fryer User Manual

MODEL: MFCY75A2

[Introduction](#)[Safety
Instructions](#)[Product Components
Troubleshooting](#)[Setup](#)[Operation](#)[Maintenance](#)

1. Introduction

Thank you for purchasing the Midea 7.3L Extra Large Digital Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods, utilizing DualCyclone Rapid Air Technology for fast and even cooking. With its large capacity, digital control panel, and versatile functions, you can enjoy crispy and juicy results with minimal oil. Please read this manual thoroughly before use to ensure proper operation, maintenance, and safety.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then

remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the frying basket is properly inserted before operating.
- Do not block any ventilation openings.
- The appliance operates at high temperatures. Be careful of hot steam and air when opening the drawer.

3. Product Components

Familiarize yourself with the main parts of your Midea Air Fryer:



Figure 3.1: Overall view of the Midea 7.3L Digital Air Fryer. This image shows the sleek black and grey design, the digital control panel on top, and the large see-through window on the front.

- **Main Unit:** Houses the heating element and fan.
- **Frying Basket:** Non-stick coated basket for holding food.
- **Digital Control Panel:** Touch-sensitive panel for setting time, temperature, and selecting presets.
- **Large See-Through Window:** Allows monitoring of cooking progress without opening the basket.
- **JuicyLock Technology Water Tank:** Built-in tank for adding moisture during cooking.

7.3L capacity



Figure 3.2: The 7.3L capacity of the air fryer, showing its internal basket and overall dimensions (315mm height, 320mm width, 312mm depth).

Large see-through window



Figure 3.3: Close-up view of the large see-through window on the air fryer lid, allowing users to monitor cooking without opening the unit.

Dual frying functions



Figure 3.4: Top view highlighting the dual frying functions and the measuring cup for adding water for the JuicyLock Technology.

Non-stick coating



Figure 3.5: Detailed view of the digital control panel and the non-stick coating of the cooking surface, showing temperature display and function icons.

4. Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Cleaning:** Wipe the exterior of the appliance with a damp cloth. Wash the frying basket and any removable accessories with hot, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 10 cm of free space on the back, sides, and above the appliance.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure the area is well-ventilated.

5. Operating Instructions

5.1 Basic Operation

1. **Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Ensure the frying basket is securely placed inside the main unit.
3. **Power On:** Plug in the appliance. The digital display will illuminate.
4. **Set Temperature and Time:**
 - Use the temperature controls (usually + and - buttons) to set the desired cooking temperature (up to 200°C).
 - Use the timer controls (usually + and - buttons) to set the desired cooking time (up to 60 minutes).
5. **Select Preset (Optional):** The digital panel features 8 preset functions for common foods. Touch the corresponding icon to select a preset. The appliance will automatically set the optimal temperature and time, which can be adjusted manually if needed.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking process. The air fryer will preheat if necessary, then start cooking.
7. **Shake/Turn Food:** For some recipes, especially fries or smaller items, it is recommended to shake or turn the food halfway through cooking. The air fryer may beep to remind you.
8. **Finish Cooking:** The air fryer will beep when the set time has elapsed. Carefully remove the basket and transfer the cooked food.

5.2 Dual Frying Functions (Juicy & Crispy)

This air fryer features innovative Dual Frying Functions, allowing you to achieve both juicy and crispy results. The JuicyLock Technology utilizes a built-in water tank to add moisture during cooking, preventing food from drying out.

1. For Juicy Cooking:

- Locate the water tank on the top of the appliance (refer to Figure 3.4).
- Fill the water tank with clean water up to the indicated maximum level.
- Select the "Juicy" function on the digital panel (if available as a dedicated button) or ensure the water tank is filled when using relevant presets.
- Proceed with cooking as per basic operation. The appliance will automatically release steam to keep food moist.

2. For Crispy Cooking:

- Ensure the water tank is empty and dry, or do not activate the "Juicy" function.
- Proceed with cooking as per basic operation. The DualCyclone Rapid Air Technology will circulate hot air to achieve a crispy exterior.

Your browser does not support the video tag.

Video 5.1: A demonstration of the Midea 7.3L Air Fryer (MFCY75A2) in use, showcasing its features and cooking capabilities, including the JuicyLock Technology.

Your browser does not support the video tag.

Video 5.2: A short overview video of the MFCY75A2 Air Fryer, highlighting its design and key functionalities.

8 functions with digital panel



Figure 5.1: The Midea Air Fryer shown with a variety of cooked dishes, demonstrating its versatility for preparing meals like chicken, fries, and nuggets.

6. Maintenance and Cleaning

Proper cleaning and maintenance will extend the life of your air fryer.

1. **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Frying Basket and Accessories:** The frying basket and any removable accessories are non-stick coated. Wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in hot water for about 10 minutes before cleaning. These parts are generally dishwasher safe, but hand washing is recommended to prolong their lifespan.
3. **Interior of the Appliance:** Wipe the interior with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
4. **Exterior of the Appliance:** Clean the exterior with a damp cloth. Never immerse the main unit in water or any other liquid.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

7. Troubleshooting

If you encounter issues with your air fryer, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet malfunction; basket not properly inserted.	Ensure plug is securely in outlet; check power outlet with another appliance; ensure basket is fully pushed in.
Food is not cooked evenly.	Basket is overfilled; temperature too low; food not shaken/turned.	Cook in smaller batches; increase temperature; shake or turn food halfway through cooking.
White smoke coming from appliance.	Greasy residue from previous use; cooking fatty food.	Clean the basket and interior thoroughly; for fatty foods, add a little water to the bottom of the outer pan to prevent smoke.
Food is not crispy.	Too much moisture; not enough oil (if recipe calls for it); temperature too low.	Ensure food is dry before air frying; lightly coat food with oil; increase temperature or cooking time.

If the problem persists after trying these solutions, please contact Midea customer support.

8. Product Specifications

Feature	Detail
Brand	Midea
Model Number	MFCY75A2
Capacity	7.3 Liters
Power / Wattage	1500 watts
Color	Black
Material	Aluminum, Plastic
Product Dimensions (L x W x H)	42 x 31 x 29 cm
Item Weight	9 Kilograms
Special Features	Temperature Control, Programmable, Large See-Through Window, Dual Frying Functions, Dual Cyclone Rapid Hot Technology

9. Warranty and Support

This Midea Air Fryer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or warranty claims, please contact Midea customer service through their official website or the contact information provided in your product documentation. Keep your purchase receipt as proof of purchase.

You can visit the official Midea store for more information:[Midea Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question