

[Manuals.plus](#) /

> [FlexSafe](#) /

> FlexSafe AquaVault Portable Travel Safe Mini - Instruction Manual

 
FlexSafe FlexSafeLockbox

FlexSafe AquaVault Portable Travel Safe Mini - Instruction Manual

Model: FlexSafeLockbox

INTRODUCTION

Welcome to your new FlexSafe AquaVault Portable Travel Safe Mini. This manual provides essential information for the safe and effective use of your anti-theft lockbox. Designed for portability and security, the FlexSafe Mini helps protect your valuables in various environments, from beaches and pools to hotels and outdoor adventures.

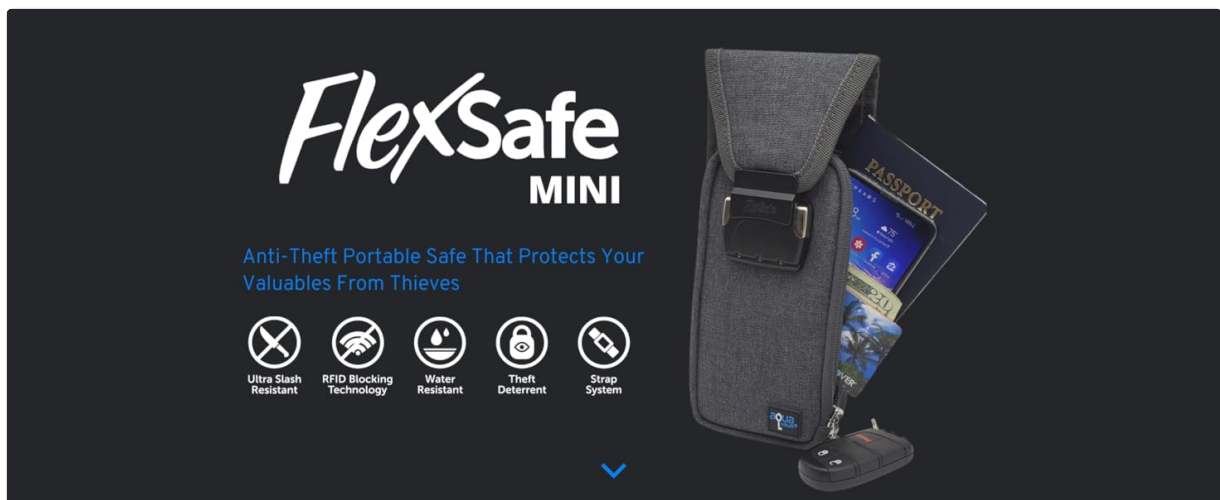

An overview image of the FlexSafe Mini, highlighting its anti-theft features and compact design.

PRODUCT FEATURES

The FlexSafe Mini is engineered with multiple layers of protection and user-friendly features:

- **Slash-Resistant Material:** Constructed with a five-layer, cut-resistant fabric for enhanced security.
- **RFID Blocking:** Integrated material protects digital assets like credit cards and passports from electronic theft.
- **Water-Resistant:** Designed to withstand splashes and light rain, keeping contents dry.
- **Re-programmable 3-Digit Combination Lock:** Securely locks the main compartment and allows

attachment to fixed objects.

- **Universal-Fit Locking Flap:** Enables attachment to various fixed objects such as beach chairs, railings, and bike frames.
- **Internal Zipper Pouch:** Provides additional secure storage within the main compartment.
- **Side Mesh Storage Pockets:** Convenient for quick access to smaller items.
- **Padded Carry Handle:** For comfortable transport.
- **Lightweight and Easily Packable:** Ideal for travel.

The image shows a functional design diagram for the FlexSafe Mini bag. On the left, a close-up of the bag's top opening is shown with a blue mesh texture. A double-headed arrow above the opening is labeled "Ultra Thin & Easily Packable". A label "Locking Flap & Zipper Design" with an arrow points to the zipper mechanism. To the right, the text "FUNCTIONAL DESIGN" is displayed in blue and white. Below this, a list of features is provided: "Slash Resistant, Water Resistant & RFID Blocking", "2 Way Belt Loop", "Re-Programmable 3 Digit Combination Lock", "Light-Weight & Easily Packable", and "Anti-Theft Safe Bag". At the bottom of the diagram, there is a row of ten icons representing different use cases: Beaches, Colleges, Cruises, Home, Hotels, Offices, Shopping, Outdoors, Summer Camps, and Theme Parks. A blue downward-pointing arrow is centered below the icons.

An image illustrating the functional design of the FlexSafe Mini, detailing its slash-resistant, water-resistant, and RFID blocking properties, along with the 2-way belt loop and re-programmable combination lock.



A close-up image showing the multi-layer construction of the FlexSafe, including nylon, RFID blocking material, EVA for rigidity, and 1680D denier nylon outer layer.

SETUP INSTRUCTIONS

Setting Your Combination Lock

Your FlexSafe Mini comes with a pre-set combination of 0-0-0. Follow these steps to set your personal combination:

1. Ensure the lock is set to the current combination (factory default is 0-0-0).
2. Locate the small reset button on the side or bottom of the lock mechanism. Use a pen or a pointed object to press and hold this button.
3. While holding the reset button, rotate the dials to your desired 3-digit combination. Choose a memorable but secure combination.
4. Release the reset button. Your new combination is now set. Test it by scrambling the dials and then entering your new code to open the lock.

Important: Remember your combination. There is no master key or override if you forget it.

Your browser does not support the video tag.

An official video from AquaVault demonstrating the features and setup of the FlexSafe Portable Safe, including how to set

the combination lock.

OPERATING INSTRUCTIONS


Securing Your Valuables Inside the Safe

1. Open the main flap of the FlexSafe Mini.
2. Unzip the internal zipper pouch to access the main storage compartment.
3. Place your items (phone, wallet, keys, etc.) inside the main compartment. Utilize the side mesh pockets for smaller accessories if needed.
4. Close the internal zipper pouch.
5. Close the main flap and ensure the zipper pull tab is inserted into the lock mechanism.
6. Scramble the combination dials to secure the contents.


Attaching the Safe to a Fixed Object

1. With the safe closed and locked, identify a fixed object (e.g., beach chair arm, umbrella pole, bike frame, hotel closet rod).
2. Wrap the flexible locking flap around the chosen object.
3. Insert the end of the flap into the lock mechanism on the front of the safe.
4. Ensure the flap is securely engaged and scramble the combination dials.

**Perfect for
Travel**

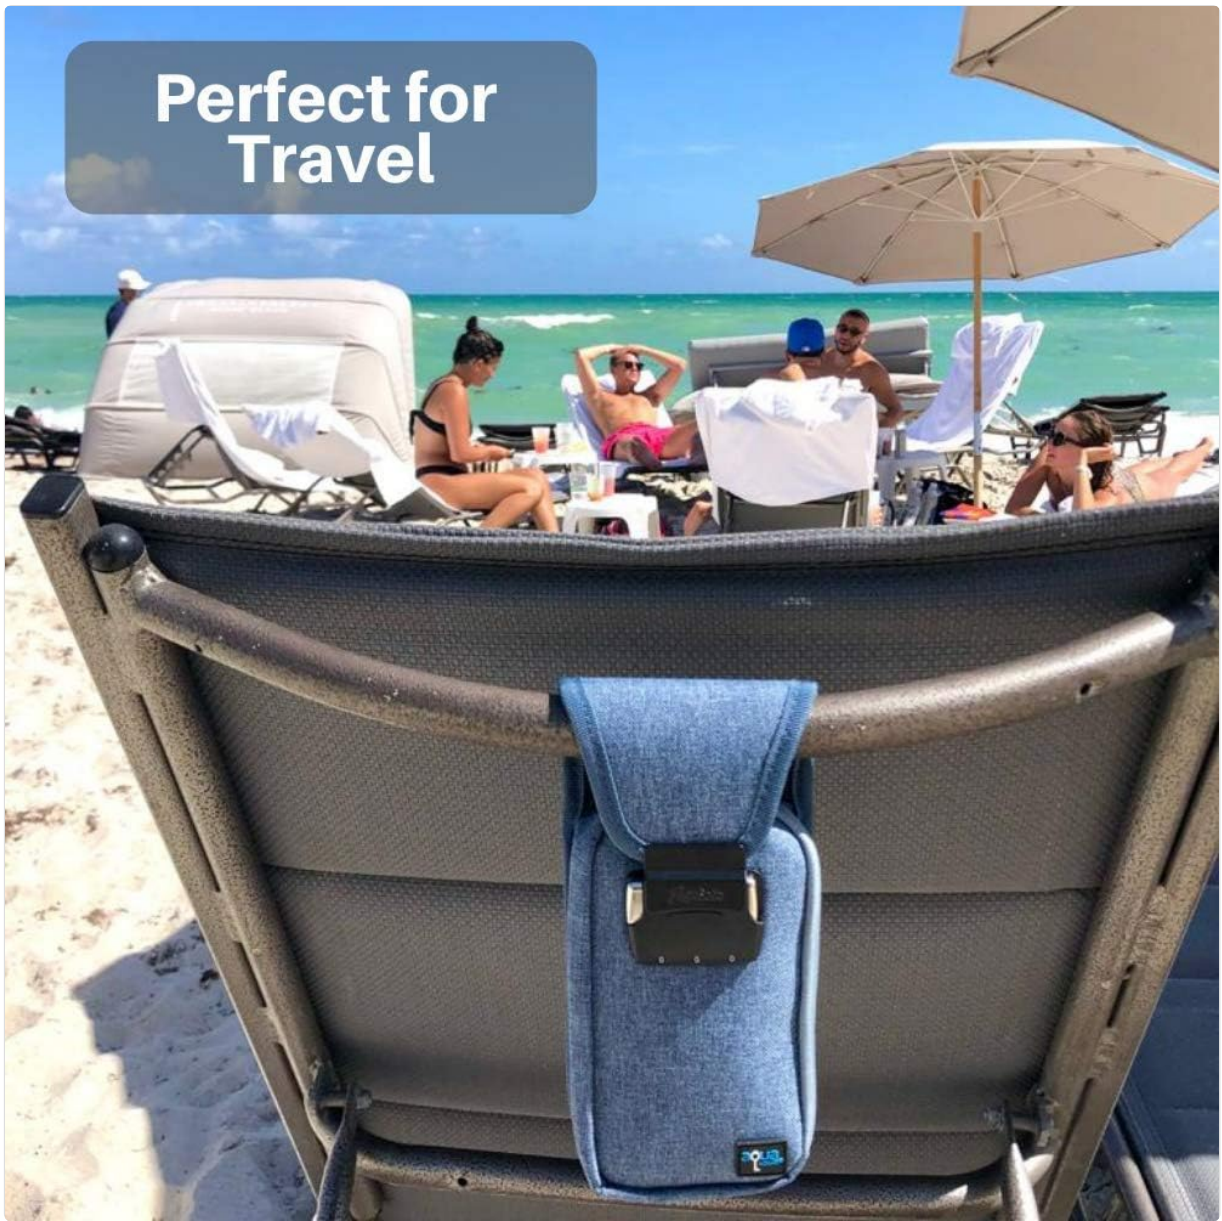

The FlexSafe Mini securely attached to a beach lounge chair, demonstrating its use in a travel setting.

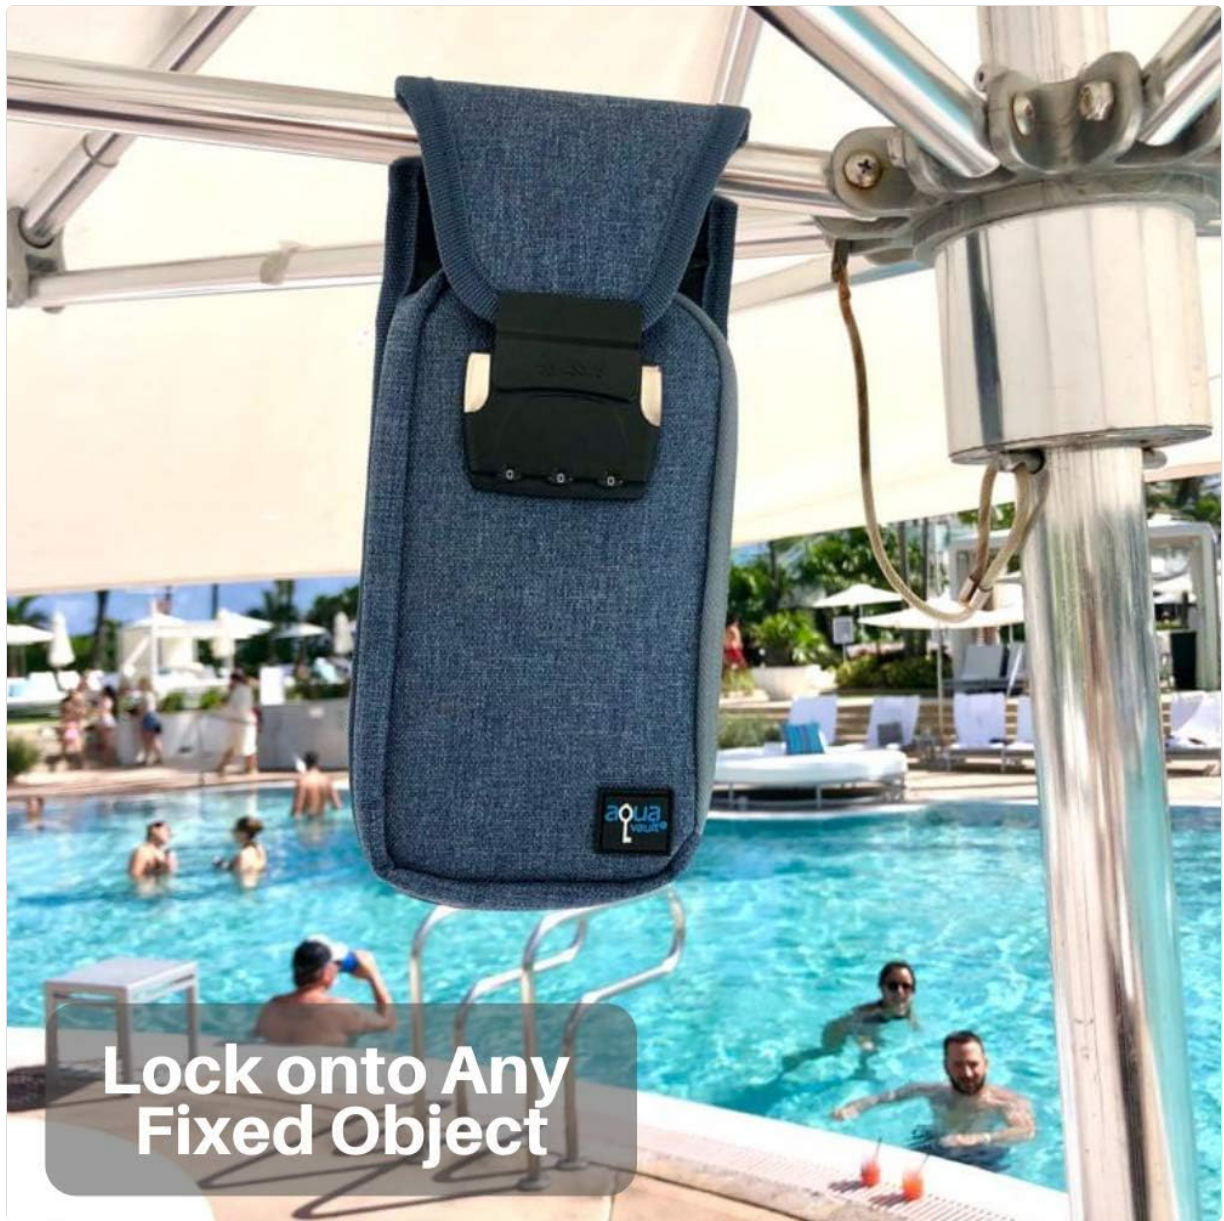

**Lock onto Any
Fixed Object**

The FlexSafe Mini locked onto an umbrella pole by a pool, showcasing its versatility in securing to various fixed objects.

Perfect Lockable Storage for Bikes



The FlexSafe Mini attached to a bicycle frame, illustrating its use as secure storage for cyclists.

MAINTENANCE

To ensure the longevity and optimal performance of your FlexSafe Mini:

- **Cleaning:** Wipe the exterior with a damp cloth and mild soap if necessary. Do not submerge the safe in water.
- **Drying:** If the safe gets wet, allow it to air dry completely before storing to prevent mildew.
- **Lock Care:** Keep the combination lock mechanism free from sand, dirt, and debris. Periodically check that the dials turn smoothly.
- **Storage:** Store the safe in a cool, dry place when not in use.

TROUBLESHOOTING

Lock Not Opening

- **Incorrect Combination:** Double-check that you are entering the correct 3-digit combination. Ensure each dial is precisely aligned with the indicator mark.
- **Dials Stiff:** If the dials are stiff, gently rotate them back and forth to loosen any debris. Avoid forcing

the mechanism.

- **Zipper Tab Not Engaging:** Ensure the zipper pull tab is fully inserted into the lock mechanism before scrambling the dials. If it's not fully seated, the lock will not engage properly.

Difficulty Attaching to Object

- **Object Size:** The universal-fit flap is designed for most common objects. If the object is too thick, the flap may not reach or securely engage the lock.
- **Proper Alignment:** Ensure the flap is wrapped tightly and aligned correctly with the lock mechanism for a secure fit.

SPECIFICATIONS

Feature	Detail
Brand	FlexSafe
Model	FlexSafeLockbox
Product Dimensions	3"D x 6"W x 10"H
Lock Type	Mechanical Code Lock
Color	Grey
Capacity	5 ounces
Material	Nylon
Special Features	Combination Lock, Portable, Scratch Resistant, RFID Blocking
Item Weight	5 Ounces
Water Resistance Level	Not Water Resistant
UPC	609408295324

Note: While the product is designed to be water-resistant against splashes, it is not intended for submersion.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official FlexSafe website or contact AquaVault customer service. Keep your purchase receipt as proof of purchase.

For further assistance, visit the [AquaVault Brand Store](#).