

## Thomson 55UG6300

# Thomson LED TV 55UG6300 User Manual

Model: 55UG6300

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Thomson LED TV 55UG6300. Please read this manual thoroughly before using your television and retain it for future reference. This television features a 55-inch 4K Ultra HD LED display with Smart TV capabilities, including pre-installed applications like Netflix and YouTube.



**Image 1.1:** Front view of the Thomson LED TV 55UG6300. This image displays the television from the front, showcasing its slim bezel and the Thomson branding at the bottom center. The screen shows a vibrant landscape image with 'THOMSON' and 'SMART TV.3' logos at the top, and '4K Ultra HD' at the bottom right.

## 2. SAFETY INFORMATION

---

Always observe the following safety precautions to prevent fire, electric shock, or injury.

- Do not expose the TV to rain or moisture.
- Ensure proper ventilation around the TV. Do not block ventilation openings.
- Do not place the TV on an unstable cart, stand, tripod, bracket, or table.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Keep small parts and packaging materials out of reach of children.

## 3. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package. If any items are missing or damaged, contact your retailer.

- Thomson LED TV 55UG6300
- Remote Control
- TV Stand (2 pieces)
- Screws for Stand Assembly
- Power Cord
- User Manual (this document)

## 4. SETUP

---

### 4.1 Attaching the Stand

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are tightened firmly.



**Image 4.1:** Side view of the Thomson LED TV 55UG6300 with its stand attached. This image shows the television from a slight angle, highlighting the design of the stand and the slim profile of the TV.

## 4.2 Wall Mounting

The TV supports VESA wall mounting. For wall mounting, remove the stand. The VESA mounting pattern is 300 x 300 mm. Use M6 screws (not included) with a length appropriate for your wall mount bracket and wall type. Consult a professional for wall mounting installation.

## 4.3 Connecting Peripherals

Your Thomson TV offers various connectivity options:

- **HDMI:** Connect external devices such as Blu-ray players, game consoles, or set-top boxes using HDMI cables. The TV has 3 HDMI 2.0b ports.
- **USB:** Connect USB storage devices for media playback. The TV has 2 USB 2.0 ports.
- **Wi-Fi:** Connect to your home wireless network for Smart TV features.
- **Ethernet (LAN):** For a stable wired internet connection, connect an Ethernet cable to the LAN port.
- **Antenna/Cable:** Connect your antenna or cable TV feed for broadcast channels.

## 4.4 First Time Setup

After connecting the power cord and turning on the TV, follow the on-screen instructions to complete the initial setup. This typically includes selecting your language, connecting to a network, and scanning for channels.

## 5. OPERATING THE TV

### 5.1 Remote Control

Use the included remote control to navigate the TV's functions. Common buttons include Power, Volume Up/Down, Channel Up/Down, Input Source, Home, and Navigation (Up, Down, Left, Right, OK).

### 5.2 Smart TV Features

Your Thomson TV is equipped with Smart TV capabilities, allowing access to various online services and applications.

- **Home Screen:** Press the 'Home' button on your remote to access the Smart TV home screen.
- **Pre-installed Apps:** Popular applications such as Netflix and YouTube are pre-installed for your convenience.
- **App Store:** Explore and download additional applications from the integrated app store (if available).



**Image 5.1:** The Smart TV interface of the Thomson TV. This image shows the television screen displaying the Smart TV home menu, with prominent icons for YouTube and Netflix, along with other content previews and navigation options.

### 5.3 Navigation

Use the directional buttons and the 'OK' button on your remote to navigate through menus and select options. The 'Back' button allows you to return to the previous screen, and the 'Exit' button closes menus or applications.

## 6. MAINTENANCE

---

### 6.1 Cleaning

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Always unplug the TV before cleaning.

### 6.2 Software Updates

To ensure optimal performance and access to the latest features, it is recommended to keep your TV's software updated. Check for updates periodically through the TV's settings menu. Some updates may require a USB drive if not available over-the-air (OTA).

## 7. TROUBLESHOOTING

---

If you encounter issues with your TV, refer to the following common problems and solutions:

- **No Power:** Ensure the power cord is securely plugged into both the TV and a working electrical outlet. Check the power indicator light on the TV.
- **No Picture/Sound:** Verify the correct input source is selected. Check all cable connections (HDMI, antenna). Try another channel or input device.
- **Poor Picture Quality:** Check antenna/cable connections. Adjust picture settings (brightness, contrast, sharpness). Ensure the source content is high quality.
- **Remote Control Not Working:** Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
- **No Internet Connection:** Check your Wi-Fi router and internet service. Reconnect to the Wi-Fi network in the TV settings. For wired connections, ensure the Ethernet cable is properly connected.

If the problem persists, consult the Thomson support website or contact customer service.

## 8. SPECIFICATIONS

---

The following table outlines the technical specifications for the Thomson LED TV 55UG6300.



**Image 8.1:** Dimensions of the Thomson 55-inch TV. This image provides a visual representation of the television's physical dimensions, including height, width, and depth, measured in centimeters.

Feature	Specification
Brand	THOMSON
Model	55UG6300 (Note: Part number 65UG6300 may be used for the series)
Screen Size	55 Inches / 140 cm
Display Technology	LED
Resolution	4K Ultra HD (3840 x 2160)
Refresh Rate	60 Hz
Special Features	Smart/Internet
Supported Internet Services	Netflix, YouTube
Hardware Interface	HDMI
HDMI Ports	3 (HDMI 2.0b)
USB Ports	2 (USB 2.0)


Feature	Specification
Connectivity	HDMI, Wi-Fi, Ethernet (LAN)
Sound Output	2 x 8W
Mounting Type	Wall Mount (VESA 300x300mm)
Product Dimensions (with stand)	18.49 x 73.2 x 47.9 cm
Product Weight	12.4 kg
Model Year	2020
Power Consumption (SDR)	79.0 W
Power Consumption (HDR)	132.0 W
Standby Power Consumption	0.50 W
Remote Control Included	Yes
First Available Date	20 September 2020
Guaranteed Software Updates Until	Unknown

## 9. WARRANTY AND SUPPORT

Your Thomson LED TV 55UG6300 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.



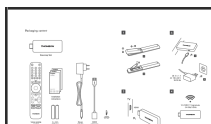


For technical support, troubleshooting assistance, or warranty claims, please visit the official Thomson support website or contact their customer service department. Keep your purchase receipt and product serial number handy when seeking support.

### Related Documents - 55UG6300



#### [THOMSON Streaming Stick 140G/145G: Installation and Setup Guide](#)

Comprehensive guide for setting up your THOMSON Streaming Stick 140G/145G, covering packaging contents, connection steps, technical specifications, and legal notices.

	<p><a href="#">THOMSON 4K Ultra HD Box THA100 User Manual</a></p> <p>User manual for the THOMSON 4K Ultra HD Box THA100, providing setup, connection, operation, and troubleshooting instructions. Learn about its features, remote control, and system settings.</p>
	<p><a href="#">THOMSON 4K Ultra HD Box THA100 User Manual</a></p> <p>Comprehensive user manual for the THOMSON 4K Ultra HD Box (THA100), covering setup, features, troubleshooting, and technical specifications. Learn how to connect, configure, and use your Android TV Box.</p>
	<p><a href="#">THOMSON SMART TV Felhasználói Kézikönyv</a></p> <p>A THOMSON SMART TV (modellek: 24HT2S15, 32HT2S15, 40FT2S15, 43FT2S15, 43UT4S15, 50UT4S15, 55UT4S15, 65UT4S15) részletes felhasználói útmutatója a telepítéshez, beállításhoz és a funkciók használatához.</p>
	<p><a href="#">Manual de Utilizare Smart TV Thomson: Ghid Complet pentru Instalare și Configurare</a></p> <p>Descoperiți cum să instalați, configurați și utilizați la maximum televizorul dvs. Smart TV Thomson. Acest manual oferă instrucțiuni detaliate, sfaturi de siguranță și informații despre funcționalități.</p>
	<p><a href="#">Thomson Smart TV Product Information and Specifications</a></p> <p>Comprehensive product information, safety guidelines, energy efficiency data, and technical specifications for Thomson Smart TVs, including models like 32HF2S34, 40FF2S34, and 43FF2S34.</p>