

BANGE 1908L

BANGE 45L Expandable Backpack Instruction Manual

Model: 1908L

INTRODUCTION

Thank you for choosing the BANGE 45L Expandable Backpack. This versatile backpack is designed for various uses, including travel, college, and daily commuting. It features an expandable capacity, water-resistant construction, and multiple compartments for efficient organization. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal use of your backpack.

PRODUCT FEATURES

- **Expandable Capacity:** Easily switch between 26L (compact) and 45L (expanded) to suit your needs.
- **Water-Resistant Material:** Constructed from durable Oxford fabric and Polyvinyl Chloride (PVC) to protect your belongings from moisture.
- **Multiple Carrying Options:** Can be carried as a backpack, or like a suitcase using the top and side handles.
- **Dedicated Laptop Compartment:** Padded compartment securely holds laptops up to 17.3 inches.
- **Integrated USB Charging Port:** Allows convenient charging of your devices on the go (power bank not included).
- **Luggage Strap:** For easy attachment to the handle of a rolling suitcase.
- **Dry-Wet Separation Pocket:** Keeps wet or damp items separate from dry contents.

SETUP AND INITIAL USE

Adjusting Capacity (26L to 45L)

The backpack's capacity can be adjusted to accommodate different loads. This feature is ideal for switching between daily use and extended travel.

- **To expand:** Locate the zipper running along the perimeter of the main compartment. Unzip it completely to extend the backpack's depth. Release any side compression buckles if they are fastened.
- **To compact:** Zip up the expansion zipper. Fasten any side compression buckles to reduce the backpack's depth and secure its contents.



Image: Side view illustrating the backpack's expandable capacity from 26L (daily work) to 45L (business travel) by adjusting the side zipper.

Adjusting Shoulder Straps and Chest Buckle

For optimal comfort and weight distribution, adjust the shoulder straps and utilize the chest buckle.

- Place the backpack on your back. Pull the strap ends to tighten the shoulder straps until the backpack sits comfortably and securely on your shoulders.
- Fasten the chest buckle across your chest and adjust its position and tension to help balance the weight and prevent shoulder strap slippage.



Image: Rear view highlighting the breathable mesh back panel, a hidden security pocket, and the adjustable chest buckle for improved comfort and weight distribution.

Using the USB Charging Port

The backpack includes an integrated USB charging port for convenient device charging.

- Locate the internal USB cable inside one of the main compartments.
- Connect your own power bank (not included) to this internal cable.
- To charge a device, connect your device's charging cable to the external USB port on the side of the backpack.



Image: Detail of the external USB charging port, allowing for convenient charging of electronic devices.

OPERATING INSTRUCTIONS

Organizing Main Compartments

The backpack features multiple compartments and pockets for organized storage.

- The main pocket can hold 5-8 pieces of clothing, making it suitable for 3-7 day trips.
- Utilize the various internal mesh pockets and zippered sections for smaller items like toiletries, chargers, or documents.
- The front compartment is suitable for magazines, tablets, and power banks.



1 Front 3 zipper pockets



2 Phone, wallet, pen, pocket, with key hook
suit for magazine, camera etc



3 Waterproof pocket
protects items



4 Large capacity
main pocket



5 Shockproof 15.6 laptop
compartment



Image: An exploded view of the backpack's interior, detailing the front zipper pockets, phone/wallet/pen pocket with key hook, waterproof pocket, large capacity main pocket, and shockproof laptop compartment.



Image: The main compartment fully open, revealing its large capacity suitable for clothing and the internal mesh pockets for organization.

Laptop Compartment

A dedicated, shockproof compartment protects your laptop.

- Place your laptop (up to 17.3 inches) into the padded sleeve located at the back of the backpack. This compartment is designed to protect your device from movement and impact.



Waterproof material
Keep the water from outside



Waterproof pocket
Suitable for cosmetics
electronics, etc.



Large capacity
Can hold 5-8pcs clothes

Image: The dedicated laptop compartment, showing its padded design for secure storage of a 15.6-inch laptop.

Wet Pouch Usage

The internal wet pouch is designed to keep liquids or damp items separate from your dry belongings, preventing leaks and moisture transfer.

- Store items such as toiletries, wet swimwear, or damp clothes in the designated waterproof pocket.

Carrying Options

The backpack offers multiple ways to carry it, adapting to your travel style.

- **Backpack Style:** Use the adjustable shoulder straps for traditional backpack carrying.
- **Suitcase Style:** Utilize the sturdy top and side handles to carry the backpack horizontally or vertically, similar to a briefcase or small suitcase.
- **Luggage Attachment:** Slide the luggage belt on the back panel over the handle of your rolling luggage for easy transport through airports or stations.

MAINTENANCE

Cleaning Instructions

Proper care will extend the life of your BANGE backpack.

- **Hand Wash Only:** Do not machine wash, bleach, tumble dry, or iron the backpack.
- **Spot Cleaning:** For minor dirt or stains, use a soft cloth dampened with mild soap and cool water. Gently wipe the affected area.
- **Drying:** After cleaning, allow the backpack to air dry completely in a well-ventilated area, away from direct sunlight or heat sources.

TROUBLESHOOTING

Backpack feels too small or lacks space

- Ensure the expansion zipper is fully unzipped to utilize the full 45L capacity.
- Review your packing method to ensure efficient use of all compartments and pockets.

Discomfort when carrying the backpack

- Adjust the length of both shoulder straps to ensure the backpack sits high and snug on your back.
- Fasten and adjust the chest buckle to distribute weight more evenly across your torso.
- Avoid overloading the backpack beyond the recommended maximum weight of 45 kg.

Devices not charging via USB port

- Verify that your power bank is fully charged and correctly connected to the internal USB cable inside the backpack.
- Ensure your device's charging cable is securely connected to the external USB port.
- Test the power bank and cables with other devices to rule out issues with those components.

SPECIFICATIONS

Dimensions (Compact)	19.5"H x 13"W x 6.8"D
Dimensions (Expanded)	19.5"H x 13"W x 11.5"D
Storage Volume	26 Liters (compact), 45 Liters (expanded)
Laptop Compatibility	Up to 17.3 inches
Material	Oxford fabric, Polyvinyl Chloride (PVC)
Water Resistance	Water Resistant

Item Weight	1.1 kg
Maximum Weight Recommendation	45 kg
Number of Compartments	7
Number of Pockets	6
Care Instructions	Hand Wash Only
Model Number	1908L
UPC	791342912631

WARRANTY AND SUPPORT

For specific warranty details or product support, please refer to the documentation provided at the time of purchase or contact BANGE customer service through the retailer where you acquired the product. Keep your proof of purchase for any warranty claims.

OFFICIAL PRODUCT VIDEOS

The following videos provide additional visual guidance on the features and usage of your BANGE 45L Expandable Backpack.

Your browser does not support the video tag.

Video: A comprehensive overview of the BANGE Travel Backpack, highlighting its waterproof features and suitability for laptops and travel.

Your browser does not support the video tag.

Video: Demonstrates the 45L travel backpack, emphasizing its flight-approved carry-on size and features.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question