

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux COMFORTHEAT 700 Oil Heater User Manual (Model EO12D101C0)

Electrolux EO12D101C0

Electrolux COMFORTHEAT 700 Oil Heater User Manual

Model: EO12D101C0

1. INTRODUCTION

Thank you for purchasing the Electrolux COMFORTHEAT 700 Oil Heater. This appliance is designed to provide comfortable and consistent warmth to your living space through natural convection. Please read this manual thoroughly before use to ensure safe and efficient operation. Keep this manual for future reference.

陽だまりのようにやさしく お部屋を暖めるオイルヒーター

10枚のフィンでムラなく暖めます。
ヒーター本体からは風を出さず輻射熱でお部屋を暖めるため、
室内の空気が乾燥しにくく、臭いありません。



Image: The Electrolux COMFORTHEAT 700 Oil Heater operating in a bedroom, demonstrating its gentle, radiant heating method. It warms the room evenly with 10 fins, without drying the air or producing odors, creating a comfortable environment.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using this heater.
- Do not use this heater near water or in wet locations.
- Do not insert foreign objects into any ventilation or exhaust opening.
- Ensure the heater is placed on a stable, level surface.
- Keep combustible materials at least 1 meter (3 feet) away from the front, sides, and rear of the heater.
- Unplug the heater when not in use.

- Do not operate any heater with a damaged cord or plug.
- This appliance is equipped with safety features:
 - **Child Lock Function:** Prevents unintended operation of the control panel.
 - **Overheat Protection:** Automatically turns off the heater if it overheats.
 - **Tip-Over Auto-Off:** Automatically cuts power if the heater is accidentally knocked over.

安全に配慮した3つの機能を搭載

コントロールパネルの操作ができなくなる“チャイルドロック機能”
異常加熱の発生時にヒーターをオフにする“加熱保護安全装置”
災害時などに転倒すると自動で電源が切れる“転倒時自動オフ機能”を
搭載。
これらにより寝室やお子様のいるご家庭でも安心してお使いいただけます。



Image: The Electrolux COMFORTHEAT 700 Oil Heater illustrating its three key safety features: Child Lock, Overheat Protection, and Tip-Over Auto-Off. These features ensure safe operation, especially in households with children.

3. PRODUCT FEATURES

The Electrolux COMFORTHEAT 700 Oil Heater offers several features for optimal comfort and ease of use:

- **Natural Convection Heating:** Warms the room gently and evenly without drying the air or producing odors.
- **10 Heating Fins:** Designed for efficient and consistent heat distribution.
- **Digital Control Panel:** Easy-to-read LCD display for settings and modes.
- **24-Hour Timer:** Program the heater to turn on or off at desired times.
- **3-Stage Power Settings:** Choose between 500W, 700W, and 1200W to suit your heating needs.

- **ECO Mode:** Energy-saving mode for optimized power consumption.
- **Child Lock:** Prevents accidental changes to settings.
- **Overheat Protection:** Automatic shutdown for safety.
- **Tip-Over Auto-Off:** Automatic shutdown if the unit is accidentally tipped.

見やすく使いやすい コントロールパネル

表示は液晶ディスプレイで設定・モードがひと目でわかりやすい仕様です。大きなコントロールパネルは押すだけで使いやすい設計。24時間タイマーや3段階出力と温度設定で、好きな時間に好きな強さで運転させることができます。



Image: Detailed view of the Electrolux COMFORTHEAT 700's user-friendly control panel, featuring an LCD display, 24-hour timer, 3-stage power settings (500W/700W/1200W), and ECO mode for efficient operation.

消費電力

1200_w

部屋の広さ

8-10_畳

タイマー

24_{時間}

3段階
強弱設定

転倒時、過加熱
時自動電源OFF

チャイルド
ロック

Image: A visual summary of the Electrolux COMFORTHEAT 700's key specifications and safety features, including power consumption, recommended room size, timer functionality, and safety mechanisms.

4. SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging materials for storage or transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 1 meter (3 feet) of clear space around the heater from walls, furniture, and other objects to allow for proper air circulation and prevent fire hazards.
3. **Window Placement:** For optimal heating efficiency, place the heater near a window. This helps to counteract cold air entering the room and promotes even heat distribution through natural convection.
4. **Power Connection:** Ensure the voltage rating on the heater matches your power supply. Plug the power cord directly into a grounded wall outlet. Do not use extension cords or power strips.

窓際に
設置

温度のムラなく一定温度で
温まりやすい

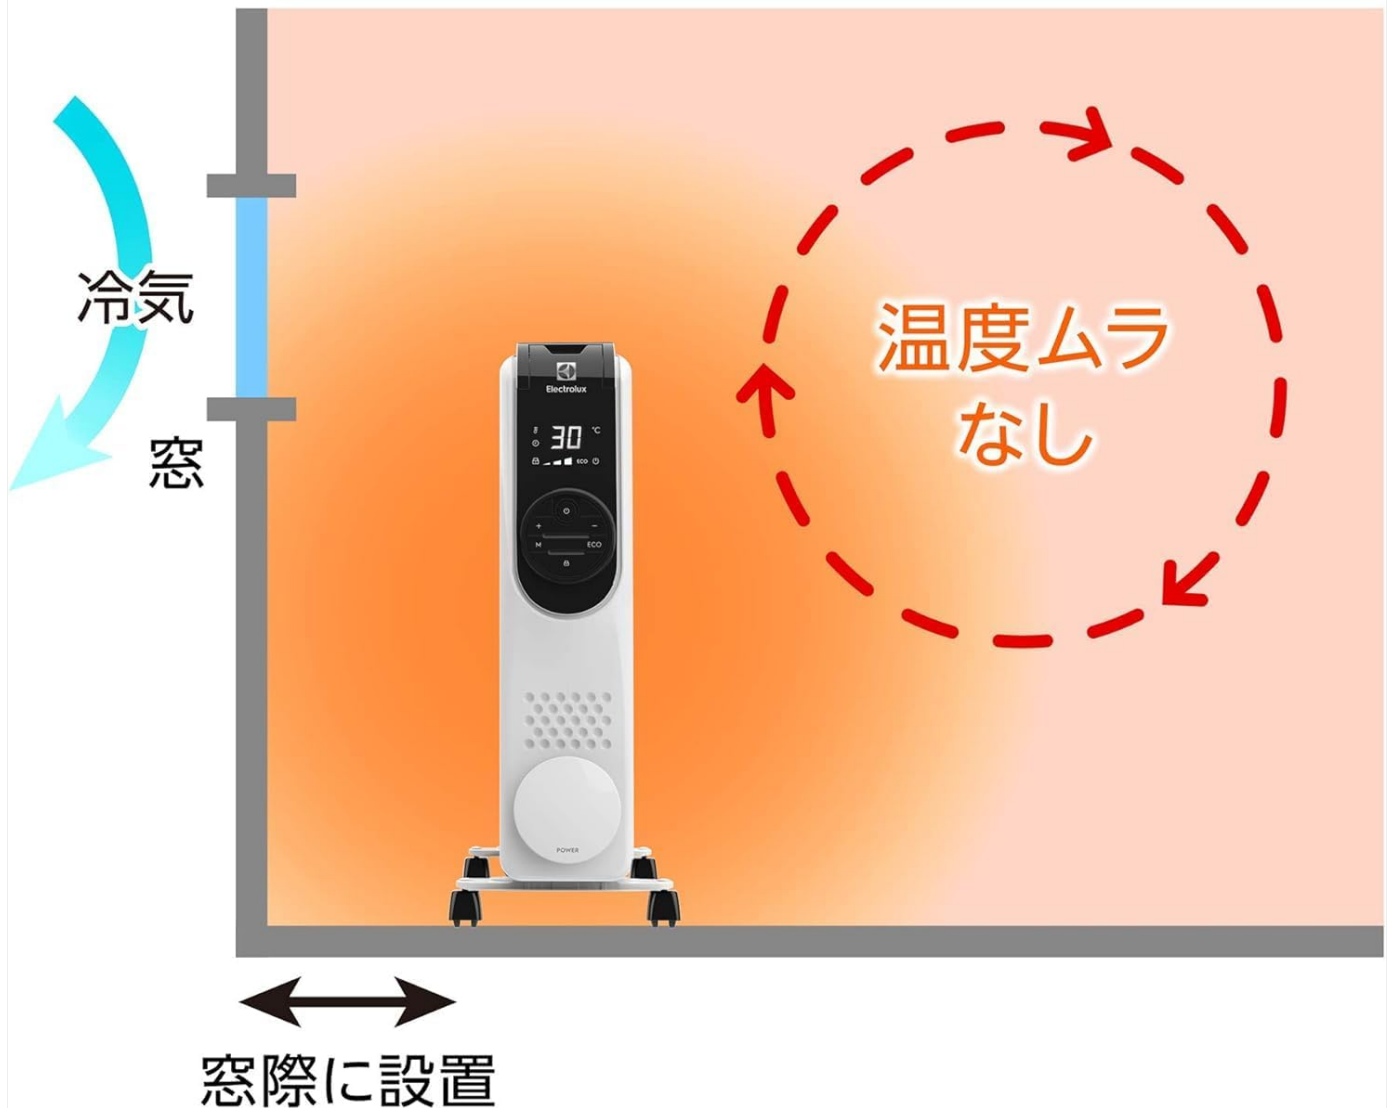


Image: Diagram showing the recommended placement of the Electrolux COMFORTHEAT 700 Oil Heater near a window. This setup facilitates natural convection, warming cold air and distributing heat evenly throughout the room without temperature variations.

5. OPERATION

1. **Power On/Off:** Press the power button on the control panel to turn the heater on or off.
2. **Temperature Setting:** Use the '+' and '-' buttons to adjust the desired room temperature. The set temperature will be displayed on the LCD screen.
3. **Power Mode Selection:** Press the 'M' (Mode) button to cycle through the 3-stage power settings: 500W, 700W, and 1200W. Select the appropriate power level for your room size and desired heating speed.
4. **ECO Mode:** Press the 'ECO' button to activate energy-saving mode. In this mode, the heater automatically adjusts its power output to maintain the set temperature efficiently.
5. **24-Hour Timer:**
 - To set the timer for automatic power-on or power-off, refer to the detailed instructions in the full user manual.

- The timer allows you to schedule heating cycles according to your daily routine.

6. **Child Lock:** To activate or deactivate the child lock, press and hold the designated child lock button (usually indicated by a lock icon) for a few seconds until the indicator appears or disappears on the display.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your oil heater.

- **Cleaning:**
 - Always unplug the heater and allow it to cool completely before cleaning.
 - Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
 - Do not immerse the heater in water or spray water directly onto it.
- **Storage:**
 - If storing the heater for an extended period, clean it thoroughly and place it back in its original packaging.
 - Store in a cool, dry place.
- **Oil Change:** This oil heater does not require oil changes. The oil is permanently sealed within the unit.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	• Not plugged in. • Power outlet not working. • Tip-over switch activated. • Overheat protection activated. • Child lock is active.	• Ensure the power cord is securely plugged into a working outlet. • Check the circuit breaker. • Place the heater upright on a stable surface. • Unplug the heater, let it cool for 30 minutes, then plug it back in. • Deactivate the child lock by pressing and holding the lock button.
Heater is on but not heating.	• Temperature setting is too low. • ECO mode is active and room temperature is near set point. • Room size exceeds heater capacity.	• Increase the temperature setting. • Adjust power mode to a higher setting (e.g., 1200W) or disable ECO mode. • Ensure the heater is appropriate for your room size (recommended for 8-10 tatami mats).
Unusual noises or odors.	• New unit odor (temporary). • Foreign object inside.	• Initial use may produce a slight odor, which should dissipate. • Unplug immediately and contact customer support. Do not attempt to open the unit.

If the problem persists after trying these solutions, please contact Electrolux customer support.

8. SPECIFICATIONS

Brand	Electrolux
Model Number	EO12D101C0
Color	White
Materials	ABS, PC, PP
Product Dimensions (L x W x H)	45.5 x 25 x 65 cm (approx. 17.9 x 9.8 x 25.6 inches)
Package Dimensions	70.6 x 55.8 x 16.6 cm (approx. 27.8 x 22 x 6.5 inches)
Product Weight	10.2 kg (approx. 22.5 lbs)
Package Weight	11.82 kg (approx. 26.1 lbs)
Power Settings	3 stages (500W, 700W, 1200W)
Timer	24-hour On/Off timer
Safety Features	Overheat Protection, Tip-Over Auto-Off, Child Lock
Oil Change Required	No
Indoor/Outdoor Use	Indoor



Image: The Electrolux COMFORTHEAT 700 Oil Heater with its physical dimensions clearly marked: 45.5 cm (width), 25 cm (depth), and 65 cm (height).

9. WARRANTY AND SUPPORT

Manufacturer Warranty: This product comes with a 1-year warranty from the date of delivery. A delivery receipt is required for warranty claims. The warranty is valid only for use within Japan.

For technical support, service, or warranty claims, please contact Electrolux customer service. Refer to the official Electrolux website or your purchase documentation for contact details.

You can find more information about Electrolux products and support on their official store page [Electrolux Store on Amazon.co.jp](#)

© 2023 Electrolux. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08JLNBKWK>

More documents and user manuals: <https://manuals.plus/>