

Alcatel XL595 B

Alcatel XL595 B Cordless Phone User Manual

Model: XL595 B

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Alcatel XL595 B cordless phone. Please read this manual carefully before using your phone to ensure proper functionality and to take full advantage of its features.

The Alcatel XL595 B is a DECT cordless phone designed for ease of use, featuring large buttons, a large backlit display, and an audio boost function for clearer sound. It also includes a call blocking feature to manage unwanted calls.

2. PACKAGE CONTENTS

Verify that your package contains the following items:

- 1 Handset
- 1 Base Station
- 1 Power Adapter
- 1 Telephone Line Cord (RJ11)
- 2 AAA NiMH Rechargeable Batteries
- This User Manual



Image: All components included in the Alcatel XL595 B package.

3. SETUP

3.1. Battery Installation

1. Open the battery compartment cover on the back of the handset.
2. Insert the two supplied AAA NiMH rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover.

Note: Use only the supplied rechargeable batteries. Non-rechargeable batteries may damage the phone.

3.2. Connecting the Base Station

1. Connect the small end of the power adapter to the "POWER" socket on the back of the base station.
2. Plug the other end of the power adapter into a wall power outlet.
3. Connect one end of the telephone line cord to the "LINE" socket on the back of the base station.
4. Plug the other end of the telephone line cord into your telephone wall socket or ADSL box.





Image: Alcatel XL595 B handset correctly placed in its base station.

3.3. Charging the Handset

Place the handset on the base station. The battery icon on the handset display will indicate charging. For optimal battery performance, charge the handset for at least 15 hours before its first use.

3.4. Handset Registration (if necessary)

Your handset is usually pre-registered to the base station. If the handset displays "Unregistered" or similar, you may need to register it manually:

1. On the base station, press and hold the **PAGE** button (or registration button) for approximately 5 seconds until the registration indicator light on the base starts flashing.
2. On the handset, navigate to the menu, select "Registration" (or similar option), and confirm.
3. Enter the system PIN (default is usually 0000).
4. Once registered, the handset will display its number (e.g., "Handset 1").

4. OPERATING INSTRUCTIONS

4.1. Making and Receiving Calls

- **Making a Call:** Dial the number and press the **Green Call** button.
- **Receiving a Call:** When the phone rings, press the **Green Call** button.
- **Ending a Call:** Press the **Red End Call** button or place the handset back on the base.

4.2. Audio Boost Function

To increase the earpiece volume during a call, press the **Audio Boost** button (often marked with a speaker icon or "+6dB"). This will amplify the sound for clearer conversations.

4.3. Hands-Free Speakerphone

During a call, press the **Speakerphone** button (usually marked with a speaker icon) to activate hands-free mode. You can adjust the speaker volume using the navigation keys.

4.4. Call Blocking Function

The call blocking feature helps prevent unwanted calls. It offers two modes:

- **Manual Mode:** Block numbers during or after a call by pressing the dedicated **Call Block** button.
- **Automatic Mode:** Configure the phone to only allow calls from numbers stored in your phonebook or VIP contacts. All other calls will be blocked. Refer to the menu settings for detailed configuration.



Image: Handset display indicating call blocking is active, alongside icons representing key features.

4.5. Phonebook and Direct Memory Keys (M1/M2)

- **Phonebook:** Store up to 100 names and numbers. Access the phonebook via the menu to add, edit, or delete contacts.
- **Direct Memory Keys (M1/M2):** Assign frequently called numbers to the M1 and M2 buttons for one-touch dialing.
 - a. To assign: Press and hold M1 or M2, then enter the number and name, and save.

b. To dial: Simply press M1 or M2.

- **VIP Function:** Assign specific ringtones to VIP contacts in your phonebook to easily identify important callers.

5. MAINTENANCE

- **Cleaning:** Clean the handset and base station with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** For optimal battery life, fully discharge the batteries occasionally before recharging. If the phone will not be used for an extended period, remove the batteries.
- **Environment:** Keep the phone away from heat sources, direct sunlight, and moisture.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No display on handset.	Batteries are flat or incorrectly inserted.	Ensure batteries are correctly inserted and charged for at least 15 hours.
No dial tone.	Telephone line cord is not connected or faulty.	Check the telephone line cord connection to the base and wall socket. Test with another phone if possible.
Cannot make/receive calls.	Handset is out of range or unregistered.	Move closer to the base station. Re-register the handset if necessary (see Section 3.4).
Poor sound quality.	Interference or low battery.	Move away from other electronic devices. Charge the handset batteries. Use the Audio Boost function.
Call blocking not working as expected.	Incorrect settings or mode.	Review the call blocking settings in the menu and ensure the desired mode (manual/automatic) is active.

7. SPECIFICATIONS

- **Model:** Alcatel XL595 B (ATL1422740)
- **Type:** DECT Cordless Phone
- **Color:** Black
- **Display:** Large Backlit Display
- **Phonebook Capacity:** 100 entries (Name & Number)
- **Direct Memory Keys:** M1, M2
- **Call Blocking:** Manual & Automatic Modes
- **Audio Features:** Audio Boost (+6dB), Hands-free Speakerphone
- **Batteries:** 2 x AAA NiMH Rechargeable (included)
- **Connections:** RJ11 (Telephone Line)
- **Compatible Devices:** PSTN Network, ADSL Box Compatible
- **Material:** Plastic
- **Weight:** Approximately 400 Grams
- **Manufacturer:** ATLINKS
- **Country of Origin:** China

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your package or visit the official Alcatel customer support website. Keep your proof of purchase for warranty claims.







Manufacturer: ATLINKS

Website: www.alcatel-home.com



© 2024 Alcatel. All rights reserved. Alcatel is a registered trademark.

Related Documents - XL595 B

	<p>Alcatel F685 Cordless Phone Start Up Guide</p> <p>Concise guide for setting up and using the Alcatel F685 cordless phone, covering connection, basic functions, display icons, safety, and troubleshooting. Learn how to make calls, manage contacts, and utilize features like call blocking.</p>
	<p>Alcatel F860 Voice Series: Smart Call Block User Guide</p> <p>Comprehensive guide to using the Smart Call Block feature on Alcatel F860 Voice, F860 Voice Duo, and F860 Voice Trio cordless phones to manage incoming calls and block unwanted numbers.</p>
	<p>Alcatel XL785 Voice Series User Manual</p> <p>Comprehensive user guide for the Alcatel XL785 Voice, XL785 Voice Duo, and XL785 Voice Trio cordless phone systems, covering setup, features, operation, and troubleshooting.</p>
	<p>Alcatel E260/E260 Duo/E260 Trio User Guide</p> <p>User guide for the Alcatel E260, E260 Duo, and E260 Trio cordless phones, covering installation, features, settings, troubleshooting, safety, and environmental information.</p>
	<p>Alcatel XL685 Voice Series User Manual: Setup, Features, and Operation</p> <p>Comprehensive user guide for the Alcatel XL685 Voice cordless phone, covering initial setup, handset and base features, phonebook, answering machine, call blocking, troubleshooting, safety, and technical specifications.</p>
	<p>Alcatel E260S Voice Cordless Phone with Answering Machine</p> <p>Explore the features of the Alcatel E260S Voice, a classic hands-free cordless phone. This document details its 2-line backlit display, answering machine, call blocking, extensive directory, and technical specifications.</p>