

[Manuals.plus](#) /

› [UBOTIE](#) /

› UBOTIE Wireless Keyboard and Mouse Combo User Manual

## UBOTIE AAA-QQQ-DE-V-POR-0901-B-54

# UBOTIE Wireless Keyboard and Mouse Combo User Manual

Model: AAA-QQQ-DE-V-POR-0901-B-54

## INTRODUCTION

This user manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your UBOTIE Colorful Wireless Keyboard and Mouse Combo. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

The UBOTIE Wireless Keyboard and Mouse Combo features a full-sized keyboard with retro round keycaps and a responsive optical mouse, operating on a 2.4GHz wireless connection for stable and dropout-free performance. It is compatible with Windows 7, Windows 8, Windows 10, and Mac operating systems.

## PACKAGE CONTENTS

- 1 x UBOTIE Wireless Keyboard
- 1 x UBOTIE Wireless Mouse
- 1 x USB Receiver (stored inside the mouse battery compartment)
- 1 x Cleaning Brush (for keyboard)
- User Manual (this document)

Note: 2 AA batteries are required for operation and are not included in the package.

## SETUP GUIDE

### 1. Installing Batteries

The keyboard requires 1 AA battery and the mouse requires 1 AA battery. Batteries are not included.



**Keyboard Battery Installation:** Locate the battery compartment on the underside of the keyboard. Insert one AA battery, ensuring correct polarity (+/-). Close the battery cover.

**Mouse Battery Installation:** Locate the battery compartment on the underside of the mouse. Insert one AA battery, ensuring correct polarity (+/-). The USB receiver is also stored in this compartment. Close the battery cover.

## 2. Connecting the USB Receiver

The keyboard and mouse share a single USB receiver for wireless connection.



Remove the USB receiver from the mouse battery compartment. Plug the USB receiver into an available USB-A port on your computer (desktop PC, laptop, or projector). Your operating system should automatically detect and install the necessary drivers.

If your device only has USB-C ports, you will need a USB-A to USB-C adapter (not included).

## OPERATING INSTRUCTIONS

### Keyboard Functions


The UBOTIE keyboard features a full 104-key layout with retro round keycaps. It includes standard alphanumeric keys, function keys, a numeric keypad, and navigation keys.



The keyboard is designed for comfortable typing with its unique round keycaps, reminiscent of a typewriter. The keys are durable and designed to prevent color fading.

## Multimedia and Shortcut Keys

The keyboard includes function keys (F1-F12) that can be used in combination with the **Fn** key to access multimedia controls and system shortcuts.

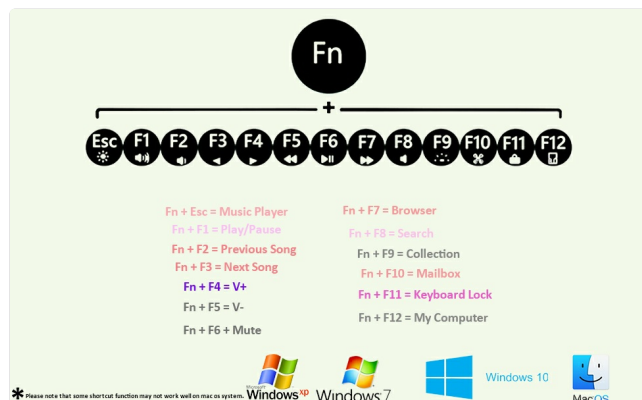

- **Fn + Esc:** Music Player
- **Fn + F1:** Play/Pause
- **Fn + F2:** Previous Song
- **Fn + F3:** Next Song
- **Fn + F4:** Volume Up
- **Fn + F5:** Volume Down
- **Fn + F6:** Mute
- **Fn + F7:** Browser
- **Fn + F8:** Search
- **Fn + F9:** Collection
- **Fn + F10:** Mailbox
- **Fn + F11:** Keyboard Lock
- **Fn + F12:** My Computer

Note: Some shortcut keys may not work optimally on Mac operating systems.

## Mouse Operation

The UBOTIE wireless mouse uses optical tracking technology for precise cursor control. It features a scroll wheel and standard left/right click buttons.



The mouse is designed for comfortable use and provides a smooth, responsive experience. It automatically enters a power-saving sleep mode after a period of inactivity. To wake the mouse, simply click any button.

## MAINTENANCE

Proper maintenance will extend the lifespan of your UBOTIE keyboard and mouse combo.

- **Cleaning the Keyboard:** The keyboard features removable keycaps for easy cleaning. Use the included cleaning brush to remove dust and debris from between the keys. For deeper cleaning, gently remove the keycaps and wipe the keyboard base with a soft, damp cloth. Ensure the keyboard is completely dry before reattaching keycaps and using.
- **Cleaning the Mouse:** Use a soft, dry cloth to wipe the surface of the mouse. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the keyboard or mouse performance degrades (e.g., delayed response, erratic cursor movement). Always use fresh AA batteries.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the combo in a cool, dry place away from direct sunlight and extreme temperatures.



The design allows for easy removal of keycaps, facilitating thorough cleaning of the keyboard's surface and internal components.

## TROUBLESHOOTING

| Problem                          | Possible Cause                                                                                        | Solution                                                                                                                                                                                                                                     |
|----------------------------------|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Keyboard/Mouse not responding    | Low or dead batteries. USB receiver not properly connected. Interference from other wireless devices. | Replace batteries in both keyboard and mouse. Ensure USB receiver is firmly plugged into a working USB port. Try a different USB port. Move closer to the receiver or remove potential sources of interference (e.g., other 2.4GHz devices). |
| Mouse cursor erratic or slow     | Low battery. Dirty optical sensor. Unsuitable surface.                                                | Replace mouse battery. Clean the optical sensor on the underside of the mouse with a soft cloth. Use the mouse on a clean, non-reflective, opaque surface or a mouse pad.                                                                    |
| Shortcut keys not working on Mac | Compatibility limitations with macOS.                                                                 | Some shortcut keys may have limited functionality or not work on Mac operating systems due to system differences. This is expected behavior.                                                                                                 |
| Keys sticking or unresponsive    | Debris under keycaps.                                                                                 | Use the provided cleaning brush to remove debris. If necessary, gently remove the affected keycap and clean underneath.                                                                                                                      |

If problems persist after trying these solutions, please contact UBOTIE customer support for further assistance.

## SPECIFICATIONS

|                              |                                                                    |
|------------------------------|--------------------------------------------------------------------|
| Brand                        | UBOTIE                                                             |
| Model Number                 | AAA-QQQ-DE-V-POR-0901-B-54                                         |
| Connectivity Technology      | 2.4 GHz Radio Frequency (USB Receiver)                             |
| Keyboard Layout              | Full-sized, 104 keys, Round Keycaps                                |
| Mouse Tracking Technology    | Optical                                                            |
| Compatible Operating Systems | Windows 7, Windows 8, Windows 10, macOS                            |
| Power Source                 | Battery Powered (2 x AA batteries required, not included)          |
| Product Dimensions           | Keyboard: 43.5 x 13 x 2.3 cm; Mouse: (approximate, based on image) |
| Weight                       | 939 g (Keyboard and Mouse combined)                                |



Detailed dimensions for the keyboard are 17.3 inches (length) and 5.11 inches (width). The mouse dimensions are approximately 4.52 inches (length) and 1.77 inches (width).

## WARRANTY AND SUPPORT

UBOTIE offers customer support for their products. If you encounter any issues or have questions regarding your UBOTIE Wireless Keyboard and Mouse Combo, please refer to the following:

- **Product Support:** For any wrong color problems or other issues, UBOTIE states that any replacement or refund will be responded to within 12 hours.
- **Contact Information:** Please refer to the contact details provided on the product packaging or the official UBOTIE website for direct support.
- **Warranty:** Specific warranty terms and duration may vary. Please retain your proof of purchase for warranty claims.

Note: The manufacturer's policy states that if you receive a wrong color keyboard, you should keep it and message them for an extra brand new one.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

### Answered questions about this manual

**The USB dongle for my UBOTIE purple multicolored retro keyboard stopped working; can I get a replacement receiver without buying a whole new keyboard and mouse combo?**

Based on the UBOTIE product documentation, the keyboard and mouse use a specific 2.4GHz USB receiver that is factory-paired to the set. While the manual does not explicitly list a standalone replacement part number...

[Read full answer](#)