Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Alpina /
- > Alpina Lucerne Electric Fireplace User Manual

Alpina Lucerne

Alpina Lucerne Electric Fireplace User Manual

Model: Lucerne (871125217841)

1. Introduction

Thank you for choosing the Alpina Lucerne Electric Fireplace. This appliance is designed to provide supplemental heating and a realistic flame effect, enhancing the comfort and ambiance of your living space. Please read this manual thoroughly before operating the fireplace to ensure safe and efficient use. Keep this manual for future reference.

2. SAFETY INFORMATION

Your safety is paramount. Please observe the following precautions:

- Read all instructions before using this appliance.
- This appliance is for indoor use only. Do not use outdoors.
- Ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not cover the air inlets or outlets of the fireplace. This can lead to overheating.
- Keep flammable materials such as furniture, curtains, and bedding at least 1 meter (3 feet) away from the front and sides of the fireplace.
- Do not operate the fireplace with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- · Always unplug the fireplace when not in use or before cleaning.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- This fireplace is equipped with an **overheat protection** system. If the heater overheats, the system will automatically shut off the appliance. Unplug the unit, allow it to cool for 15-20 minutes, and then plug it back in.
- Do not use this fireplace in bathrooms, laundry areas, or similar indoor locations where it may come into contact with water.
- Supervise children and pets when the appliance is in operation.

3. PRODUCT OVERVIEW

The Alpina Lucerne Electric Fireplace features a compact design with realistic LED flames and adjustable heating capabilities.



Figure 1: Front view of the Alpina Lucerne Electric Fireplace, showcasing the realistic flame effect.



Figure 2: Key features of the Alpina Lucerne Electric Fireplace, including LED flames, compact design, integrated handles, and adjustable temperature.

Components:

- Flame Effect Window: Displays the realistic LED flame effect.
- Control Panel: Located on the side, includes thermostat knob and power switches.
- Air Outlet: Located at the top, for heat emission.
- Integrated Handles: Two handles on the sides for easy portability.
- Power Cord: For connecting to an electrical outlet.



Figure 3: Close-up view of the control panel with thermostat and power switches.

4. SETUP

The Alpina Lucerne Electric Fireplace is designed for easy setup and portability.

- 1. **Unpacking:** Carefully remove the fireplace from its packaging. Retain packaging for future storage or transport.
- 2. **Placement:** Place the fireplace on a firm, level surface. Ensure there is adequate clearance around the unit (at least 1 meter from flammable materials). The compact size (59 x 41 x 26 cm) allows for flexible placement in various rooms.
- 3. **Power Connection:** Plug the power cord into a standard 240V ~ 50Hz electrical outlet. Ensure the outlet is easily accessible.



Figure 4: Dimensions of the Alpina Lucerne Electric Fireplace for optimal placement.



Figure 5: Example of fireplace placement in a room.



Figure 6: Integrated handles allow for easy movement of the fireplace.

5. OPERATING INSTRUCTIONS

The Alpina Lucerne Electric Fireplace offers both heating and a realistic flame effect, which can be used independently.

- 1. Power On/Off: Locate the main power switch on the control panel. Flip it to the 'ON' position to power the unit.
- 2. **Flame Effect Only:** To enjoy the realistic LED flame effect without heat, ensure the heat switches are in the 'OFF' position. The flame effect will activate automatically when the main power is on.
- 3. **Heat Settings:** The fireplace has two heat settings (1000W and 2000W). Use the heat switches on the control panel to select your desired heat output. You can choose between low heat (1000W) or high heat (2000W).
- 4. **Adjusting Temperature (Thermostat):** Turn the thermostat knob on the control panel to set the desired room temperature. The heater will cycle on and off to maintain this temperature.
- 5. **Power Off:** To turn off the fireplace, flip the main power switch to the 'OFF' position and unplug the unit from the wall socket.



Figure 7: The realistic LED flame effect provides ambiance.



Figure 8: Enjoying the warmth and ambiance provided by the fireplace.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

- Cleaning: Always unplug the appliance and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Dust Removal:** Periodically clean the air inlets and outlets with a soft brush or vacuum cleaner to prevent dust buildup, which can affect heating efficiency.
- **Storage:** If storing the fireplace for an extended period, unplug it and store it in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution	
Fireplace does not turn on.	No power supply; Main switch off; Overheat protection activated.	Check power cord connection and wall outlet. Ensure main power switch is ON. If overheat protection activated, unplug, wait 15-20 minutes, then plug back in.	
No heat, but flame effect works.	Heat switches are off; Thermostat set too low.	Ensure heat switches are ON. Increase thermostat setting.	
Fireplace makes a loud noise.	Normal fan operation; Internal component issue.	A certain level of fan noise is normal during heating. If the noise is excessive or unusual, discontinue use and contact customer support.	
Flame effect not working.	LED bulbs faulty; Main power off.	Ensure main power is ON. If problem persists, contact customer support.	

8. SPECIFICATIONS

Detailed technical specifications for the Alpina Lucerne Electric Fireplace.

Feature	Specification	
Brand	Alpina	
Model Number	871125217841 (Lucerne)	
Color	Black	
Product Dimensions (L x W x H)	26 x 41 x 59 cm	
Weight	8 Kilograms	
Power Output	1800-2000 Watts	
Material	Metal	
Power Source	Corded Electric (240V ~ 50Hz)	
Special Features	2 Integrated Handles, 5 Energy-Saving LED Lights, CE Approved, Overheat Protection, Adjustable Thermostat	
Heat Output	2000 Watts (Max)	
Installation Type	Freestanding	
Ventilation Type	Ventless	



Figure 9: The fireplace is suitable for heating spaces up to 20m².

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

Related Documents - Lucerne

