



[Manuals.plus](#) /

› [hofstein](#) /

› Hofstein Catharine White Metal Wall Sconce Instruction Manual (Model H3385845)

hofstein H3385845

Hofstein Catharine White Metal Wall Sconce Instruction Manual

Model: H3385845

1. INTRODUCTION

Thank you for choosing the Hofstein Catharine Wall Sconce. This manual provides important information for the safe installation, operation, and maintenance of your new wall light. Please read these instructions carefully before installation and retain them for future reference.

The Catharine wall sconce features a white metal design with a pivoting head and a convenient pull switch, suitable for various interior spaces such as living rooms, bedrooms, hallways, and kitchens. It requires one E14 bulb (not included).

2. SAFETY INSTRUCTIONS

- **Electrical Safety:** Installation must be performed by a qualified electrician or competent person in accordance with local electrical codes. Always disconnect power at the main circuit breaker before installation, maintenance, or bulb replacement.
- **Voltage:** This fixture is designed for 230 Volt electrical systems. Ensure your power supply matches this requirement.
- **Bulb Type:** Use only E14 base bulbs. Do not exceed the maximum wattage of 28 Watts per light.
- **Indoor Use Only:** This product is rated IP20, meaning it is protected against solid objects larger than 12.5mm but has no protection against water. Do not install in wet or damp locations.
- **Heat:** Allow the bulb to cool completely before touching or replacing it.
- **Cleaning:** Do not use abrasive cleaners or solvents. Clean with a soft, dry cloth.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged:

- 1x Hofstein Catharine Wall Sconce
- Mounting hardware (screws, wall plugs)
- Instruction Manual

Note: E14 bulb is not included and must be purchased separately.

4. SPECIFICATIONS

Feature	Detail
Brand	hofstein
Model Number	H3385845
Type of Luminaire	Wall Sconce
Material	Metal
Color	White
Dimensions (Depth x Length x Diameter)	21 cm x 11 cm x 9 cm (approx.)
Bulb Base	E14
Number of Bulbs	1 (not included)
Max Wattage per Bulb	28 Watts
Voltage	230 Volts
Switch Type	Pull Chain
Adjustable	Yes (Pivoting Spot)
IP Rating	IP20 (Indoor Use Only)
Energy Efficiency	Energy Efficient

5. SETUP AND INSTALLATION

Before you begin: Ensure the power supply to the installation area is turned off at the main circuit breaker. Gather all necessary tools (screwdriver, drill, wire strippers, etc.).

5.1 Mounting the Fixture

1. **Prepare the Wall:** Mark the desired mounting location on the wall. Use the mounting bracket (part of the fixture) as a template to mark the drill holes.
2. **Drill Holes:** Drill holes at the marked positions. Insert the provided wall plugs into the drilled holes.
3. **Connect Wiring:** Carefully connect the household electrical wires to the corresponding terminals on the fixture's wiring block. Ensure proper polarity (Live, Neutral, Earth). If unsure, consult a qualified electrician.
4. **Secure Fixture:** Attach the mounting bracket to the wall using the provided screws. Then, secure the lamp base to the mounting bracket.



Figure 1: Dimensions and internal wiring for installation.

5.2 Installing the Bulb

1. Ensure power is still off.
2. Carefully screw an E14 base bulb (max 28W) into the lamp holder. Do not overtighten.
3. Restore power at the main circuit breaker.



Figure 2: Bulb installation in the sconce.

6. OPERATING INSTRUCTIONS

6.1 Turning the Light On/Off

The Hofstein Catharine wall sconce is equipped with a pull switch for easy operation.

- To turn the light **ON**, gently pull the chain downwards until you hear a click and the light illuminates.
- To turn the light **OFF**, pull the chain downwards again.



Figure 3: Detail of the pull chain switch.

6.2 Adjusting the Light Direction

The lamp head is pivotable, allowing you to direct the light as needed.

- Gently hold the metal shade and pivot it to the desired angle. Avoid excessive force to prevent damage to the joint.



Figure 4: Adjustable lamp head.

7. MAINTENANCE

7.1 Cleaning

- Ensure the light is turned off and cooled before cleaning.
- Wipe the fixture with a soft, dry, or slightly damp cloth.
- Do not use harsh chemicals, abrasive cleaners, or polishes as they may damage the finish.

7.2 Bulb Replacement

- Turn off the power supply at the main circuit breaker.
- Allow the old bulb to cool completely.
- Unscrew the old E14 bulb counter-clockwise.
- Screw in a new E14 bulb (max 28W) clockwise until snug.
- Restore power.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Bulb is faulty or loose. Wiring error.	Check circuit breaker. Ensure bulb is screwed in tightly and replace if necessary. Consult a qualified electrician to check wiring.
Light flickers.	Loose bulb connection. Incompatible bulb. Faulty wiring.	Tighten bulb. Ensure bulb is compatible (E14, non-dimmable if fixture is non-dimmable). Consult a qualified electrician.
Pull switch not working.	Internal mechanism fault.	Contact customer support or a qualified electrician for repair or replacement.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact your retailer or Hofstein customer service.

Keep your purchase receipt as proof of purchase.

For more information about Hofstein products, visit the official Hofstein store: [Hofstein Store](#)
