

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FurReal](#) /

› [FurReal Grand Racker Animatronic Plush Tiger E5309EU40 Instruction Manual](#)

FurReal E5309EU40

FurReal Grand Racker Animatronic Plush Tiger E5309EU40 Instruction Manual

INTRODUCTION

Welcome to the instruction manual for your new FurReal Grand Racker Animatronic Plush Tiger, model E5309EU40. This interactive pet toy is designed to provide engaging play for children aged 4 and up. Your Grand Racker Tiger features realistic sounds, head movements, and tail wags when walked on its leash. It can also connect with other FurReal Walkalots pets for extended play.



Image: The FurReal Grand Racker Animatronic Plush Tiger with a child.

SAFETY INFORMATION

- **Recommended Age:** Suitable for children aged 4 years and up.
- **WARNING: Choking Hazard** – Not suitable for children under 3 years due to small parts that may be generated.
- **WARNING: Contains Button Batteries**– Dangerous if swallowed. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Adult supervision is recommended during play.

PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x FurReal Grand Racker Animatronic Plush Tiger
- 1 x Detachable Leash (with connector)
- 3 x 1.5V A76 Alkaline Batteries (pre-installed)

SETUP

1. Battery Installation/Replacement

Your FurReal Grand Racker Tiger comes with 3 x 1.5V A76 alkaline batteries pre-installed. If replacement is needed:

1. Locate the battery compartment on the underside of the pet.
2. Using a Phillips head screwdriver (not included), loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Remove the old batteries and dispose of them properly.
5. Insert 3 new 1.5V A76 alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
6. Replace the battery compartment cover and tighten the screw. Do not overtighten.

2. Attaching the Leash

The detachable leash allows you to walk your pet. To attach:

1. Align the leash handle with the designated slot on the pet's back.
2. Gently push the leash handle into the slot until it clicks securely into place.



Image: The FurReal Grand Racker Animatronic Plush Tiger with its detachable leash.

OPERATING INSTRUCTIONS

Walking Your Pet

To activate your FurReal Grand Racker Tiger:

1. Hold the leash handle firmly.
2. Gently pull the leash forward to make your tiger walk.
3. As you walk, the tiger's head will bobble, its tail will wag, and it will make fun tiger sounds.

4. Release the leash to stop the walking motion.



Image: A child demonstrating how to walk the FurReal Grand Racker Animatronic Plush Tiger.

Connecting Multiple Pets

Your Grand Racker Tiger's leash features a connector that allows you to attach up to two smaller FurReal Walkalots pets (sold separately) to walk them all together. Simply attach the connector from another Walkalots pet's leash to the designated slot on your tiger's leash handle.

MAINTENANCE

Cleaning Instructions

- To clean the plush surface, gently wipe with a damp cloth.
- Do not immerse the toy in water, as this may damage the electronic components.
- Do not use harsh chemicals or abrasive cleaners.
- Allow the toy to air dry completely before storage or further use.

Storage

When not in use, store the toy in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pet does not move or make sounds.	Batteries are low or incorrectly installed.	Replace batteries with new 1.5V A76 alkaline batteries, ensuring correct polarity.
Leash detaches easily.	Leash not securely attached.	Ensure the leash handle is fully inserted into the slot until it clicks.
Sounds are distorted or weak.	Batteries are low.	Replace batteries with new 1.5V A76 alkaline batteries.

SPECIFICATIONS

Feature	Detail
Model Number	E5309EU40
Brand	FurReal
Product Dimensions (L x W x H)	13.33 x 22.86 x 22.86 cm
Product Weight	391 grams
Recommended Age	4 years and up
Batteries Required	Yes
Batteries Included	Yes
Battery Type	3 x 1.5V A76 Alkaline Batteries (LR44 equivalent)
Main Material	Plastic, Plush
Assembly Required	No (Leash attachment required)

WARRANTY

This product is covered by a standard manufacturer's warranty. Please refer to the warranty information provided with your purchase or contact the manufacturer directly for details regarding warranty terms and conditions.

SUPPORT

For further assistance, product inquiries, or to report any issues, please contact FurReal customer support. Contact information can typically be found on the product packaging or the official Hasbro website.

