

[Manuals.plus](#) /

› [Faber](#) /

› Faber Hood STILUX 3D PLUS MAX T2S2 BK TC 90 Kitchen Chimney User Manual

Faber Hood STILUX 3D PLUS MAX T2S2 BK TC 90

Faber Hood STILUX 3D PLUS MAX T2S2 BK TC 90 Kitchen Chimney User Manual

Model: Hood STILUX 3D PLUS MAX T2S2 BK TC 90

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before installing or operating this appliance. Keep this manual for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply matches the voltage specified on the rating label.
- Installation must be performed by a qualified technician in accordance with all local codes and standards.
- Do not operate the chimney if the power cord or plug is damaged.
- Never leave cooking food unattended, especially when using high heat.
- Clean grease filters regularly to prevent grease accumulation and fire hazards.
- This appliance is for domestic use only. Do not use it for purposes other than its intended use.

2. PRODUCT OVERVIEW

The Faber Hood STILUX 3D PLUS MAX T2S2 BK TC 90 is a 90 cm box-type kitchen chimney designed for efficient smoke and odor extraction. It features a sleek black finish, touch controls, and durable baffle filters suitable for Indian cooking conditions.



Image 1: Faber Hood STILUX 3D PLUS MAX T2S2 BK TC 90 Kitchen Chimney

3. SETUP AND INSTALLATION

Professional installation is highly recommended for this wall-mounted chimney. Ensure the installation area meets the following requirements:

- **Wall Mounting:** The chimney is designed for wall mounting above a cooking range. The wall must be strong enough to support the appliance's weight (approximately 12 kg).
- **Ducting:** Proper ducting is essential for effective ventilation. Ensure the duct pipe is of appropriate diameter and length, with minimal bends, to maximize suction efficiency.
- **Power Supply:** A dedicated 220V power outlet should be available near the installation point.
- **Clearance:** Maintain adequate clearance between the cooking surface and the bottom of the chimney as per local safety regulations and manufacturer guidelines.



Image 2: General view of the Faber Chimney, illustrating its design for wall mounting.

4. OPERATING INSTRUCTIONS

The chimney features an intuitive touch control panel for easy operation.

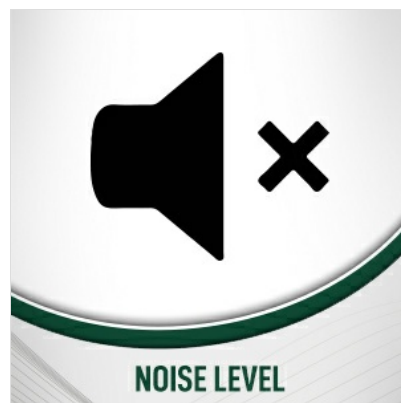


Image 3: Touch Control Panel for the Faber Chimney

4.1 Power On/Off

Press the **Power** button (usually indicated by a circle with a vertical line) on the touch panel to turn the chimney on or off.

4.2 Adjusting Suction Speed

The chimney offers 3 suction speeds. Use the **Speed +/-** buttons to select the desired level of extraction. Higher speeds are recommended for heavy frying or grilling.

4.3 Operating the LED Lights

Press the **Light** button (usually indicated by a light bulb icon) to turn the integrated LED lights on or off, illuminating your cooking area.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your chimney.

5.1 Baffle Filter Cleaning

The 3 baffle filters are designed to effectively separate grease from cooking fumes. For best performance, clean the baffle filters every 6 months, or more frequently depending on usage.

- **Removal:** Carefully unlatch and remove the baffle filters from the chimney.
- **Cleaning:** Soak the filters in hot water with a degreasing agent or dish soap. Scrub gently with a non-abrasive brush to remove grease buildup. Alternatively, some baffle filters are dishwasher safe (consult specific product details).
- **Drying & Reinstallation:** Ensure filters are completely dry before reinstalling them.



Image 4: Close-up of a Baffle Filter

5.2 Exterior Cleaning

Wipe the exterior surfaces of the chimney with a soft cloth and mild detergent. Avoid abrasive cleaners or scouring pads that can damage the black finish.

6. TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions.

Problem	Possible Cause	Solution
Chimney does not turn on	No power supply; loose connection; faulty switch	Check power plug and circuit breaker; ensure connections are secure; contact service if switch is faulty.
Low suction power	Clogged filters; obstructed ducting; incorrect speed setting	Clean baffle filters; check ducting for blockages; select a higher speed setting.
Excessive noise	Loose components; motor issue; improper installation	Check for loose screws or parts; ensure proper installation; contact service for motor inspection.
Lights not working	Faulty LED lamp; wiring issue	Check light button operation; contact service for lamp replacement or wiring inspection.

7. SPECIFICATIONS

Detailed technical specifications for the Faber Hood STILUX 3D PLUS MAX T2S2 BK TC 90 chimney.

Feature	Specification
Brand	Faber
Model Number	Hood STILUX 3D PLUS MAX T2S2 BK TC 90
Product Dimensions (D x W x H)	51D x 90W x 90H Centimeters
Colour	Black
Finish Type	Black Finish
Air Flow Capacity	1350 Cubic Meters Per Hour
Noise Level	58 Decibels
Mounting Type	Wall Mount
Controls Type	Touch Control
Voltage	220 Volts
Number Of Speeds	3
Light Source	LED (2x1.1 watts)
Filter Type	Baffle (3 filters)
Ventilation Type	Ducted/Vented
Item Weight	12000 Grams
Material Type	Alloy Steel
Included Components	1 Chimney, 1 User Manual

8. WARRANTY AND SUPPORT

Faber provides comprehensive warranty coverage and customer support for your product.

- **Product Warranty:** 1 year on the product from the date of purchase.
- **Motor Warranty:** 10 years on the motor from the date of purchase.
- **Customer Support:** For any service requests, technical assistance, or warranty claims, please contact Faber customer care.

Faber Customer Care: 1800 209 3484