

[Manuals.plus](#) /

› [Edison Professional](#) /

› Edison Professional iRocker iR300B Portable Bluetooth Speaker Instruction Manual

Edison Professional iR300B

Edison Professional iRocker iR300B

PORTABLE BLUETOOTH SPEAKER INSTRUCTION MANUAL

1. Introduction

This manual provides essential information for the safe and efficient operation of your Edison Professional iRocker iR300B Portable Bluetooth Speaker. Please read these instructions thoroughly before using the device and retain them for future reference.

The iRocker iR300B is a portable and rechargeable Bluetooth speaker designed for audio playback from various sources, including Bluetooth-enabled devices, USB drives, and SD cards. Its rugged design and integrated carry handle enhance portability.

2. Safety Information

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the unit. This may void the warranty and pose a safety risk.
- Keep the speaker away from water or other liquids. This product is not waterproof.
- Use only the charging cable provided or a certified equivalent.
- Ensure proper ventilation when operating or charging the speaker.
- The speaker may emit loud voice prompts (e.g., "BLUETOOTH READY TO PAIR") at a fixed volume when powered on or changing modes. Be aware of this characteristic, especially in quiet environments.

3. Package Contents

Please check that the following items are included in your package:

- Edison Professional iRocker iR300B Portable Bluetooth Speaker
- USB Charging Cable
- Instruction Manual

4. Product Overview

Familiarize yourself with the speaker's components and controls.



Figure 1: Angled view of the iRocker iR300B speaker, showing the rugged design and integrated carry handle.



Figure 2: Front view of the iRocker iR300B speaker, highlighting the speaker grilles.



Figure 3: Rear view of the iRocker iR300B speaker, displaying the control panel with USB, SD card, and charging ports.

Control Panel (Refer to Figure 3)

- **Power Button:** Press and hold to turn the speaker ON/OFF.
- **Mode Button:** Press to switch between Bluetooth, USB, SD Card, and AUX modes.
- **Play/Pause Button:** Press to play or pause audio.
- **Previous/Volume Down Button:** Press to go to the previous track. Press and hold to decrease volume.

- **Next/Volume Up Button:** Press to go to the next track. Press and hold to increase volume.
- **USB Port:** For USB drive playback.
- **SD Card Slot:** For SD card playback.
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable (not included).
- **Charging Port:** For connecting the USB charging cable.
- **LED Indicator:** Displays charging status and Bluetooth pairing status.

5. Setup

5.1 Initial Charging

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off or change color when fully charged. A full charge takes approximately 3 hours.

5.2 Powering On/Off

Press and hold the Power Button for approximately 3 seconds to turn the speaker ON or OFF. A voice prompt will indicate the power status.

6. Operating Instructions

6.1 Bluetooth Pairing

1. Turn on the iRocker iR300B speaker. It will automatically enter Bluetooth pairing mode, indicated by a voice prompt "BLUETOOTH READY TO PAIR" and a flashing LED indicator.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available Bluetooth devices and select "iRocker iR300B" from the list.
4. Once paired, the speaker will confirm with a voice prompt and the LED indicator will stop flashing.
5. You can now play audio from your device through the speaker.

6.2 USB Playback

1. Insert a USB flash drive containing audio files into the USB port.
2. Press the Mode Button until the speaker enters USB mode. A voice prompt will confirm the mode change.
3. The speaker will automatically begin playing audio files from the USB drive.

6.3 SD Card Playback

1. Insert an SD card containing audio files into the SD card slot.
2. Press the Mode Button until the speaker enters SD card mode. A voice prompt will confirm the mode change.
3. The speaker will automatically begin playing audio files from the SD card.

6.4 AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker.
2. Connect the other end of the audio cable to the headphone jack or audio output of your external device.
3. Press the Mode Button until the speaker enters AUX mode. A voice prompt will confirm the mode change.
4. Play audio from your external device. The speaker will output the sound.

6.5 Volume Control

Press and hold the 'Previous/Volume Down' button to decrease the volume. Press and hold the 'Next/Volume Up' button to increase the volume.

7. Maintenance

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid prolonged exposure to direct sunlight or extreme temperatures.

8. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker fully.
Cannot pair via Bluetooth.	Bluetooth is not enabled on your device or speaker is not in pairing mode.	Ensure Bluetooth is active on your device and the speaker is in pairing mode (flashing LED). Restart both devices.
No sound during playback.	Volume is too low or incorrect mode selected.	Increase volume on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, USB, SD, AUX) is selected.
Voice prompts are too loud.	This is a fixed characteristic of the speaker.	The volume of voice prompts (e.g., "BLUETOOTH READY TO PAIR") is not adjustable. Be mindful of this when powering on or changing modes in quiet environments.
USB/SD card not playing.	Incorrect file format or card/drive not properly inserted.	Ensure audio files are in a compatible format. Reinsert the USB drive or SD card. Ensure the speaker is in the correct mode.

9. Specifications

Feature	Specification
Model Name	iR300B
Brand	Edison Professional
Speaker Type	Outdoor, Portable
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth
Compatible Devices	Laptop, MP3 Player, Projector, Smartphone, Tablet, Television
Power Source	Battery Powered (1 Lithium Ion battery included)

Feature	Specification
Charging Time	3 Hours
Audio Output Mode	Stereo
Control Method	Touch
Item Weight	1.32 pounds
Package Dimensions	8.31 x 4.92 x 3.31 inches
UPC	711058962195

10. Warranty and Support

The Edison Professional iRocker iR300B comes with a Limited Warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support or warranty inquiries, please contact Edison Professional customer service. Contact information can typically be found on the product packaging or the official Edison Professional website.

© 2024 Edison Professional. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08JSGQP18>

More documents and user manuals: **<https://manuals.plus/>**