



[Manuals.plus](#) /

> [LAWOHO](#) /

> LAWOHO Garage Door Remote Control User Manual - Compatible with Liftmaster Chamberlain 890MAX and Learn Button Systems

LAWOHO 890MAX

LAWOHO Garage Door Remote Control User Manual

Model: 890MAX

INTRODUCTION

This manual provides comprehensive instructions for the LAWOHO Garage Door Remote Control, designed as a replacement for various Liftmaster, Chamberlain, and Craftsman garage door openers. Please read these instructions carefully before attempting to program or operate your new remote control.

COMPATIBILITY

This remote control is compatible with Liftmaster, Chamberlain, and Craftsman garage door opener motors featuring Purple, Red/Orange, Green, or Yellow Learn Buttons, operating on frequencies from 315MHz-390MHz. It is designed to replace models such as 370LM, 371LM, 373LM, 971LM, 973LM, 81LM, 891LM, 893LM, and 890MAX.

Important: Verify the color of your garage door opener's learn button to ensure compatibility. If your current remote is listed among the compatible models or your opener has one of the specified learn button colors, this remote will be compatible.

— Learn Buttons Support —



Support 5 Different Buttons



Image: Two LAWOGO garage door remote controls. The image highlights compatibility with five different learn button colors: Yellow, Purple, Green, Red, and Orange.

SETUP AND PROGRAMMING

Follow these steps to program your LAWOGO garage door remote control:

Step 1: Program the Remote Control

1. **Activate Programming Mode:** Press and hold the 'program button' (located at the bottom right of the remote) for approximately 3-5 seconds using the safety pin provided. The LED on the remote will flash quickly and then turn off. Release the button once the LED is off.
2. **Select Opener Type:** Press and release the button on the remote that you wish to program. The number of

presses corresponds to your garage door opener's learn button color:

- Press **1 time** for Security+ 2.0 (Yellow Learn Button)
- Press **2 times** for 315 MHz Security+ (Purple Learn Button)
- Press **3 times** for 390 MHz Security+ (Red or Orange Learn Button)
- Press **4 times** for 390 MHz Billion Code (Green Learn Button)

3. **Confirm Selection:** Press the 'program button' two times quickly. The LED will blink once to confirm your selection.



Image: A LAWORO remote control shown with a printed instruction manual detailing programming steps.

Step 2: Sync with Your Garage Door Opener

1. **Locate Learn Button:** Access your garage door opener motor unit. You may need a stepladder to reach it. Pull down the cover to expose the learn button.
2. **Activate Learn Mode:** Press and release the learn button on your garage door opener. The learn indicator light on the opener will glow steadily for 30 seconds.
3. **Sync Remote:** Within these 30 seconds, press and hold the button on your LAWORO remote control that you programmed in Step 1. Continue holding until the lights on your garage door opener flash or you hear two clicks (if a light bulb is not installed).

Your browser does not support the video tag.

Video: This video demonstrates the process of programming the LAWOHO garage door remote control, including checking the learn button color and syncing with the garage door opener.

OPERATING THE REMOTE CONTROL

After successful programming, simply press the programmed button on your LAWOHO remote control to activate your garage door opener. The garage door will open or close accordingly.



Image: A hand pressing one of the buttons on the remote, showing the red LED indicator light.

MAINTENANCE

Battery Replacement

The remote control uses one CR2 battery. If the remote's LED indicator does not light up or the range decreases significantly, it may be time to replace the battery.

1. **Open the Remote Casing:** Use a small flat screwdriver to carefully pry open the remote control casing.
2. **Remove Old Battery:** Gently remove the old CR2 battery from its compartment.
3. **Insert New Battery:** Insert a new CR2 battery, ensuring the positive (+) side is facing up.
4. **Close Casing:** Snap the remote control casing back together securely.



Image: The remote control opened, revealing the internal circuit board and the CR2 battery.

Your browser does not support the video tag.

Video: This video provides a visual guide on how to replace the battery in your LAWOHO garage door remote control.

TROUBLESHOOTING

- **Remote Not Responding:** Ensure the battery is correctly installed and has sufficient charge. Re-attempt the programming steps if necessary.
- **Limited Range:** Replace the battery. Ensure there are no obstructions between the remote and the garage door opener's antenna.
- **Incorrect Learn Button Color:** Double-check the learn button color on your garage door opener and ensure you are pressing the remote button the correct number of times during programming.

SPECIFICATIONS

Feature	Detail
Model Number	890MAX

Item Weight	1.76 ounces
Package Dimensions	3.66 x 3.58 x 0.67 inches
Batteries	1 CR2 battery (included)
Max Number of Supported Devices	1 (per button, up to 3 channels)
Compatible Devices	Liftmaster 371LM, 373LM, 971LM, 973LM, 81LM, 891LM, 893LM, 890MAX; Purple, Red, Orange, Green, Yellow Learn Button systems

WARRANTY INFORMATION

Each LAWOHO Garage Door Remote Control includes a 90-day warranty from the date of purchase. This warranty covers manufacturing defects and ensures product functionality under normal use.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with programming or troubleshooting your remote control, please contact us through Amazon email or visit our store front page and use the "Ask a question" feature. Our customer service team is available to provide one-to-one guidance.