

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Moulinex](#) /

> [Moulinex Food Processor Bowl Instruction Manual for Easyforce Soleil Models](#)

## Moulinex B08JVMDR12

# Moulinex Food Processor Bowl Instruction Manual

For Easyforce Soleil Models

## INTRODUCTION

---

This document provides instructions for the Moulinex replacement bowl, model B08JVMDR12, designed for specific Moulinex, Tefal, and OBH Nordica Easyforce Soleil food processor models. This bowl is an original spare part, ensuring compatibility and performance with your appliance.



Image: Moulinex Food Processor Replacement Bowl. This image shows the clear plastic bowl with a central shaft, designed to fit various Moulinex Easyforce Soleil food processor models.

## SETUP

---

1. Ensure your food processor is unplugged from the power outlet before installation.
2. Place the bowl onto the motor base of your compatible Moulinex Easyforce Soleil food processor.
3. Align the bowl with the base and rotate it clockwise until it locks securely into place. A distinct click

sound typically indicates proper locking.

4. Verify that the bowl is stable and does not wobble before proceeding with operation.

## OPERATING

---

- Before adding ingredients, ensure the bowl is correctly assembled with any necessary accessories, such as the blade or lid.
- Do not exceed the maximum fill line indicated on the bowl, if present, to prevent spillage and ensure efficient processing.
- Always secure the lid properly before operating the food processor.
- Refer to your food processor's main instruction manual for specific operating procedures and safety guidelines.

## MAINTENANCE

---

- **Cleaning:** After each use, disassemble the bowl from the food processor base. Wash the bowl with warm, soapy water. Rinse thoroughly.
- **Drying:** Dry all parts completely before storage. Pay particular attention to drying any metal components, such as the screw that holds the spring mechanism, to prevent oxidation.
- **Dishwasher Use:** It is recommended to hand wash the bowl. Dishwasher use may cause the plastic to become opaque over time and can accelerate oxidation of metal parts.
- **Storage:** Store the clean, dry bowl in a safe place, away from direct heat or sunlight.

## TROUBLESHOOTING

---

- **Bowl does not fit or lock:**
  - Ensure you have the correct bowl for your specific Moulinex Easyforce Soleil food processor model. Refer to the compatibility list in the specifications section.
  - Check for any obstructions on the motor base or the bowl's locking mechanism.
  - Ensure the bowl is aligned correctly before rotating to lock.
- **Bowl leaks during operation:**
  - Verify that the bowl is securely locked onto the motor base.
  - Check if the lid is properly sealed.
  - Ensure you have not exceeded the maximum fill line.

## SPECIFICATIONS

---

- **Product Type:** Replacement Food Processor Bowl
- **Brand:** Moulinex
- **Model Number (Bowl):** B08JVMDR12
- **Compatible Food Processor Models:**
  - Moulinex Easyforce 700W: FP2441, FP2461

- Moulinex Easyforce 800W: FP2471
  - Moulinex Easyforce 600W: FP345A
  - Tefal Easyforce 700W: DO2441, DO2461
  - Tefal Easyforce 800W: DO2481
  - OBH Nordica Easyforce 700W: FO2441
- **Material:** Food-grade plastic
  - **Part Number:** Original Moulinex spare part

## WARRANTY AND SUPPORT

---

For warranty information or technical assistance regarding your Moulinex food processor or this replacement bowl, please refer to the documentation provided with your original appliance or visit the official Moulinex website.

If you encounter issues with this replacement bowl, contact Moulinex customer support or the retailer from whom you purchased the item for further assistance.