

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Whirlpool](#) /

> [Whirlpool WIO 3O33 PLE S UK Integrated Standard Dishwasher User Manual](#)

Whirlpool WIO 3O33 PLE S UK

Whirlpool WIO 3O33 PLE S UK Integrated Standard Dishwasher User Manual

Model: WIO 3O33 PLE S UK | Brand: Whirlpool

1. INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Whirlpool WIO 3O33 PLE S UK Integrated Standard Dishwasher. Please read this manual thoroughly before using the appliance for the first time and keep it for future reference.

The Whirlpool WIO 3O33 PLE S UK is designed to deliver intuitive, time-saving technology with superior racking options, accommodating up to 14 place settings. It features advanced technologies like 6TH SENSE and PowerCleanPro for optimal cleaning performance and efficiency.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the dishwasher.
- This appliance must be earthed. Connect only to a properly earthed outlet.
- Do not operate the dishwasher if it has a damaged power cord or plug, or if it is not working properly.
- Keep children away from the dishwasher, especially when the door is open.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Sharp items should be loaded with handles up to reduce the risk of cuts.
- Do not tamper with controls.
- Ensure the dishwasher is properly installed before use.

3. PRODUCT OVERVIEW

3.1 Key Features

- **6TH SENSE Technology:** Automatically senses dirt levels and adjusts cycle time and water pressure for optimal cleaning and efficiency.

- **PowerCleanPro:** Powerful jets at the back of the machine effectively tackle stubborn, baked-on food, creating 30% extra space for vertical loading of pots and trays.
- **Third Rack:** A flexible top rack specifically designed for cutlery and utensils, freeing up space in the lower basket.
- **Rapid 30 Programme:** Delivers spotless results in just 30 minutes.
- **1 Hour Wash & Dry:** Provides clean and dry dishes in one hour, eliminating the need for towel drying.
- **Auto Door Opening:** Assists with drying by automatically opening the door at the end of the cycle.
- **Energy Efficiency:** Rated A+++ for excellent energy performance.

3.2 Components and Controls

Familiarize yourself with the main components of your dishwasher.



Figure 3.2.1: Front view of the Whirlpool WIO 3033 PLE S UK Integrated Dishwasher with the door open, showing the interior racks and overall design.



Figure 3.2.2: Close-up of the hidden control panel, located on the top edge of the dishwasher door, featuring program selection buttons and a digital display.



Figure 3.2.3: Interior view showcasing the flexible three-tier racking system, including the upper, lower, and dedicated third rack for cutlery and small items.

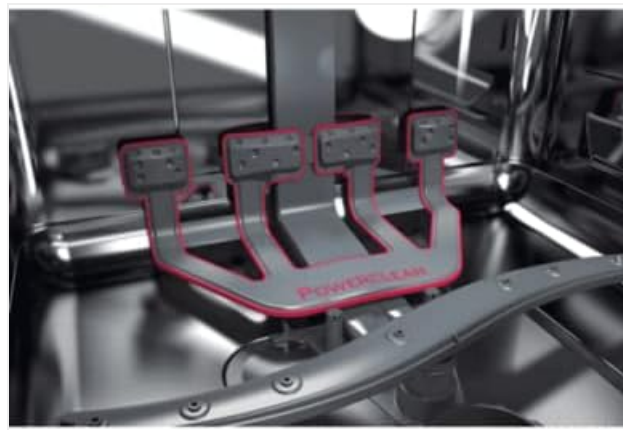 


Figure 3.2.4: Detailed view of the PowerCleanPro jets positioned at the back of the lower rack, designed for targeted cleaning of heavily soiled pots and pans.

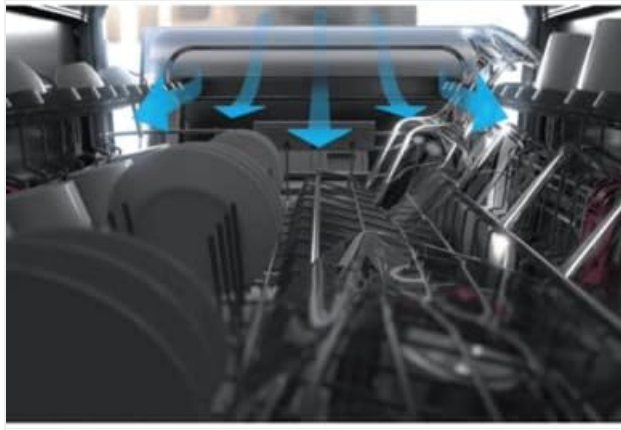 


Figure 3.2.5: Diagram illustrating the internal airflow for efficient drying, contributing to the appliance's overall performance.

3.3 Official Product Videos

There are no official product videos available from the seller for this model at this time.

4. SETUP

4.1 Installation

The Whirlpool WIO 3O33 PLE S UK is an integrated dishwasher designed for seamless installation into your kitchen cabinetry. Due to the nature of integrated appliances and electrical/plumbing connections, professional installation by a qualified technician is highly recommended to ensure proper functioning and safety.

- Ensure the appliance is level and securely fitted within the cabinet opening.
- Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain.
- Connect the power cord to a properly earthed electrical outlet.
- Install the custom kitchen panel onto the dishwasher door according to the provided template.

4.2 First Use

Before the first wash cycle, perform the following steps:

1. **Add Dishwasher Salt:** Fill the salt dispenser with dishwasher salt to soften the water, preventing limescale buildup. Refer to the salt indicator light on the control panel.
2. **Add Rinse Aid:** Fill the rinse aid dispenser. Rinse aid helps with drying and prevents streaks.
3. **Run an Empty Cycle:** Select a short program without dishes to clean the interior of the dishwasher.

5. OPERATING INSTRUCTIONS

5.1 Loading the Dishwasher

Proper loading ensures optimal cleaning and drying results. The dishwasher has a capacity of 14 place settings.

- **Scrape off large food particles:** Pre-rinsing is generally not necessary.
- **Lower Rack:** Ideal for plates, bowls, pots, and pans. Utilize the PowerCleanPro area for heavily soiled items by placing them vertically facing the jets.
- **Upper Rack:** Suitable for glasses, cups, and smaller bowls. Ensure items do not block the spray arms.
- **Third Rack:** Use for cutlery, spatulas, and other small utensils. Arrange items to prevent nesting.
- Avoid overcrowding to allow water and detergent to reach all surfaces.

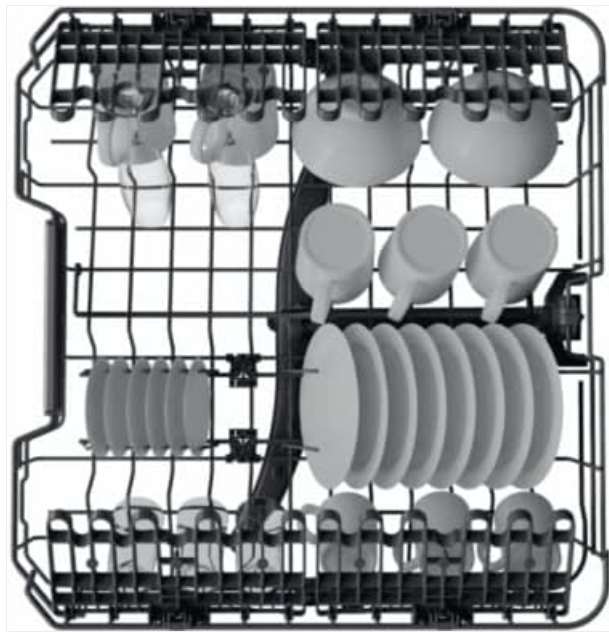 


Figure 5.1.1: Example of loading the lower rack with various dishware, demonstrating how to maximize space and ensure proper water circulation.



Figure 5.1.2: The integrated dishwasher with its door slightly ajar, showcasing the automatic door opening feature for improved drying results and steam release.

5.2 Selecting a Programme

The dishwasher offers 11 programmes to suit various washing needs. Use the control panel to select your desired cycle.

Available Wash Programmes

Programme Name	Description	Recommended Use
Daily	Standard cycle for normally soiled dishes.	Everyday dishware and glassware.
Sensor Wash (6TH SENSE)	Automatically detects soil level and adjusts cycle.	Mixed loads with varying soil levels.
Economy	Energy-efficient cycle for lightly soiled dishes.	Lightly soiled dishes, energy saving.
1h Wash&Dry	Quick wash and dry cycle.	When dishes are needed quickly.

Programme Name	Description	Recommended Use
Intensive	Powerful cycle for heavily soiled items.	Pots, pans, and heavily soiled dishes.
Rapid 30	Fast wash cycle without drying.	Lightly soiled items, quick refresh.

5.3 Starting a Cycle

1. Load the dishwasher according to the guidelines.
2. Add the appropriate amount of dishwasher detergent to the dispenser.
3. Close the dishwasher door firmly.
4. Press the Power button to turn on the appliance.
5. Select your desired wash programme using the program selection buttons.
6. Press the Start button to begin the cycle.
7. The display will show the remaining time.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Cleaning the Filters:** Regularly check and clean the filter system at the bottom of the dishwasher to prevent blockages and ensure efficient cleaning.
- **Cleaning the Spray Arms:** Ensure the holes in the spray arms are not clogged. Remove and rinse them if necessary.
- **Cleaning the Interior:** Wipe down the interior with a damp cloth periodically. Use a dishwasher cleaner monthly to remove grease and limescale.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Salt and Rinse Aid:** Refill salt and rinse aid dispensers as indicated by the control panel lights.
- **Door Seal:** Wipe the door seal regularly to remove food residue and prevent mold buildup.

7. TROUBLESHOOTING

Before contacting customer service, try these common troubleshooting steps.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes, clean spray arms, add more detergent, clean filters.
Water not draining	Clogged drain hose or filter, air gap blockage.	Check and clear drain hose/filter, clear air gap.
Excessive noise	Dishes rattling, foreign object in pump, motor issue.	Rearrange dishes, check for foreign objects, contact service if persistent.

Problem	Possible Cause	Solution
Detergent dispenser not opening	Blocked by dishes, dispenser mechanism fault.	Ensure no dishes block the dispenser, contact service if fault persists.

8. SPECIFICATIONS

Technical specifications for the Whirlpool WIO 3O33 PLE S UK Dishwasher.

Specification	Value
Model	WIO 3O33 PLE S UK
Brand	Whirlpool
Installation Type	Built-In
Capacity	14 Place Settings
Number of Programmes	11
Energy Efficiency Class	A+++
Noise Level	43 dB
Product Dimensions (D x W x H)	21.9D x 23.5W x 32.3H centimetres (approx.)
Item Weight	35.5 kg
Material	Stainless Steel
Special Features	Auto Door Opening, Sliding hinges, Timer Delay, Modular Racks

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Whirlpool website. Keep your proof of purchase for warranty claims.

For technical assistance or to schedule a service appointment, please contact Whirlpool customer service directly. Contact details can typically be found on the Whirlpool website or in your appliance's registration materials.



© 2023 Whirlpool Corporation. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.