

WiWU PO2IN1PSMCW

WiWU 2-in-1 Passive Stylus Pen User Manual

Model: PO2IN1PSMCW

1. INTRODUCTION

Thank you for choosing the WiWU 2-in-1 Passive Stylus Pen. This stylus is designed to enhance your interaction with touch-screen devices, offering precision for writing, drawing, and navigation. As a passive stylus, it operates without the need for batteries or charging, providing a seamless and reliable user experience. Please read this manual carefully to understand the product's features and ensure proper use and maintenance.

2. PRODUCT OVERVIEW

2.1 Components

- WiWU 2-in-1 Passive Stylus Pen
- Magnetic Pen Cap
- Replaceable Silicone Tip (pre-installed)

2.2 Key Features

- **2-in-1 Design:** Features a precision disc tip for fine detail and a fiber tip for general navigation.
- **Passive Operation:** No batteries required, no charging needed, ready to use instantly.
- **Magnetic Cap:** Securely protects the precision disc tip when not in use.
- **Replaceable Tip:** Extends the lifespan of your stylus.
- **Wide Compatibility:** Works with most capacitive touch-screen devices, including tablets, smartphones, and laptops.



Image 1: The WiWU 2-in-1 Passive Stylus Pen with its magnetic caps.



Image 2: The stylus pen with both ends uncapped, revealing the precision disc tip and the fiber tip.

3. SETUP

The WiWU 2-in-1 Passive Stylus Pen requires no complex setup. It is ready for immediate use out of the box.

1. **Unpack:** Carefully remove the stylus from its packaging.
2. **Remove Cap:** Gently pull off the magnetic cap from the desired tip (precision disc or fiber tip).
3. **Inspect Tip:** Ensure the chosen tip is securely attached and free from any debris.

4. OPERATING INSTRUCTIONS

This stylus is designed for intuitive use on any capacitive touch screen.

4.1 Using the Precision Disc Tip

- The transparent disc allows you to see exactly where your mark will be made, offering high precision for drawing, writing, and detailed tasks.
- Hold the stylus at a comfortable angle, similar to a regular pen.
- Gently touch the disc to your screen to interact. Avoid excessive pressure.

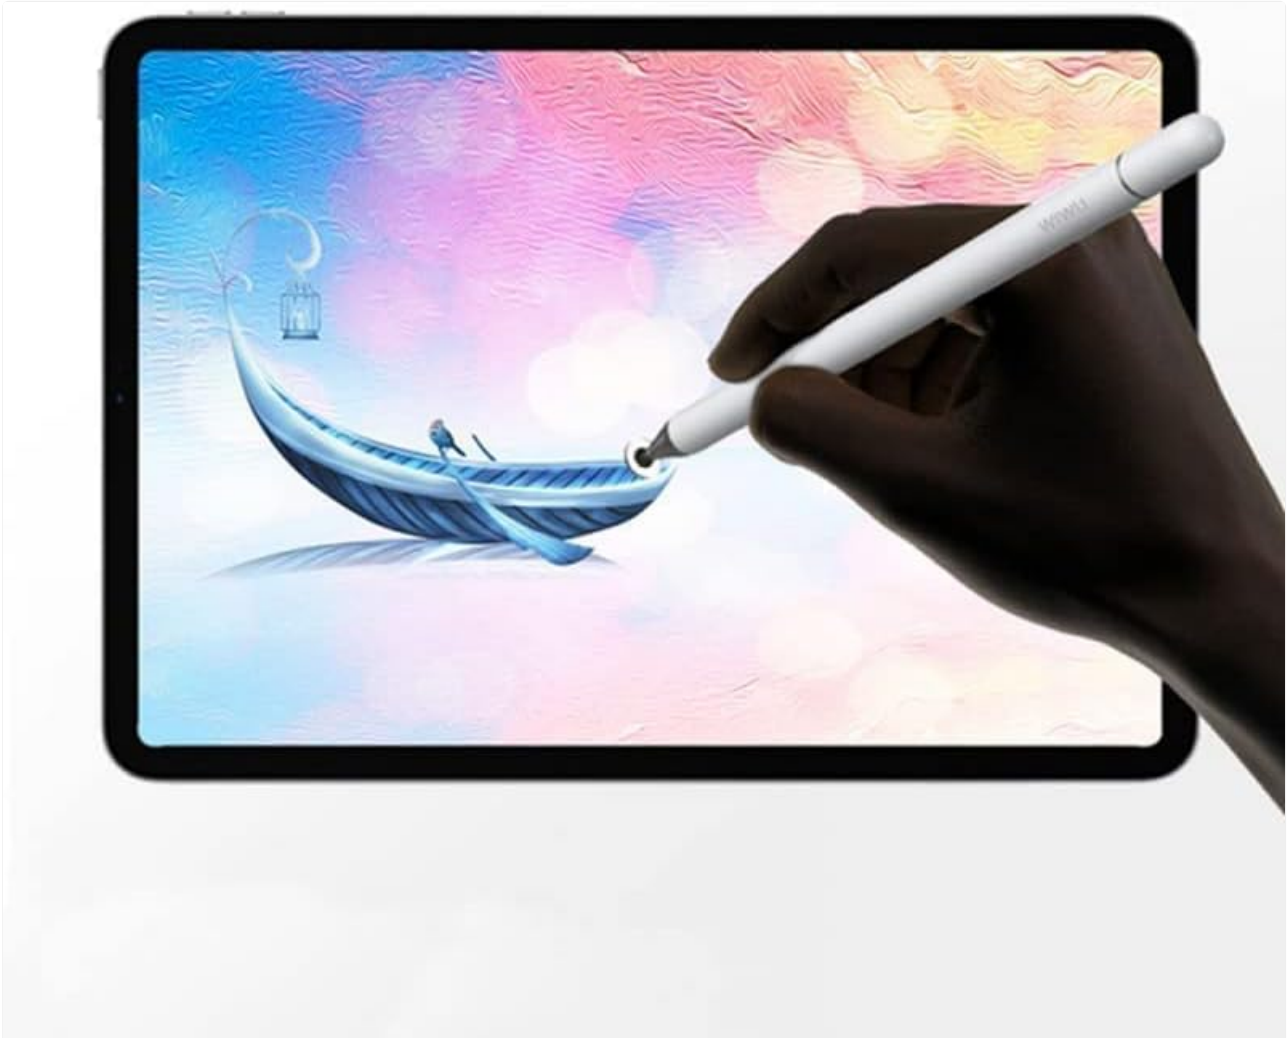


Image 3: A hand using the WiWU stylus pen on a tablet to create digital art, demonstrating precision.

4.2 Using the Fiber Tip

- The fiber tip is ideal for general navigation, scrolling, tapping, and quick note-taking.
- It provides a smooth glide across the screen.
- Use it for tasks where broad strokes or less precision is acceptable.



Image 4: A hand using the WiWU stylus pen on a tablet for taking notes or sketching ideas, showing its versatility.

4.3 Compatibility

The stylus is compatible with a wide range of devices, including:

- Tablets (e.g., iPad, Android tablets, Amazon Fire 5th Generation)
- Smartphones (e.g., iPhone, Android phones)
- Laptops with touch screens



Image 5: A child using the WiWU stylus pen with a smartphone mounted on a stand, illustrating its use across different devices.

5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your stylus.

5.1 Cleaning

- Wipe the stylus body with a soft, dry, lint-free cloth.
- For the tips, gently clean with a slightly damp cloth if necessary, then dry immediately. Do not use harsh chemicals or abrasive materials.

5.2 Tip Replacement

Over time, the stylus tips may wear down. Replacement tips can be purchased separately.

1. **Remove Old Tip:** Gently twist and pull the worn tip off the stylus.
2. **Install New Tip:** Align the new tip with the stylus end and push it firmly until it is securely in place.

Always ensure the magnetic cap is placed over the precision disc tip when not in use to prevent damage.

6. TROUBLESHOOTING

If you encounter issues with your stylus, try the following solutions:

Problem	Possible Cause	Solution
Stylus is unresponsive or inaccurate.	Worn or damaged tip; screen protector interference; dirty screen.	Replace the tip; ensure screen protector is stylus-friendly; clean the device screen.
Disc tip feels scratchy or doesn't glide smoothly.	Debris on the disc or screen; disc is damaged.	Clean the disc and screen; replace the tip if damaged.
Stylus leaves marks or doesn't register.	Excessive pressure; incompatible device settings.	Use lighter pressure; check device settings for stylus compatibility (though passive styluses generally don't require specific settings).

7. SPECIFICATIONS

Feature	Detail
Model Number	PO2IN1PSMCW
Brand	WiWU
Product Type	Passive Stylus Pen
Color	White
Material	Nano + Silicone Tip (Body material not specified, typically durable plastic/metal)
Item Weight	100 grams
Item Dimensions (L x W x H)	21.1 x 5.9 x 4 cm
Compatible Devices	Tablet, Laptop, Smartphone (Capacitive touch screens)
Batteries Required	No (This is a passive stylus and does not require batteries for operation.)
Included Components	WiWU 2-in-1 Stylus Pen with Magnetic Cap
ASIN	B08JX5F4Z7

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This WiWU 2-in-1 Passive Stylus Pen comes with a **1-year manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear of consumable parts like stylus tips.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact your retailer or the official WiWU customer support channel. Please have your product model number (PO2IN1PSMCW) and proof of purchase ready when

contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question