

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Qaba](#) /

› [Qaba Kids Wooden Kitchen Playset Model 350-080 Instruction Manual](#)

Qaba 350-080

Qaba Kids Wooden Kitchen Playset

MODEL: 350-080

Instruction Manual

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your Qaba Kids Wooden Kitchen Playset, Model 350-080. Please read carefully before use to ensure safe and enjoyable play.

Important Safety Information

No specific safety warnings are applicable beyond general toy safety guidelines. Always supervise children during play. Ensure all parts are securely fastened during assembly to prevent hazards. This product is recommended for children aged 3 years and up.

Package Contents

Verify that all components listed below are present before beginning assembly:

- Wooden Kitchen Playset components
- 1 x Knife
- 1 x Fork
- 1 x Spoon
- 1 x Saucepan
- 1 x Round Pot
- 1 x Spatula
- 2 x Seasoning Bottles (Salt, Pepper)
- 1 x Crab toy food
- 1 x Onion toy food
- 1 x Mushroom toy food
- 1 x Shrimp toy food

- 1 x Fish toy food
- 1 x Broccoli toy food
- 1 x Telephone accessory
- 1 x Blackboard
- 1 x Water Dispenser unit
- Assembly hardware (screws, pegs, etc.)

Assembly Instructions

Assembly of the Qaba Kids Wooden Kitchen Playset requires careful attention to the provided diagrams and hardware. It is recommended to lay out all parts and identify them according to the instruction manual's component list before starting.

1. Unpack all components and verify against the package contents list.
2. Follow the step-by-step diagrams in the manufacturer's assembly guide. Pay close attention to the orientation of each piece and the correct hardware for each step.
3. Ensure all screws and pegs are fully inserted and tightened to secure the structure. Improper alignment or loose connections can affect the stability and functionality of doors and other moving parts.
4. Install 2 AA batteries (not included) into the water dispenser unit as indicated in the assembly diagrams.
5. Once assembled, check all doors, knobs, and accessories to ensure they function correctly and are securely attached.

Note: Some users have reported challenges with instruction clarity and door alignment. Take your time and refer to the diagrams carefully. If issues arise, re-check component orientation and hardware placement.



Image of the fully assembled Qaba Kids Wooden Kitchen Playset, showcasing its complete design and accessories.

Operating Your Kitchen Playset

The Qaba Kids Wooden Kitchen Playset offers various interactive features for imaginative play:

- **Stovetop:** Turn the stovetop knobs to hear realistic clicking sounds, simulating cooking.
- **Sink:** The sink basin is removable for easy cleaning. The faucet handles can be turned.
- **Water Dispenser:** Press the lever on the water dispenser to activate light and sound effects (requires 2 AA batteries).
- **Telephone:** The attached telephone allows for pretend conversations.
- **Storage:** Utilize the five cabinets, including the oven and refrigerator compartments, to store play food and accessories.
- **Blackboard:** Use chalk (not included) to write messages or draw on the integrated blackboard.



Diagram highlighting key features of the playset, including the blackboard, telephone, water dispenser, storage, removable sink, and simulation oven.



A child interacting with the Qaba Kids Wooden Kitchen Playset, demonstrating its appropriate size and engaging play experience.

Care and Maintenance

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the playset in a dry environment away from direct sunlight or extreme temperatures to prevent warping or fading.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Tighten as necessary.

Troubleshooting

- **Doors not closing properly:** Ensure hinges are correctly installed and tightened. Check for any obstructions or misaligned panels.
- **Water dispenser not working:** Verify that 2 AA batteries are correctly installed and are not depleted.
- **Loose parts:** Regularly inspect the playset for any loose screws or components and tighten them immediately to maintain structural integrity.



Close-up view of the water dispenser feature on the playset, indicating where batteries are installed for sound and light effects.



Image showing the open oven door of the playset, revealing interior storage space.

Product Specifications

Feature	Detail
Brand	Qaba
Model Number	350-080
Product Dimensions	30" L x 11.75" W x 34.75" H (11.75 x 30 x 34.75 inches)
Item Weight	27.5 pounds
Recommended Age	3 years and up
Batteries Required	2 AA batteries (for water dispenser)
Manufacturer	Aosom LLC

Warranty and Support

For warranty information or customer support, please refer to the contact details provided by Aosom LLC at the time of purchase or visit the official Qaba brand website. Keep your purchase receipt for any warranty claims.

© 2025 Qaba. All rights reserved.