

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Toysery](#) /

› [Toysery Transforming Robot Police Car Toy Instruction Manual](#)

Toysery 34232

Toysery Transforming Robot Police Car Toy Instruction Manual

Brand: Toysery | Model: 34232

INTRODUCTION

This manual provides essential information for the safe and effective operation of your Toysery Transforming Robot Police Car Toy. Please read these instructions thoroughly before use and retain for future reference.



Image: The Toysery Transforming Robot Police Car Toy, showcasing its dual functionality as a police car and a robot, illuminated by colorful flashing lights.

SAFETY INFORMATION

- Recommended for ages 3 years and up.
- Adult supervision is recommended during play.
- Do not operate near stairs, furniture, or other obstacles to prevent damage or injury.
- Keep away from water and moisture.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of batteries properly according to local regulations.

PACKAGE CONTENTS

- 1 x Toysery Transforming Robot Police Car Toy
- 1 x Remote Control
- 1 x Small Screwdriver (for battery compartments)

SETUP

1. Battery Installation (Car)

1. Locate the battery compartment on the underside of the police car.
2. Use the provided screwdriver to open the battery compartment cover.
3. Insert 3 AA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Image: The underside of the police car, highlighting the battery compartment where 3 AA batteries are to be inserted.

2. Battery Installation (Remote Control)

1. Locate the battery compartment on the back of the remote control.
2. Use the provided screwdriver to open the battery compartment cover.
3. Insert 2 AA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

3. Power On/Off

- Turn on the car using the ON/OFF switch located on its underside.
- Turn on the remote control using its ON/OFF switch.
- The car and remote will automatically pair.
- Always turn off both the car and remote control when not in use to conserve battery life.

OPERATING INSTRUCTIONS

Basic Movement

- Use the left joystick on the remote control to move the car forward or backward.
- Use the right joystick to steer the car left or right.

Transformation

Press and hold the top button on the remote control to transform the police car into a robot, and vice versa. The transformation is smooth and quick.

ONE KEY TRANSFORMATION



Image: The police car transforming into a robot, illustrating the "one-key transformation" capability.

360-Degree Rotation

While in robot mode, press the designated spin button on the remote control to initiate a 360-degree rotation. This feature adds dynamic play options.



Image: The transforming robot police car in its robot form, demonstrating a 360-degree spinning action.

Auto-Demo Mode

Press the auto-demo button on the remote control to activate a pre-programmed sequence of movements, transformations, and lights, accompanied by exciting music.



Image: The transforming robot police car performing an automatic demonstration, showcasing its various features and lights.

Usage Environment

For optimal performance, operate the toy on smooth, hard surfaces. Avoid using on carpets or uneven terrain, as this may hinder movement and transformation.

Official Product Videos

Your browser does not support the video tag.

Video: A demonstration of the Toysery Police Car Toy, highlighting its transformation and movement capabilities. This video is 25 seconds long.

Your browser does not support the video tag.

Video: A detailed look at the Deformation Robot Police Car with its integrated lights, showcasing its features. This video is 24 seconds long.

Your browser does not support the video tag.

Video: A user-submitted video demonstrating the police car transformer in action. This video is 22 seconds long.

MAINTENANCE

- **Cleaning:** Wipe the toy with a soft, dry cloth. Do not use water or cleaning agents.
- **Battery Care:** Remove batteries from the toy and remote control if they will not be used for an extended period.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Solution
Toy does not move or respond.	<ol style="list-style-type: none">1. Ensure both the car and remote control are switched ON.2. Check if batteries are correctly installed with proper polarity.3. Replace old or depleted batteries in both the car and remote control.
Transformation is not smooth.	<ol style="list-style-type: none">1. Ensure the toy is on a flat, smooth surface.2. Check battery levels; low batteries can affect motor performance.
Lights or sounds are not working.	<ol style="list-style-type: none">1. Check and replace batteries.2. Ensure the toy is switched ON.

SPECIFICATIONS

- **Brand:** Toysery
- **Model Number:** 34232
- **Product Dimensions:** 8.3 x 3.5 x 3.3 inches
- **Item Weight:** 10.8 ounces
- **Recommended Age:** 3 months - 3 years (Note: Manufacturer's age recommendation may vary, adult supervision advised for younger children)
- **Power Source (Car):** 3 x AA Batteries (not included)
- **Power Source (Remote):** 2 x AA Batteries (not included)
- **Material:** Non-toxic ABS Plastic

WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty information, please contact Toysery customer service through the retailer's platform where the product was purchased. Please have your purchase details and model number (34232) ready.