

[Manuals.plus](#) /

› [Case Logic](#) /

› Case Logic Viso DSLR/Mirrorless Camera Case,Black

Case Logic 3204531

Case Logic Viso DSLR/Mirrorless Camera Case

Model: 3204531

INTRODUCTION

A compact DSLR/mirrorless camera shoulder bag with comfortable carry and molded EVA base for stability.

WHAT'S IN THE BOX

- Camera Case

FEATURES

- Fits a compact DSLR camera with kit lens or a mirrorless camera with zoom lens
- Water-resistant EVA base protects the contents and adds stability for loading and unloading
- Interior divider separates camera from small accessories
- Detachable shoulder strap and top grab handle

PRODUCT OVERVIEW



Front view of the Case Logic Viso DSLR/Mirrorless Camera Case in black, showcasing its compact design and textured fabric.



Angled front view of the camera case, highlighting the zippered front pocket and the Case Logic logo.



Back view of the camera case with the shoulder strap attached, showing the strap's connection points.



Top-down view of the open camera case, with a DSLR/mirrorless camera and lens placed inside, demonstrating the main compartment's capacity.



Bottom view of the camera case, highlighting the molded EVA base designed for stability and water resistance.



Interior view of the open camera case, showing the soft lining and the adjustable divider for organizing gear.



Side view of the camera case, illustrating the detachable shoulder strap and the top grab handle.



Close-up of the front zippered pocket, revealing an internal mesh pocket suitable for small accessories like batteries or memory cards.



Diagram showing the dimensions of the camera case: 6.3 inches (width), 5.1 inches (depth), and 7.9 inches (height).

SETUP

The Case Logic Viso camera case is designed for immediate use. Simply adjust the detachable shoulder strap to your preferred length for comfortable carrying. The interior divider can be repositioned using its hook-and-loop fasteners to customize compartments for your camera and accessories.

OPERATING THE CASE

To access your camera, unzip the main compartment. The wide opening allows for quick and easy retrieval. Utilize the interior divider to secure your camera and prevent it from shifting during transport. Store smaller items like extra batteries, memory cards, or lens caps in the zippered front pocket or the side slip pockets for easy access.

Your browser does not support the video tag.

This video demonstrates the practical features of the Case Logic Viso camera case, including its various compartments and how to adjust the strap. It highlights the bag's suitability for daily use and its protective qualities for camera gear.

MAINTENANCE

To clean the exterior of the case, wipe with a damp cloth and mild soap. For the interior, use a soft, dry brush or a lint roller to remove dust and debris. Do not machine wash or tumble dry. Ensure the case is completely dry before

storing your camera equipment.

The water-resistant EVA base can be wiped clean with a damp cloth to remove dirt or moisture, helping to maintain its protective properties.

TROUBLESHOOTING

- Issue:** Camera does not fit comfortably.
- Solution:** Adjust the interior divider. The hook-and-loop fasteners allow for flexible configuration to accommodate different camera and lens sizes. If your camera is significantly larger than a compact DSLR or mirrorless with a zoom lens, this case may not be suitable.
- Issue:** Strap detaches unexpectedly.
- Solution:** Ensure the strap's clips are securely fastened to the D-rings on the case. Periodically check the clips for wear and tear.

SPECIFICATIONS

Feature	Detail
Product Dimensions	6.3 x 5.1 x 7.9 inches
Item Weight	9.4 ounces
ASIN	B08K2DCSY3
Item Model Number	3204531
Manufacturer	Case Logic
Date First Available	September 24, 2020

WARRANTY AND SUPPORT

For warranty information and customer support, please visit the official Case Logic website or contact their customer service department. Keep your proof of purchase for any warranty claims.

You can also visit the [Case Logic Store on Amazon](#) for more product information and support resources.

© 2024 Case Logic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08K2DCSY3>

More documents and user manuals: <https://manuals.plus/>