

KOHLER K-30182

KOHLER K-30182-ST Cairn Kitchen Sink Rack User Manual

INTRODUCTION

This manual provides essential instructions for the proper setup, use, and maintenance of your KOHLER K-30182-ST Cairn Kitchen Sink Rack. Designed to protect your sink and dishes, this stainless steel rack offers durability and convenience. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.

PRODUCT OVERVIEW

The KOHLER K-30182-ST Cairn Kitchen Sink Rack is designed to fit specific KOHLER Cairn sinks, providing a protective layer and an elevated surface for drying dishes or preparing food. Key features include:

- **Durable Construction:** Made from high-quality stainless steel for long-lasting use.
- **Sink and Dish Protection:** Elevates dishes and cookware, preventing scratches and damage to your sink basin.
- **Protective Rubber Feet:** Equipped with rubber feet to prevent slipping and further protect your sink's surface.
- **Compatibility:** Specifically designed to coordinate with products from the KOHLER Cairn line.

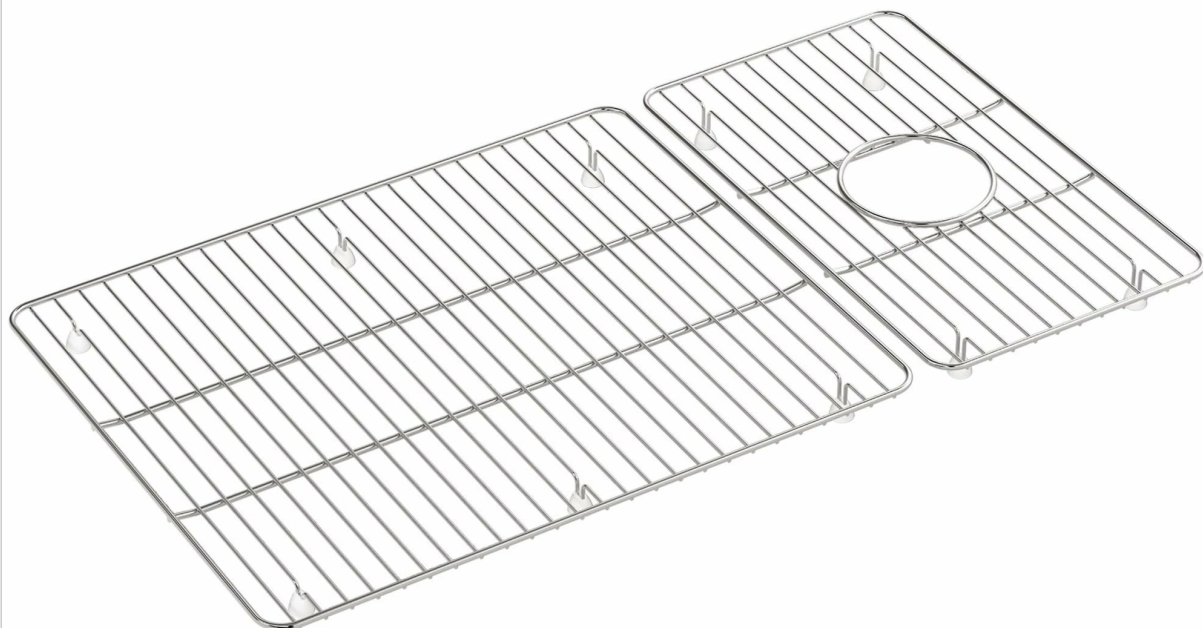


Image 1: The KOHLER K-30182-ST Cairn Kitchen Sink Rack. This image shows the stainless steel construction and the grid design of the rack, designed to fit within a kitchen sink.

SETUP AND PLACEMENT

The KOHLER K-30182-ST Cairn Kitchen Sink Rack requires minimal setup. Follow these steps for proper placement:

1. **Unpack:** Carefully remove the sink rack from its packaging.
2. **Inspect:** Check the rack for any signs of damage during transit.
3. **Position:** Place the sink rack directly into the bottom of your compatible KOHLER Cairn kitchen sink. Ensure the rubber feet are resting securely on the sink surface.
4. **Verify Fit:** Confirm that the rack sits flat and stable within the sink basin. It should not rock or slide excessively.

No tools or additional assembly are required for this product.

OPERATING INSTRUCTIONS

The sink rack is designed for everyday use to enhance your kitchen experience:

- **Dish Protection:** Place dishes, pots, and pans on the rack to prevent them from directly contacting the sink bottom, reducing scratches and noise.
- **Drying Surface:** Utilize the rack as an elevated surface for air-drying washed items.
- **Food Preparation:** Use it as a stable surface for rinsing vegetables or draining pasta, keeping food elevated from the sink basin.
- **Hot Items:** The stainless steel construction can withstand hot items, but avoid placing extremely hot cookware directly from a stovetop or oven without allowing it to cool slightly, as extreme temperature changes can affect any material over time.

MAINTENANCE AND CARE

To maintain the appearance and functionality of your KOHLER K-30182-ST Cairn Kitchen Sink Rack, follow these care instructions:

- **Regular Cleaning:** Clean the rack regularly with warm water and a mild dish soap.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or steel wool, as these can scratch the stainless steel finish.
- **Rinse Thoroughly:** After cleaning, rinse the rack thoroughly to remove all soap residue.
- **Dry:** For best results and to prevent water spots, dry the rack with a soft cloth immediately after cleaning.
- **Rubber Feet Care:** Periodically check the rubber feet for wear and tear. Ensure they are clean and free of debris to maintain their protective function.

TROUBLESHOOTING

If you encounter any issues with your sink rack, consider the following:

- **Rack is not stable:** Ensure the rack is placed correctly in the sink basin and that all rubber feet are making contact with the sink surface. Check for any debris under the feet.
- **Water spots or streaks:** This is common with stainless steel. Ensure you dry the rack thoroughly after each use or cleaning. For stubborn spots, a stainless steel cleaner can be used, followed by a thorough rinse and dry.
- **Rust-like discoloration:** While stainless steel is highly resistant to rust, prolonged exposure to certain chemicals or metallic particles (e.g., from cast iron pots) can cause surface discoloration. Clean immediately with a non-abrasive stainless steel cleaner. Avoid leaving acidic foods or harsh chemicals on the rack for extended periods.

SPECIFICATIONS

Model:	K-30182-ST
Material:	Durable stainless steel construction
Color:	Stainless Steel
Product Dimensions:	22.69"D x 15.88"W x 2.63"H
Special Feature:	Lightweight, Protective Rubber Feet

Finish Type:

Stainless

WARRANTY INFORMATION

This KOHLER K-30182-ST Cairn Kitchen Sink Rack is covered under KOHLER's limited lifetime warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the official KOHLER warranty documentation provided with your product or visit the official KOHLER website.

SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact KOHLER customer service. You can find contact information on the official KOHLER website or through the documentation included with your purchase.

Website: www.kohler.com