

Samsung Galaxy Tab S7+ (Wifi)

SAMSUNG Galaxy Tab S7+ Wi-Fi Instruction Manual

Model: Galaxy Tab S7+ (Wifi) SM-T970NZKAXAR

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your SAMSUNG Galaxy Tab S7+ Wi-Fi tablet. This device is a renewed product, professionally inspected and tested to function like new, offering a premium tablet experience with a 12.4-inch Super AMOLED display and S Pen support.

SETUP

1. Charging the Device

Connect the provided USB-C cable to the tablet's charging port and a compatible power adapter. The device supports up to 45W fast charging for quicker power-ups. Ensure the tablet is adequately charged before initial use.



Figure 1: Front view of the Galaxy Tab S7+ with S Pen attached.

2. Powering On/Off

- To power on: Press and hold the Power button until the Samsung logo appears.
- To power off: Press and hold the Power button, then select "Power off" from the options.

3. Initial Setup and Wi-Fi Connection

Follow the on-screen prompts to complete the initial setup. This includes selecting your language, connecting to a Wi-Fi network (this is a Wi-Fi only model), and signing in with your Samsung or Google account.

4. S Pen Attachment and Charging

The S Pen magnetically attaches to the back of the tablet, near the camera module, for storage and charging. Ensure it is securely attached to maintain charge and functionality.



Figure 2: Back view of the Galaxy Tab S7+ showing S Pen magnetic attachment.

5. Fingerprint Scanner Setup

The tablet features an under-display fingerprint scanner for secure unlocking. Navigate to **Settings > Biometrics and security > Fingerprints** to register your fingerprints.

OPERATING INSTRUCTIONS

1. Display Features

Your Galaxy Tab S7+ features a vibrant 12.4-inch Super AMOLED display with a 2800 x 1752 (WQXGA+) resolution and a 120Hz refresh rate for smooth visuals. This display is ideal for media consumption, browsing, and productivity tasks.

Entertainment, upgraded.

Experience cinematic viewing in your hands with the 12.4" Tab S7+. With an edge-to-edge display and sAMOLED™ screen, colors are more vibrant and graphics are more immersive—perfect for enjoying movies, playing games and making video calls. Quad speakers tuned by AKG® supply Dolby Atmos surround sound and elevate audio to new heights.



Figure 3: The tablet's Super AMOLED display showcasing vibrant colors.

2. Navigation and User Interface

The tablet runs on Android 10 (upgradable to Android 11 with One UI 3.1). Navigate using gestures or the traditional navigation bar. The taskbar at the bottom allows for quick switching between apps, enhancing multitasking efficiency.

3. Using the S Pen

The included S Pen offers precise input for drawing, note-taking, and navigating the UI. It features low latency for a natural writing experience. Air actions allow for remote control of certain functions by pressing the S Pen button.

Redesigned S Pen included.

Boost your productivity with the redesigned S Pen, now with lower 9ms latency. Use it as a remote control to skip slides, play videos or take pictures with the press of a button. Always charged and attached to your tablet, with a grip designed to enhance comfort for extended use, this best-in-class, intelligent tool acts as an extension of your own hand.

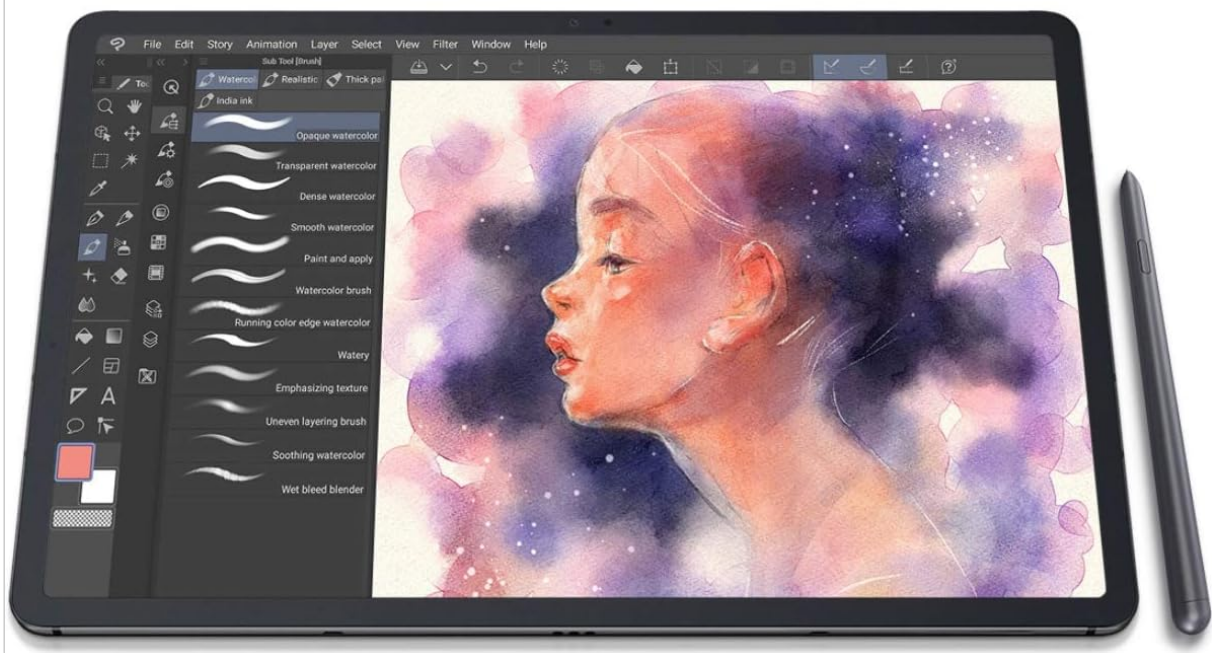


Figure 4: S Pen in use for creative tasks on the tablet.

4. Multitasking with Samsung DeX

Transform your tablet into a desktop-like experience with Samsung DeX. Connect an external keyboard and mouse (sold separately) for enhanced productivity. DeX allows you to open multiple apps in resizable windows, similar to a PC environment.

Your browser does not support the video tag.

Video 1: Demonstrating multitasking and DeX mode on the Galaxy Tab S7+ with an external keyboard. This video shows the tablet being used for productivity, including typing on a keyboard and using split-screen for notes and video playback.

5. Media Consumption and Audio

Enjoy movies, music, and games with the tablet's immersive display and quad speakers tuned by AKG with Dolby Atmos. The audio experience is rich and clear, enhancing your entertainment.

6. Gaming

The Qualcomm SM8250 Snapdragon 865+ Octa-core processor and Adreno 650 GPU provide robust performance for gaming. Connect a Bluetooth controller for an optimized gaming experience on the large screen.

Your browser does not support the video tag.

Video 2: A review highlighting the gaming capabilities of the Galaxy Tab S7+. The video shows gameplay footage and discusses the tablet's performance for various games.

7. Cameras

The tablet features a dual rear camera setup (13MP + 5MP) and an 8MP front camera. It supports up to 4K video recording. These cameras are suitable for video calls, scanning documents, and casual photography.

MAINTENANCE

1. Battery Care

The 10090mAh battery provides approximately 16 hours of average use. To prolong battery life, avoid extreme temperatures and fully discharging the device regularly. Use the original or certified charging accessories.

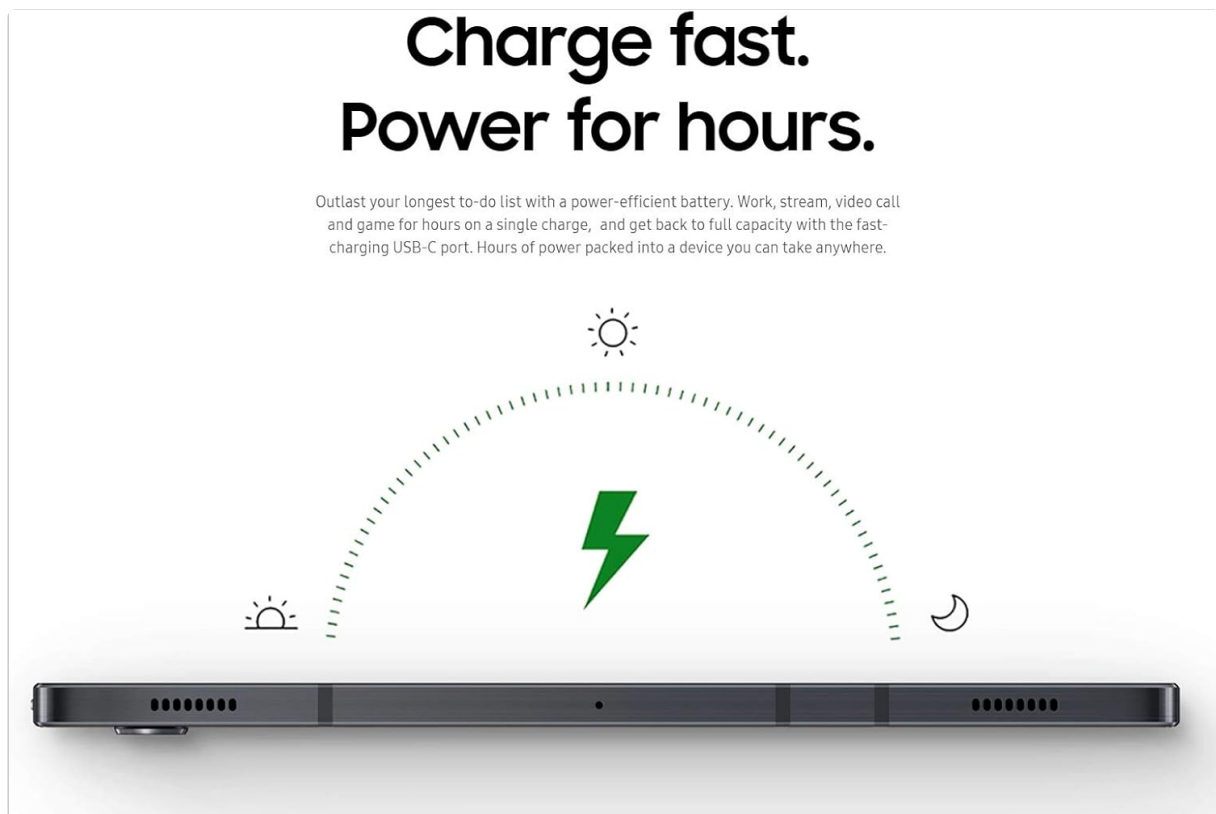


Figure 5: The tablet displaying its charging status.

2. Software Updates

Keep your tablet's software updated to ensure optimal performance and security. Updates are typically delivered over Wi-Fi. Check for updates in **Settings > Software update**.

3. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive materials or harsh chemicals that could damage the finish.

TROUBLESHOOTING

1. General Performance Issues

- If the device is slow or unresponsive, try restarting it.
- For persistent issues, consider a factory reset (**Settings > General management > Reset > Factory**

data reset). Back up your data before resetting.

2. S Pen Malfunction

If your S Pen is not responding correctly, ensure it is properly attached to the charging area on the back of the tablet. If issues persist, check the S Pen tip for wear and consider replacing it if necessary.

3. Wi-Fi Connectivity Problems

As this is a Wi-Fi only model, ensure your Wi-Fi network is active and the tablet is within range. Try restarting your router or forgetting and re-connecting to the network in **Settings > Connections > Wi-Fi**.

SPECIFICATIONS

Feature	Detail
Model Name	Galaxy Tab S7+ (Wifi) SM-T970NZKAXAR
Display Size	12.4 Inches Super AMOLED
Screen Resolution	2800 x 1752 Pixels (WQXGA+)
Processor	Qualcomm SM8250 Snapdragon 865+ (Octa-core, 2.42 GHz)
RAM	6 GB
Internal Storage	128 GB (expandable up to 1TB via microSD)
Graphics Coprocessor	Adreno 650
Operating System	Android 10 (upgradable to Android 11, One UI 3.1)
Battery Capacity	10090mAh (Average Battery Life: 16 Hours)
Rear Camera	13MP + 5MP
Front Camera	8MP
Wireless Connectivity	802.11a/b/g/n/ac, Bluetooth (Wi-Fi Only Model)
Dimensions (LxWxH)	11.2 x 7.28 x 0.22 inches
Item Weight	1.27 pounds
Color	Mystic Black

WARRANTY AND SUPPORT

This is an Amazon Renewed product. Renewed products are eligible for replacement or refund under the Amazon Renewed Guarantee if you are not satisfied with your purchase. The return policy offers a 90-day duration for refund or replacement.

For further assistance, please refer to the Amazon Renewed support page or contact the seller directly.