

Manuals.plus /
› iClever /
› iClever Cat Ear Kids Bluetooth Headphones User Manual

iClever BTH13

iClever Cat Ear Kids Bluetooth Headphones User Manual

Model: BTH13

PRODUCT OVERVIEW

The iClever BTH13 Cat Ear Kids Bluetooth Headphones are designed for children aged 1-15, offering a fun and safe listening experience. Key features include kid-safe volume limiting, colorful RGB LED lights, Bluetooth 5.2 connectivity, a built-in microphone, and long playtime.



Main product view of the iClever BTH13 headphones, featuring light purple and pink accents with illuminated cat ears.



Detailed view of the headphone controls, including volume buttons, power switch, USB-C charging port, 3.5mm audio port, and microphone.

SETUP

1. Charging the Headphones

Before first use, fully charge the headphones. Use the provided USB-C charging cable. The LED indicator light will show charging status.

- Connect the USB-C end of the cable to the headphone's charging port.
- Connect the USB-A end to a compatible USB power source (e.g., computer, wall adapter).
- A full charge provides up to 50 hours of listening time with RGB lights off, or 15 hours with lights on.

NEVER STOP PLAYING

Large-capacity battery allows you to always enjoy the wonderful experience.



Wired Mode



Bluetooth Mode

RGB Lights Off **50 Hours** Playtime
RGB Lights On **15 Hours** Playtime

Visual representation of the headphone's battery life, highlighting 50 hours of playtime with lights off and 15 hours with lights on.

2. Powering On/Off

Press and hold the Power button (ON/OFF) located on the ear cup until the LED indicator light illuminates.

3. Bluetooth Pairing (Wireless Mode)

Ensure the headphones are powered on and in pairing mode (LED indicator may flash). On your device (smartphone, tablet, PC):

1. Go to Bluetooth settings.
2. Search for "iClever BTH13" or similar.
3. Select the headphones to pair. A successful connection will be indicated by a steady LED light.

Your browser does not support the video tag.

Official product video demonstrating the features of the iClever BTH13 Cat Ear Kids Bluetooth Headphones, including connectivity and design elements.

4. Wired Connection (Optional)

If the battery is low or for devices without Bluetooth, use the provided 3.5mm audio cable.

- Plug one end of the 3.5mm audio cable into the headphone's audio port.
- Plug the other end into your device's 3.5mm audio jack.

OPERATING INSTRUCTIONS

1. Volume Control and Limiting

The headphones feature a kid-safe volume limiter with three levels: 74dB (Toddler Mode), 85dB (Study Mode), and 94dB (Travel Mode).

- To adjust volume: Use the 'Volume +' and 'Volume -' buttons on the ear cup.
- To switch volume limiting modes: Press the 'Volume +' and 'Volume -' buttons simultaneously. The mode will not change accidentally during normal use.



74 dBA 85
SAFE VOLUME

2 Volume Limit Levels

**SAFE VOLUME
PROTECT
KIDS HEARING**

StudyMode:
74dBA

Travel Mode:
85dBA

Image illustrating the safe volume feature, showing different decibel limits for various activities like studying and traveling.

2. LED Light Control

The colorful RGB LED lights on the cat ears and ear cups can be controlled independently.

- Press the dedicated 'Light Mode Button' (often a small button near the main controls) to cycle through light modes or turn them off. Turning off the lights extends battery life.

LIGHTS AND MUSIC

Revolving light makes music and learning more interesting. Built-in 40mm speaker unit, which provides rich bass and lifelike audio.

Close-up view of the headphones highlighting the revolving RGB LED lights on the ear cups and the illuminated cat ears.

3. Playback Controls

- Play/Pause: Press the 'Play/Pause' button.
- Next Track: Press and hold the 'Volume +' button.
- Previous Track: Press and hold the 'Volume -' button.

4. Microphone Usage

The built-in microphone allows for clear phone calls and online learning interactions.

HIGH-PERFORMANCE STERO MICROPHONE



**Say goodbye to fuzzy microphones
and share the fun with
your friends.**

Image showing a child comfortably using the headphones, emphasizing the high-performance stereo microphone for communication.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or immerse in water.
- **Storage:** When not in use, store the headphones in a cool, dry place. The foldable design allows for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge regularly, even if not used often.



WEAR MORE COMFORTABLE



Adjustable
Headband



Over Ear
Soft Pad



Memory-protein
Ear Pads



Foldable
Design

Visual guide to the comfortable and foldable design, illustrating the adjustable headband, soft ear pads, and compact folding mechanism for easy storage and travel.

TROUBLESHOOTING

Problem	Solution
Headphones not turning on.	Ensure the headphones are charged. Connect to a power source and check the LED indicator.
Cannot pair via Bluetooth.	Make sure Bluetooth is enabled on your device. Ensure headphones are in pairing mode. Forget previous pairings on your device and try again. Move closer to the device.
No sound or low volume.	Check headphone and device volume levels. Ensure headphones are properly paired or the audio cable is fully inserted. Check the volume limiting setting.
LED lights not working.	Press the 'Light Mode Button' to activate or cycle through modes. Ensure headphones are charged.

SPECIFICATIONS

- Model Name:** Meow Macaron (BTH13)
- Brand:** iClever
- Connectivity:** Bluetooth 5.2 (Wireless), 3.5mm Jack (Wired)
- Battery Life:** Up to 50 hours (lights off), 15 hours (lights on)
- Volume Limiting:** 74dB, 85dB, 94dB)
- Driver Size:** 40 Millimeters Dynamic Driver
- Frequency Range:** 20 Hz - 20,000 Hz
- Impedance:** 32 Ohm
- Noise Control:** Sound Isolation
- Material:** Leather, Acrylonitrile Butadiene Styrene (ABS)
- Item Weight:** 173 Grams (6.1 ounces)
- Product Dimensions:** 6.1 x 2.64 x 7.09 inches
- Included Components:** Headphones, USB C Charging Cable, Aux 3.5mm Audio Cable, User Manual
- Age Range:** 1-15 Years Old

WARRANTY AND SUPPORT

iClever offers a generous warranty for their products. For specific warranty details, product support, or to address any issues with your headphones, please refer to the official iClever website or contact their customer service directly.

Contact information can typically be found in the packaging or on the manufacturer's website:[Visit the iClever Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question